XR-6600RDS/6700RDS

SERVICE MANUAL

AEP Model
UK Model

Photo : XR-6700RDS

Model Name Using Similar Mechanism	XR-C200MK2
Tape Transport Mechanism Type	MG-50EX2-39

SPECIFICATIONS

Cassette player section

Tape track	4-track 2-channel stereo
Wow and flutter	0.08 % (WRMS)
Frequency response	30 – 18,000 Hz
Signal-to- noise ratio	
XR-6600RDS :	58dB
XR-6700RDS :	

Cassette type	Dolby NR off	Dolby B NR
TYPE II, IV	61 dB	67 dB
TYPE I	58 dB	64 dB

Tuner section

FM

Tuning range	87.5 – 108.0 MHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz
Usable sensitivity	8 dBf
Selectivity . .	75 dB at 400 kHz
Signal-to-noise ratio	65 dB (stereo), 68 dB (mono)
Harmonic distortion at 1 kHz	0.5 % (stereo), 0.3 % (mono)
Separation	35 dB at 1 kHz
Frequency response	30 – 15,000 Hz
Capture ratio	2 dB

MW/LW

Tuning range	MW: 531 – 1,602 kHz LW: 153 – 281 kHz
Antenna terminal	External antenna connector
Intermediate frequency	10.71 MHz/450 kHz
Sensitivity	MW: 30 µV LW: 50 µV

Power amplifier section

Outputs	Speaker outputs (sure seal connectors)
Speaker impedance	4 – 8 ohms
Maximum power output	XR-6700RDS : 30 W × 4 (at 4 ohms) XR-6600RDS : 25 W × 4 (at 4 ohms)

General

Outputs (XR-6700RDS)	Line output terminal Power amplifier control lead
Tone controls	Bass ±8 dB at 100 Hz Treble ±8 dB at 10 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 188 × 58 × 177 mm (w/h/d)
Mounting dimension	Approx. 182 × 53 × 155 mm (w/h/d)
Mass	Approx. 1.2 kg
Supplied accessories	Parts for installation and connections (1 set) Front panel case (1)

Design and specifications are subject to change without notice.

FM/MW/LW CASSETTE CAR STEREO

SONY®

TABLE OF CONTENTS

SEE ADDITIONAL INFORMATION

Section	Title	Page
1.	**GENERAL**	
	Location of Controls	3
	Setting the Clock	3
	Cassette Player Operation	3
	Radio Reception	4
	RDS Functions	5
	Other Functions	7
	Connections	8
2.	**DISSASSEMBLY**	
2-1.	Sub Panel Assy	10
2-2.	Amplifier Board	10
2-3.	Mechanism Deck Block	11
2-4.	Main Board	11
2-5.	Key Board	12
3.	**ASSEMBLY OF MECHANISM DECK**	
3-1.	Installing the Loading Gears	13
3-2.	Installing the Reel Bracket	13
3-3.	Installing the Mode Lever and Pinch Levers	14
3-4.	Installing the Cassette Housing	15
3-5.	Installing the Loading Lever	15
3-6.	Positioning the Loading Levers	16
3-7.	Installing the Gear (Loading F)	16
4.	**MECHANICAL ADJUSTMENTS**	17
5.	**ELECTRICAL ADJUSTMENTS**	
	Deck Section	17
	Tuner Section	18
6.	**DIAGRAMS**	
6-1.	IC Pin Description	22
6-2.	Printed Wiring Boards—Main Section—	24
6-3.	Schematic Diagram—Main Section—	27
6-4.	Schematic Diagram—Amplifier Section—	31
6-5.	Schematic Diagram—Panel Section—	33
6-6.	Printed Wiring Board—Panel Section—	35
7.	**EXPLODED VIEWS**	
7-1.	Chassis Section	40
7-2.	Front Panel Section	41
7-3.	Mechanism Deck Section	42
8.	**ELECTRICAL PARTS LIST**	43

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol ◻◻ are trademarks of Dolby Laboratories Licensing Corporation.

Location of Controls

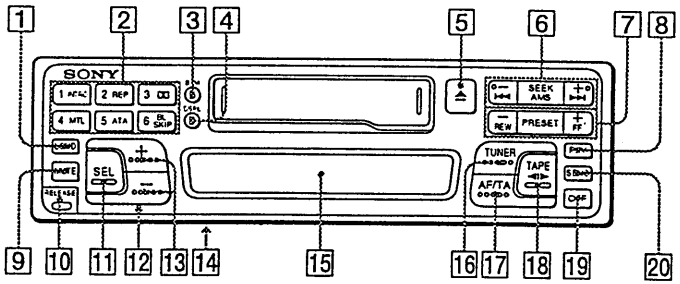

Refer to the pages in ● for further details.

1 LOUD (loudness) button ⑫

2 During radio reception:
Preset number buttons ❽

During tape playback:

1 INTRO INTRO button ❻

2 REP REPEAT button ❻

3 DD DD (Dolby B NR) button ❻

4 MTL MTL (Cassette type select) button ❻

5 ATA ATA (Automatic Tuner Activation) button ❻

6 BL.SKIP BL.SKIP button ❻

3 BTM (Best Tuning Memory) button ❽⓫

4 DSPL (display mode change/time set) button ❺❼❾

5 ⏏ (eject) button ❺⑫

6 SEEK/AMS button ❻❼⓫

7 PRESET button ❻❽

8 PTY (programme type) button ⓫

9 MUTE button ⑫

10 RELEASE (front panel release) button ❹⑬

11 SEL (control mode select) button ❺⑩⑫⑬

12 Reset button (located on the front side of the unit hidden by the front panel) ❹
Press this button when you use this unit for the first time, when you have changed the car battery, or when the buttons of this unit do not function properly.

13 (volume/bass/treble/balance/fader control) button ❺⑫

14 POWER SELECT switch (located on the bottom of the unit)
See "POWER SELECT Switch" in the installation/connections manual.

15 Display window

16 TUNER (radio on/band select) button ❺❼❽

17 AF/TA (alternative frequency/traffic announcement) button ❾⑩⓫

18 TAPE/◄II► (playback/transport direction change) button ❺

19 OFF button ❹❺⑫

20 SENS (sensitivity adjust) button ❼

Setting the Clock

The clock has a 24-hour digital indication.

For example, setting it to 10:08

1 Display the time.
(Press the DISP ⓓ button during the unit operation.)

2 Press the DISP ⓓ button for more than two seconds.



The hour digit blinks.

Set the hour digits.



to go forward

to go back

3 Press the SEL button momentarily.



The minute digit blinks.

Set the minute digits.



to go forward

to go back



4 Press the DISP ⓓ button momentarily.



The clock activates.

Note
If the POWER SELECT switch on the bottom of the unit is set to the ❽ position, the clock cannot be set unless the power is turned on. Set the clock after you have turned on the radio, or started cassette playback.

EN

Cassette Player Operation

Listening to Tape Playback

After inserting the cassette, playback will start automatically.



If a cassette is already inserted, press the TAPE button to start playback.
If you press during playback, the tape transport direction will change.

Indication of Tape Transport Direction



The side facing up is being played.



The side facing down is being played.

To stop playback,

eject the cassette by pressing the ⏏ button or press the OFF button.
Playback stops also when you select radio by pressing the TUNER button.

Changing the Displayed Items

Each time you press the DISP ⓓ button, the displayed items change as follows:

Tape → Time → Frequency (activate the ATA function) →

Ejecting the Cassette

Press the ⏏ button.

EN

This section is extracted from XR-6700RDS's instruction manual.

Fast-winding the Tape



Rewind Fast-forward

To start playback during rewinding or fast-forwarding, press the TAPE button.

Playing a Tape Recorded in the Dolby B NR System

Press the 3 button when you want to listen to a tape recorded in the Dolby B NR system. → "DO" appears in the display.
To cancel, press again.

Playing a CrO_2 or Metal Tape

Press the 4 MTL button when you want to listen to a CrO_2 (TYPE II) or metal (TYPE IV) tape. → "MTL" will appear on the display.
To cancel, press again.

Locating the Beginnings of the Tracks

— AMS (Automatic Music Sensor) Function

During playback, press either side of the SEEK/AMS button the number of times you wish to skip the tracks.



To locate the previous tracks To locate the succeeding tracks

Up to nine tracks can be skipped.

If the blanks between the tracks are shorter than four seconds, or if there are noises, the AMS function will not work. Also, the unit may read long sections of low volume music or quiet sections on a track as blanks between tracks.

Searching the Desired Track — Intro Scan Function

Press the 1 INTRO button during playback. → "INTRO" appears on the display.
The first 10 seconds of all the tracks are played. When you find the desired track, press the button once more. The unit returns to the normal playback mode.

Playing Tracks Repeatedly

— Repeat Play Function

Press the 2 REP button during playback. → "REP" appears on the display.
When the currently played track is over, it will be played again from the beginning.
To cancel this mode, press the button again.

Radio Reception during Fast-forwarding or Rewinding of a Tape

— ATA (Automatic Tuner Activation) Function

Press the 5 ATA button during playback. → "ATA" appears on the display.
When fast-forwarding or rewinding with the REW PRESET FF button, the tuner will turn on automatically.

Skipping Blanks Automatically during Tape Playback — Blank Skip Function

Press the 6 BL SKIP button during playback. → "BL.SKIP" appears on the display.
Blanks longer than eight seconds will be automatically skipped during tape playback.

Radio Reception

Searching for the Stations Automatically

— Automatic Tuning

1 Select the desired band.

FM1 → FM2 → FM3 → MW → LW → FM1 → ···

2 Press either side of the SEEK/AMS button to search for the station (automatic tuning).

For lower frequencies For higher frequencies

The scanning stops when a station is received. Press either side of the button repeatedly until the desired station is received.

When an FM stereo program with a sufficient signal strength is tuned in,



the "ST" indication will appear.

To avoid the automatic tuning from stopping on stations too frequently (local seek mode), press the SENS button momentarily to get the "LCL" indication.
Only the stations with relatively strong signals can be tuned in. The local seek mode functions only when the automatic tuning is in operation.

Changing the Display Items

Each time you press the DSPL button, the displayed items between frequency and time.

If FM Stereo Reception is Poor — Monaural Mode

Press the SENS button momentarily. → "MONO" appears on the display.
The sound will improve, but it will become monaural.

Tuning in by Adjusting the Frequency — Manual Tuning

1 Select the desired band.

2 Press and hold either side of the SEEK/AMS button.
Release the button when the desired station is received.

For lower frequencies For higher frequencies

PREVENTING ACCIDENTS!
When tuning in during driving, use the automatic tuning and the memory preset search function (page 8) instead of the manual tuning.

Memorizing Stations Automatically

— BTM (Best Tuning Memory) Function

This function selects from the currently received band the stations with the strongest signals and memorizes them in order of their frequency.

1 Select the desired band.

continue to next page →

2 Press the BTM (6) button for more than two seconds.
- When there is no preset number indicated on the display window, stations will be stored on all preset number buttons on the currently selected band.
- When there is a preset number indicated on the display window, the unit will store stations on all preset number buttons from the one currently displayed.

For example, when you select FM2 and preset number 3 is displayed,
the operation will start from preset number 3 on FM2, and will stop at preset number 6 on FM3.

Memorizing Only the Desired Stations

1 Select the desired band.

2 Tune in the station which you wish to store on the preset number button.

3 Keep the desired preset number button ([1 INTRO] to [6 BL SKIP]) pressed for about two seconds until you hear a beep tone.

The number of the pressed preset number button appears on the display window.

Up to 6 stations on each band (FM1, FM2, FM3, MW and LW) can be stored on the preset number buttons in order of your choice. Therefore, 18 stations can be memorized on FM.
If you try to store another station on the same preset number button, the previously stored station will be erased.

Receiving the Memorized Stations

1 Select the desired band.

2 Press momentarily the preset number ([1 INTRO] to [6 BL SKIP]) button on which the desired station is stored.

Note
If you press the preset number button for more than two seconds, the currently received station will be memorized again. To receive the previously memorized station, make sure that the preset number button is pressed only momentarily.

Press either side of the PRESET button momentarily to receive in order the stations stored in the memory (Preset Search Function).



Press momentarily
1 → 2 → ··· → 5 → 6 → 1 → ···



Press momentarily
1 → 6 → 5 → ··· → 2 → 1 → ···

RDS Functions

Overview of the RDS Function

Radio Data System (RDS) is a broadcasting service that allows FM stations to send additional digital information along with the regular radio programme signal. Your car stereo offers you a variety of services. Here are just a few: Re-tuning the same programme automatically, Listening to traffic announcements and Locating a station by programme type.

Notes
- *Depending on the country or region, not all of the RDS functions are available.*
- *RDS may not work properly if the signal strength is weak or if the station you are tuned in is not transmitting RDS data.*

Displaying the Station Name

The name of the station currently received lights up in the display.

Select an FM station.
When you tune in an FM station that transmits RDS data, the station name lights up in the display.



Note
The "" indication means that an RDS station is being received.*

Changing the Displayed Items

Each time you press the DSPL (0) button, the displayed items change as follows:

→ Frequency → Time → Station Name →

Note
"NO NAME" lights up if the station received does not transmit RDS data.

Re-tuning the Same Programme Automatically

— Alternative Frequencies (AF)

The Alternative Frequencies (AF) function automatically selects and re-tunes the station with the strongest signal in a network. By using this function, you can continuously listen to the same programme during a long-distance drive without having to re-tune the station manually.

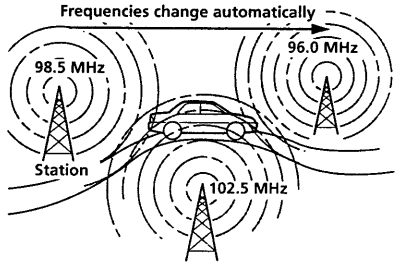

1 Select an FM station.

2 Press the AF/TA button until "AF ON" lights up in the display.
The unit starts searching for an alternative station with a stronger signal in the same network.

Note
When there is no alternative station in the area and you don't need to search for an alternative station, turn the AF function off by pressing the AF/TA button until "AF/TA OFF" lights up.

Changing the Displayed Items

Each time you press the AF/TA button, the displayed items change as follows:

→ AF ON → TA ON → AF/TA ON* →
AF/TA OFF ←

** Select this to turn on both AF and TA functions.*

Notes
- *"NO AF" and the station name flashes alternately, if the unit cannot find an alternative station in the network.*
- *If the station service name starts flashing after you've made the preset selection, it means that no alternative frequency is available and the unit cannot receive the PI (Programme Identification) data of the memorized station. Press the SEEK/AMS button while the station service name is flashing (for about eight seconds) so the unit starts searching for a station with the same PI data, but with another frequency ("PI SEEK" lights up and no sound is heard). If the unit still cannot find an alternative station, "NO PI" lights up and the unit goes back to the original preset station.*

Listening to a Regional Programme

The "REG ON" (regional on) function of this unit lets you stay tuned to a regional programme without being switched to another regional station. (Note that you must turn the AF function on.) The unit is factory preset to "REG ON", but if you want to turn off the function, do the following.

Press the AF/TA button for more than two seconds until "REG OFF" lights up on the display.
Note that selecting "REG OFF" might cause the unit to switch to another regional station within the same network.

Note
This function does not work in the United Kingdom and in some other areas.

Local Link Function (United Kingdom only)

The Local Link function lets you select other local stations in the area, even though they are not stored in your presets.

1 Press a preset number button that has stored a local station.

2 Within five seconds, press again the preset number button of the local station.

3 Repeat this procedure until the desired local station is received.

Listening to Traffic Announcements

The Traffic Announcement (TA) and Traffic Programme (TP) data let you automatically tune in an FM station that is broadcasting traffic announcements even though you are listening to other programme sources.

Press the AF/TA button until "TA ON" or "AF/TA ON" lights up on the display.
The unit starts searching for traffic information stations. "TP" lights up in the display when the unit finds a station broadcasting traffic announcements.
When the traffic announcement starts, "TA" flashes, then flashing stops when the traffic announcement is over.

Tip
When the traffic announcement starts while you are listening to another programme source, the unit automatically switches to the announcement and goes back to the original source when the announcement is over.

Notes
- *"NO TP" flashes for five seconds if the received station doesn't broadcast traffic announcements. Then, the unit starts searching for a station that does broadcast traffic announcements.*
- *When the "EON" indication appears with "TP" in the display window, the current station makes use of broadcast traffic announcements of other stations in the same network.*

To Cancel the Current Traffic Announcement

Press the AF/TA button momentarily.
To cancel all traffic announcements, turn off the function by pressing the AF/TA button until "AF/TA OFF" lights up.

Presetting the volume of traffic announcements

You can preset the volume level of the traffic announcements beforehand so you wouldn't miss the announcement. When a traffic announcement starts, the volume will be automatically adjusted to the preset level.

1 Select the desired volume level.

2 Press the 3 button while pressing the SEL button.
A beep sounds and the setting is stored.

Receiving Emergency Announcements

If an emergency announcement comes in while you are listening to the radio, the programme will be automatically switched to the announcement. If you are listening to a source other than the radio, the emergency announcements will be heard if you set AF or TA to on. The unit will then automatically switch to these announcements no matter what you are listening to at the time.

Presetting the RDS Stations with the AF and TA Data

When you preset the RDS stations, the unit stores each station's data as well as its frequency, so you don't have to turn on the AF or TA function every time you tune in the preset station. You can select different setting (AF, TA, or both) for individual preset station or the same setting for all preset stations.

Presetting the Same Setting for all Preset Stations

1 Select an FM band.

2 Press the AF/TA button repeatedly and select either "AF ON", "TA ON" or "AF/TA ON" (for both AF and TA functions).
Note that selecting "AF/TA OFF" stores not only RDS stations, but also non-RDS FM stations.

3 Press the BTM button for more than two seconds.

Presetting different settings for each preset station

1 Select an FM band and tune in the desired station.

2 Press the AF/TA button repeatedly and select either "AF ON", "TA ON" or "AF/TA ON" (for both AF and TA functions).

3 Press the desired preset number button for two seconds until a beep sounds. Repeat from step 1 for presetting other stations.

Tip
If you want to change the preset AF and/or TA setting after you tuned in the preset station, you can do so by turning on/off the AF or TA function.

Locating a Station by Programme Type

You can locate the station you want by selecting one of the programme types shown below.

Note
If the countries or regions where EON data is not transmitted, you can use this function only for the stations you have tuned in once.

Programme types	Display
News	NEWS
Current Affairs	AFFAIRS
Information	INFO
Sport	SPORT
Education	EDUCATE
Drama	DRAMA
Culture	CULTURE
Science	SCIENCE
Varied	VARIED
Popular Music	POP M
Rock	ROCK M
Middle of the Road Music	M.O.R. M
Light Classical	LIGHT M
Classics	CLASSICS
Other Music Types	OTHER M
Not specified	NONE

Note
You cannot use this function in some countries where no PTY (Programme Type selection) data is available.

1 Press the PTY button during FM reception until "PTY" lights up in the display.



The current programme type name appears if the station is transmitting the PTY data. "- - - - -" appears if the received station is not an RDS station or if the RDS data has not been received.

2 Press the PTY button repeatedly until the desired programme type appears.
The programme types appear in the order as shown in the above table. Note that you cannot select "NONE" (Not specified) for searching.



3 Press either side of the SEEK/AMS button.
The unit starts searching for a station broadcasting the selected programme type.

continue to next page →

When the unit finds the programme, the programme type appears again for five seconds.
"NO" and the programme type appear alternately for five seconds if the unit cannot find the programme type and it returns to the previous station.

Using RDS Data for Setting the Clock Automatically

By receiving CT (Clock Time) data, the clock of this unit can be set automatically.

During FM reception, press the [2 REP] button while pressing the [SEL] button. → "CT" will be displayed, and the clock will be set.



To cancel the CT function, press these buttons again.

Notes
- *The CT function may not work even though an RDS station is being received.*
- *The time set by the CT function may not be exact.*

Other Functions

Adjusting the Sound Characteristics

1 Select the item you want to adjust by pressing the [SEL] button repeatedly.

VOL (volume) → BAS (bass) → TRE (treble) → BAL (balance) → FAD (fader) → VOL (volume) → ...

2 Adjust the selected item by pressing either the [+] or [−] button.

Adjust within three seconds after selecting. (After three seconds the button will again serve as volume control button.)

Enjoying Bass and Treble even at Low Volume

— Loudness Function

Press the [LOUD] button. → "LOUD" will appear on the display.
Bass and treble will be reinforced. To cancel, press again.

Muting the Sound Quickly

— Mute Function

Press the [MUTE] button. → The "MUTE" indication flashes.
The sound is muted at once. To restore the previous volume level, press again.

This function will be also cancelled when:
- *— the [+] or OFF button is pressed.*
- *— ejecting a cassette by pressing the ⏏ button during tape playback.*

Muting the Beep Tone

Press the [6 BL SKIP] button while pressing the [SEL] button.

To reobtain the beep tone, press these buttons again.

Changing the Illumination Colour

Press the [1 INTRO] button while pressing the [SEL] button.
You can choose the colour between amber and green.

EN

Connections

Caution

- This unit is designed for negative ground 12 V DC operation only.
- Connect the power connecting cord ⑤ to the unit and speakers before connecting it to the auxiliary power connector.
- **Run all ground wires to a common ground point.**

If Your Car has No Accessory Position on the Ignition Key Switch — POWER SELECT Switch

The illumination on the front panel is factory-set to be turned on even when the unit is not being played. However, this setting may cause some car battery wear **if your car has no accessory position on the ignition key switch.** To avoid this battery wear, **set the POWER SELECT switch located on the bottom of the unit to the ⓑ position, then press the reset button.** The illumination is reset to stay off while the unit is not being played.

Note

The caution alarm for the front panel is not activated when the POWER SELECT switch is set to the ⓑ position.

Reset Button

When the installation and connections are over, be sure to press the reset button with a ballpoint pen etc.

Note on the control leads

The power antenna control lead (blue) supplies + 12 V DC when you turn on the tuner or when you activate the ATA (Automatic Tuner Activation), AF (Alternative Frequency) or the TA (Traffic Announcement) Function.

Memory hold connection

When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition key is turned off.

Notes on speaker connection

- *Before connecting the speakers, turn the unit off.*
- *Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities. Otherwise, the speakers may be damaged.*
- *Do not connect the terminals of the speaker system to the car chassis, and do not connect the terminals of the right speaker with those of the left speaker.*
- *Do not attempt to connect the speakers in parallel.*
- *Do not connect any active speakers (with built-in amplifiers) to the speaker terminals of the unit. Doing so may damage the active speakers. Therefore, be sure to connect passive speakers to these terminals.*

Warning

If you have a power antenna without a relay box, connecting this unit with the supplied power connecting cord ⑤ may damage the antenna.

Connexions

Précautions

- Cet appareil est conçu pour fonctionner sur un courant continu de 12 V avec masse négative.
- Branchez le cordon d'alimention ⑤ sur l'appareil et les hunt-parleurs avant de le brancher sur le connecteur d'alimentation auxiliaire.
- **Rassembler tous les fils de terre en un point de masse commun.**

Si l'appareil est utilisé dans une voiture dont la clé de contact n'a pas de position accessoires — Interrupteur POWER SELECT

L'éclairage du panneau avant est réglé en usine de manière à s'allumer même quand l'appareil ne fonctionne pas. Cependant, ce réglage risque d'épuiser la batterie **si l'appareil est utilisé dans une voiture dont la clé de contact ne possède pas de position accessoires.** Pour éviter d'épuiser la batterie, régler l'interrupteur **POWER SELECT sur le socle de l'appareil sur la position ⓑ, puis appuyer sur la touche de réinitialisation.** L'éclairage est réglé pour rester éteint quand l'appareil n'est pas utilisé.

Remarque

Quand l'interrupteur POWER SELECT est réglé sur la position ⓑ, l'avertisseur du panneau avant ne fonctionne pas.

Touche de réinitialisation

Quand l'installation et les connexions sont terminées, appuyer sur la touche de réinitialisation avec un stylo bille ou un objet pointu.

Remarque sur les fils de contrôle

Le fil de contrôle (bleu) de l'antenne électrique fournit un courant continu de +12 V quand le tuner est allumé ou quand la fonction ATA (Activation automatique du tuner), AF (Fréquences alternatives) ou TA informations routières) est mise en service.

Connexion pour le maintien de la mémoire

Lorsque le fil d'entrée d'alimentation jaune est connecté, le circuit de la mémoire est alimenté en permanence même si la clé de contact est sur la position d'arrêt.

Remarques sur la connexion des haut-parleurs

- *Avant de raccorder les haut-parleurs, mettre l'appareil hors tension.*
- *Utiliser des haut-parleurs ayant une impédance de 4 à 8 ohms et une capacité adéquate sous peine de les endommager.*
- *Ne pas raccorder les bornes du système de haut-parleurs au châssis de la voiture et ne pas connecter les bornes du haut-parleur droit à celles du haut-parleur gauche.*
- *Ne pas tenter de raccorder les haut-parleurs en parallèle.*
- *Ne pas connecter d'enceintes acoustiques actives (avec amplificateurs intégrés) aux bornes d'enceintes de cet appareil pour éviter de les endommager. Veiller à raccorder des enceintes passives.*

Avertissement

Si vous disposez d'une antenne électrique sans boîtier de relais, le branchement de cet appareil au moyen du cordon d'alimentation fourni ⑤ risque d'endommager l'antenne.

Anschluß

Vorsicht

- Dieses Gerät ist ausschließlich für eine negativ geerdete 12-V-Autobatterie bestimmt.
- Verbinden Sie das Netzverbindungskabel ⑤ mit dem Gerät und den Lautsprechern, bevor Sie es mit dem Hilfsstromanshluß verbinden.
- **Schließen Sie alle Erdungskabel an einen gemeinsamen Massepunkt an.**

Wenn das Zündschloß Ihres Wagens keine Position I bzw. ACC besitzt — POWER SELECT-Schalter

Das Gerät ist werkseitig so voreingestellt, daß das Bedienfeld auch dann beleuchtet ist, wenn das Gerät nicht betrieben wird. Besitzt das Zündschloß Ihres Fahrzeugs **keine Position I bzw. ACC, so ist die Beleuchtung ständig eingeschaltet** und entzieht der Batterie Strom. Stellen Sie in einem solchen Fall **den POWER SELECT-Schalter an der Unterseite des Geräts auf Position ⓑ, und drücken Sie dann die Rücksetztaste.** Bei ausgeschaltetem Gerät ist das Bedienfeld dann nicht mehr beleuchtet.

Hinweis

Der Warnton für die Frontplatte ertönt nicht, wenn der POWER SELECT-Schalter auf Position ⓑ gestellt ist.

Rücksetztaste

Nach der Installation und dem Anschluß muß die Rücksetztaste mit einem Kugelschreiber o.ä. gedrückt werden.

Hinweis zu den Steuerleitungen

Die (blaue) Motorantennen-Steuerleitung liefert eine Gleichspannung von +12 V, wenn der Tuner eingeschaltet, die ATA-Funktion (Automatic Tuner Activation), die AF-Funktion (Alternative Frequency) oder die TA-Funktion (Traffic Announcement) aktiviert ist.

Zur Stromversorgung des Speichers

Wenn das gelbe Stromversorgungskabel angeschlossen ist, wird der Speicher stets (auch bei ausgeschalteter Zündung) mit Strom versorgt.

Hinweise zum Lautsprecheranschluß

- *Schalten Sie das Gerät aus, bevor Sie die Lautsprecher anschließen.*
- *Verwenden Sie Lautsprecher mit einer Impedanz zwischen 4 und 8 Ohm und ausreichender Belastbarkeit. Ansonsten können die Lautsprecher beschädigt werden.*
- *Verbinden Sie die Lautsprecheranschlüsse nicht mit dem Wagenchassis, und verbinden Sie auch nicht die Anschlüsse des rechten mit denen des linken Lautsprechers.*
- *Versuchen Sie nicht, Lautsprecher parallel anzuschließen.*
- *An die Lautsprecheranschlüsse dieses Geräts dürfen nur Passivlautsprecher angeschlossen werden. Schließen Sie keine Aktivlautsprecher (Lautsprecher mit eingebauten Verstärkern) an, da diese sonst beschädigt werden können.*

Warnung

Wenn Sie eine Motorantenne ohne Relaiskästchen verwenden, kann durch Anschließen dieses Geräts mit Hilfe des mitgelieferten Netzverbindungskabels ⑤ die Antenne beschädigt werden.

Collegamenti

Attenzione

- Questo apparecchio è stato progettato per l'uso solo a 12 V CC con massa negativa.
- Collegare il cavo di collegamento dell'alimentazione ⑤ all'apparecchio e agli altoparlanti prima di collegarlo al connettore di alimentazione ausiliare.
- **Portare tutti i cavi di massa a un punto di massa comune.**

Quando si usa l'apparecchio in un'auto priva di posizione accessoria per la chiavetta di accensione — Interruttore POWER SELECT

L'illuminazione del pannello anteriore è stata predisposta in fabbrica per l'attivazione anche quando non si usa l'apparecchio. Tuttavia questa regolazione può causare scaricamento della batteria dell'auto **se si usa l'apparecchio in un'auto priva di posizione accessoria per la chiavetta di accensione.** Per evitare ciò, **regolare su ⓑ l'interruttore POWER SELECT situato alla base dell'apparecchio e quindi premere il tasto di azzeramento.** L'illuminazione rimane così spenta finché l'apparecchio rimane spento.

Nota

La suoneria di avvertimento per il pannello anteriore non si attiva quando l'interruttore POWER SELECT è in posizione ⓑ.

Pulsante di azzeramento

Dopo avere terminato l'installazione e i collegamenti, assicurarsi di premere il pulsante di azzeramento con la punta di una penna a sfera ecc.

Nota sui cavidi collegamento

Il cavo di controllo antenna automatica (blu) fornisce +12 V CC quando si accende il sintonizzatore o quando si attiva la funzione ATA (attivazione automatica sintonizzatore), la funzione AF (frequenza alternativa) o TA (notiziari sul traffico).

Collegamento per la conservazione della memoria

Quando il cavo di ingresso alimentazione giallo è collegato, viene sempre fornita alimentazione al circuito di memoria anche quando la chiavetta di accensione è spenta.

Note sul collegamento dei diffusori

- *Prima di collegare i diffusori spegnere l'apparecchio.*
- *Usare diffusori di impedenza compresa tra 4 e 8 ohm e con capacità di potenza adeguata, altrimenti i diffusori possono essere danneggiati.*
- *Non collegare i terminali del sistema diffusori al telaio dell'auto e non collegare i terminali del diffusore destro a quelli del diffusore sinistro.*
- *Non collegare i diffusori in parallelo.*
- *Non collegare alcun diffusore attivo (con amplificatore incorporato) ai terminali diffusori dell'apparecchio perché questo può danneggiare i diffusori attivi. Assicurarsi di collegare diffusori passivi a questi terminali.*

Avvertenza

Se l'antenna che collega l'apparecchio al cavo di alimentazione in dotazione ⑤ non ha la scatola di relè l'antenna, si può danneggiare.

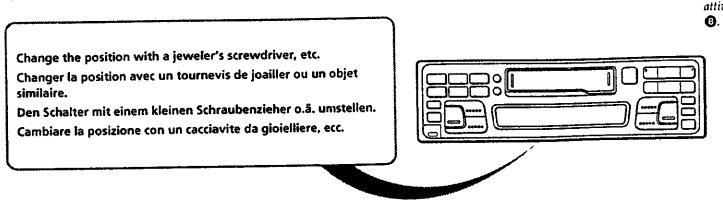
Change the position with a jeweler's screwdriver, etc.
Changer la position avec un tournevis de joaillier ou un objet similaire.
Den Schalter mit einem kleinen Schraubenzieher o.ä. umstellen.
Cambiare la posizione con un cacciavite da gioielliere, ecc.



Connections of Example — Connexions de l'exemple — Anschlußbeispiel — Esempi di Collegamento

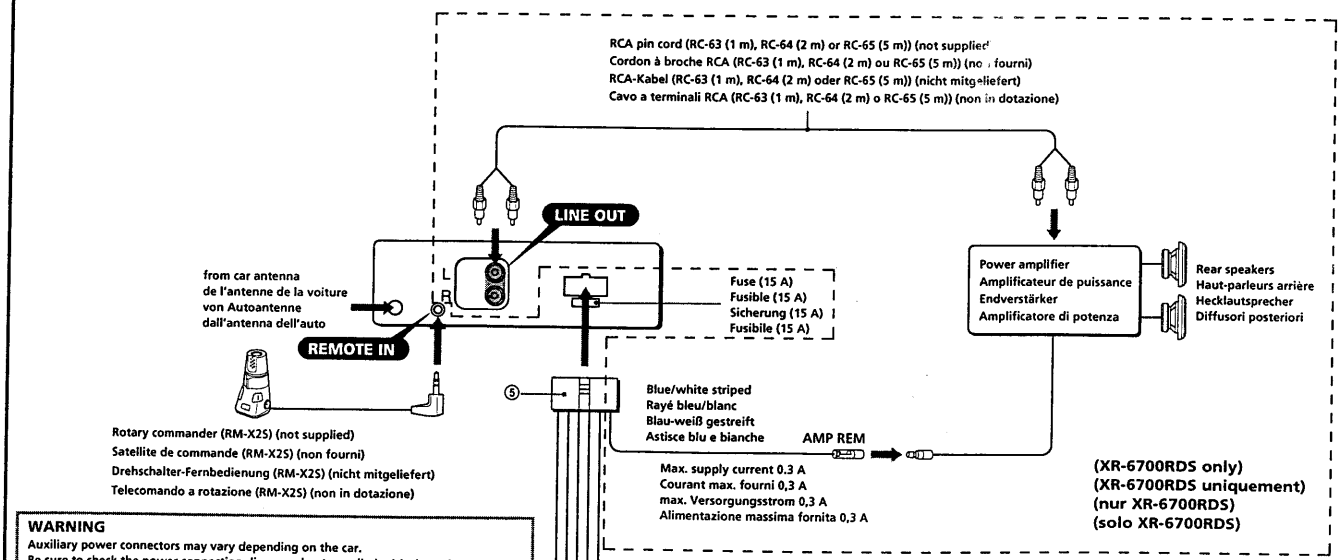
RCA pin cord (RC-63 (1 m), RC-64 (2 m) or RC-65 (5 m)) (not supplied
Cordon à broche RCA (RC-63 (1 m), RC-64 (2 m) ou RC-65 (5 m)) (non fourni)
RCA-Kabel (RC-63 (1 m), RC-64 (2 m) oder RC-65 (5 m)) (nicht mitgeliefert)
Cavo a terminali RCA (RC-63 (1 m), RC-64 (2 m) o RC-65 (5 m)) (non in dotazione)
LINE OUT
L
R
from car antenna
de l'antenne de la voiture
von Autoantenne
dall'antenna dell'auto
REMOTE IN
Fuse (15 A)
Fusible (15 A)
Sicherung (15 A)
Fusibile (15 A)
Power amplifier
Amplificateur de puissance
Endverstärker
Amplificatore di potenza
Rear speakers
Haut-parleurs arrière
Hecklautsprecher
Diffusori posteriori
Rotary commander (RM-X2S) (not supplied)
Satellite de commande (RM-X2S) (non fourni)
Drehschalter-Fernbedienung (RM-X2S) (nicht mitgeliefert)
Telecomando a rotazione (RM-X2S) (non in dotazione)
Blue/white striped
Rayé bleu/blanc
Blau-weiß gestreift
Astisce blu e bianche
AMP REM
Max. supply current 0.3 A
Courant max. fourni 0,3 A
max. Versorgungsstrom 0,3 A
Alimentazione massima fornita 0,3 A
(XR-6700RDS only)
(XR-6700RDS uniquement)
(nur XR-6700RDS)
(solo XR-6700RDS)

WARNING
Auxiliary power connectors may vary depending on the car.
Be sure to check the power connection diagram sheet supplied with the unit. Improper connections may damage your car. If the supplied power connecting cord can not be used with your car, consult your nearest Sony dealer.

AVERTISSEMENT
Le connecteur d'alimentation auxiliaire peut varier suivant le type de voiture. Vérifiez le schéma du connexion d'alimentation furni avec l'appareil. Un raccordement incorrect risque d'occasionner des dommages à votre voiture. Si le cordon d'alimentation fourni ne peut être utilisé avec votre voiture, consultez votre revendeur Sony.

VORSICHT
Die Hilfsstromanschlüsse können je nach Fahrzeugtyp unterschiedlich sein. Sehen Sie im Hilfsstromanschlußdiagramm für Ihr Fahrzeug nach, wie die Verbindungen ordnungsgemäß vorgenommen werden müssen. Fehlerhafte Verbindungen können zu Schäden an Ihrem Fahrzeug führen. Wenn das mitgeliferte Netzverbindungskabel nicht für den Einsatz in Ihrem Fahrzeug geeignet ist, wenden Sie sich bitte an Ihren Sony-Händler.

Attenzione
Il connettore di alimentazione ausiliare può variare a seconda del tipo di macchina. Controllare il foglio con il diagramma del connettore di alimentazione in dotazione con l'apparecchio, connessioni non corrette potrebbero danneggiare la macchina. Se il cave di collegamento dell'alimentazione in dotazione non pu essere utilizzato con la vostra auto, consultare il revenditore Sony pi ù vicino.

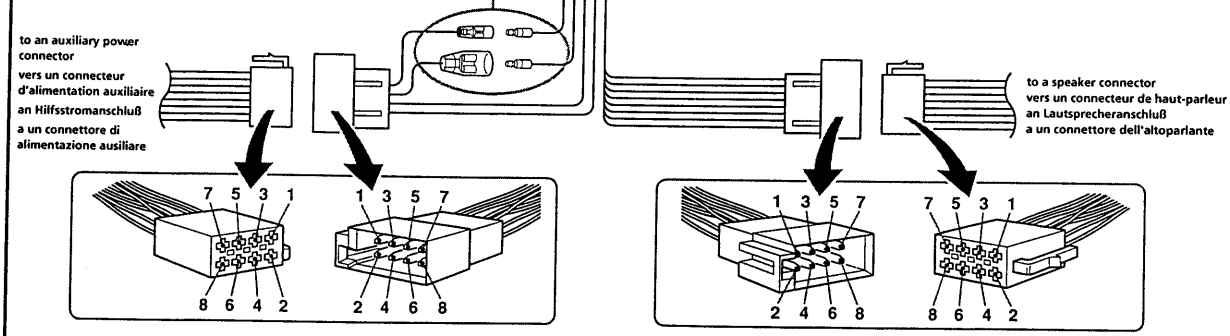
to an auxiliary power connector
vers un connecteur d'alimentation auxiliaire
an Hilfsstromanschluß
a un connettore di alimentazione ausiliare
to a speaker connector
vers un connecteur de haut-parleur
an Lautsprecheranschluß
a un connettore dell'altoparlante
7 5 3 1
8 6 4 2
1 3 5 7
2 4 6 8
1 3 5 7
2 4 6 8
7 5 3 1
8 6 4 2

Pin Broche Stift Pin	Colour Couleur Farbe Colore	Function Fonction Funktion Funzione	Pin Broche Stift Pin	Colour Couleur Farbe Colore	Function Fonction Funktion Funzione
4	Yellow Jaune Gelb Giallo	continuous power supply alimentation continue permanente Stromversorgung alimentazione continua	7	Red Rouge Rot Rosso	switched power supply alimentation commutée geschaltete Stromversorgung alimentazione a scatto
5	Blue Bleu Blau Blu	power antenna control antenne électrique elektronische Antenne antenna elettrica	8	Black Noir Schwarz Nero	ground masse Masse terra

Positions 1, 2, 3 and 6 do not have pins.
Les positions 1, 2, 3 et 6 ne comportent pas de broche.
An Position 1, 2, 3 und 6 befinden sich keine Stifte.
Le posizioni 1, 2, 3 e 6 non hanno pin.

Pin Broche Stift Pin	Colour Couleur Farbe Colore	Function Fonction Funktion Funzione	Pin Broche Stift Pin	Colour Couleur Farbe Colore	Function Fonction Funktion Funzione
1	Purple Mauve Violett Viola	+; Speaker, Rear, Right +; haut-parleur, arrière, droit +; Lautsprecher hinten rechts Altoparlante, posteriore, destro	5	White Blanc Weiß Blanco	+; Speaker, Front, Left +; haut-parleur, avant, gauche +; Lautsprecher vorne links Altoparlante, anteriore, sinistro
2		–; Speaker, Rear, Right –; haut-parleur, arrière, droit –; Lautsprecher hinten rechts Altoparlante, posteriore, destro	6		–; Speaker, Front, Left –; haut-parleur, avant, gauche –; Lautsprecher vorne links Altoparlante, anteriore, sinistro
3	Gray Gris Grau Grigio	+; Speaker, Front, Right +; haut-parleur, avant, droit +; Lautsprecher vorne rechts Altoparlante, anteriore, destro	7	Green Vert Grün Verde	+; Speaker, Rear, Left +; haut-parleur, arrière, gauche +; Lautsprecher hinten links Altoparlante, posteriore, sinistro
4		–; Speaker, Front, Right –; haut-parleur, avant, droit –; Lautsprecher vorne rechts Altoparlante, anteriore, destro	8		–; Speaker, Rear, Left –; haut-parleur, arrière, gauche –; Lautsprecher hinten links Altoparlante, posteriore, sinistro

Negative polarity positions 2, 4, 6, and 8 have striped cords.
Les positions de polarité négative 2, 4, 6 et 8 sont dotées de cordons rayés.
An den negativ gepolten Positionen (2, 4, 6 und 8) befinden sich farbige Adern.
Le posizioni a polatità negativa 2, 4, 6 e 8 hanno cavi spelati.

SECTION 2
DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.

2-1. SUB PANEL ASSY

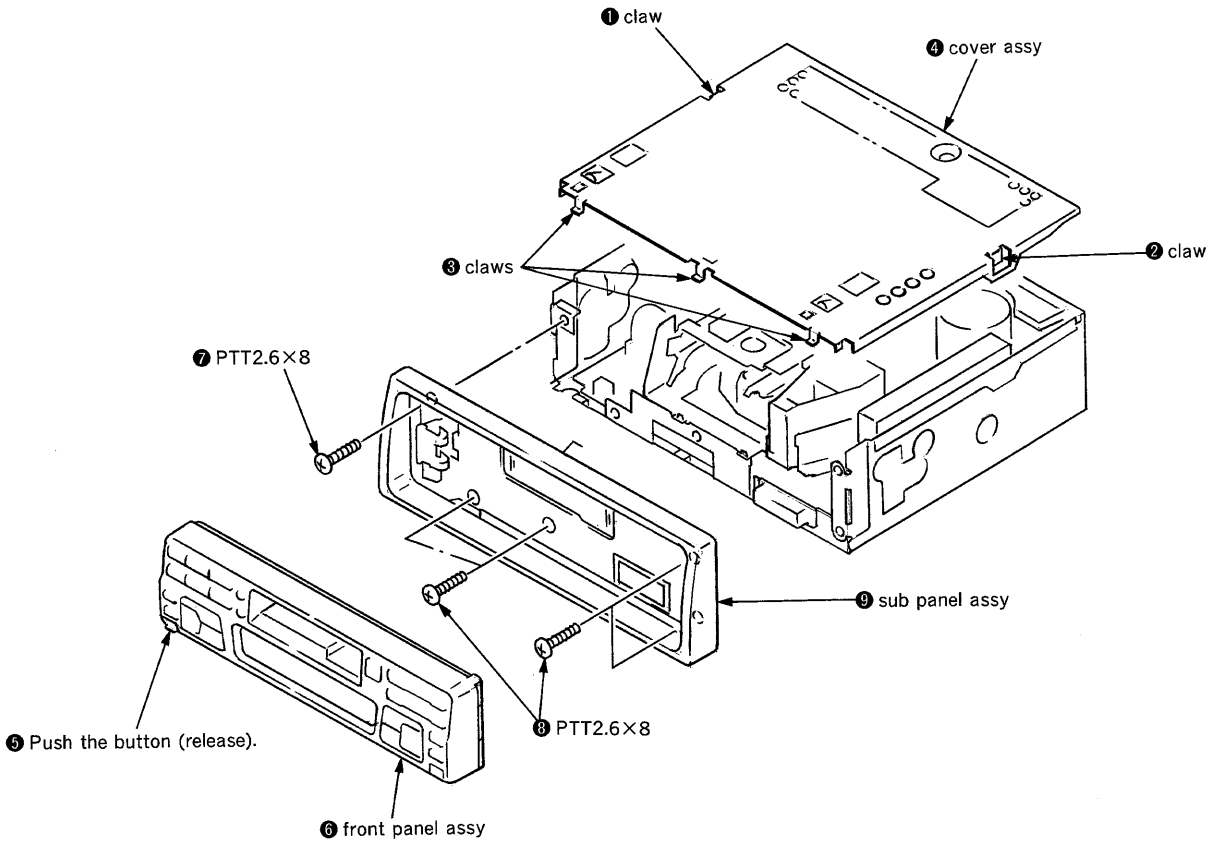

2-2. AMPLIFIER BOARD

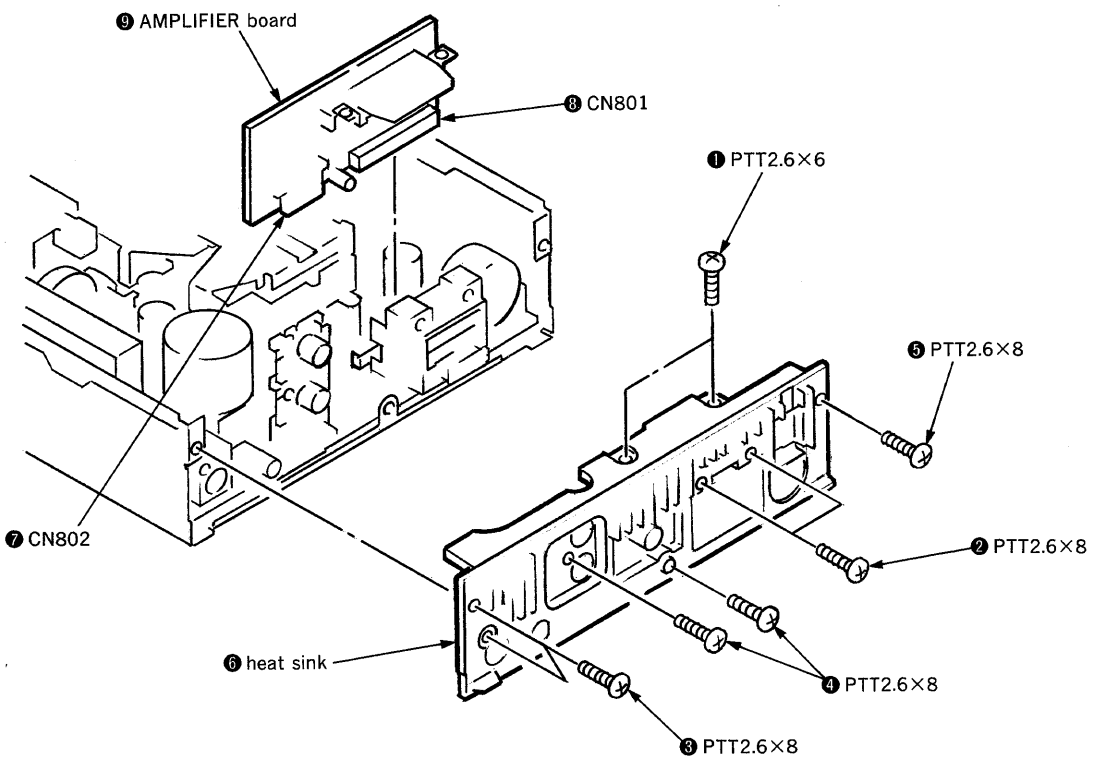

2-3. MECHANISM DECK BLOCK

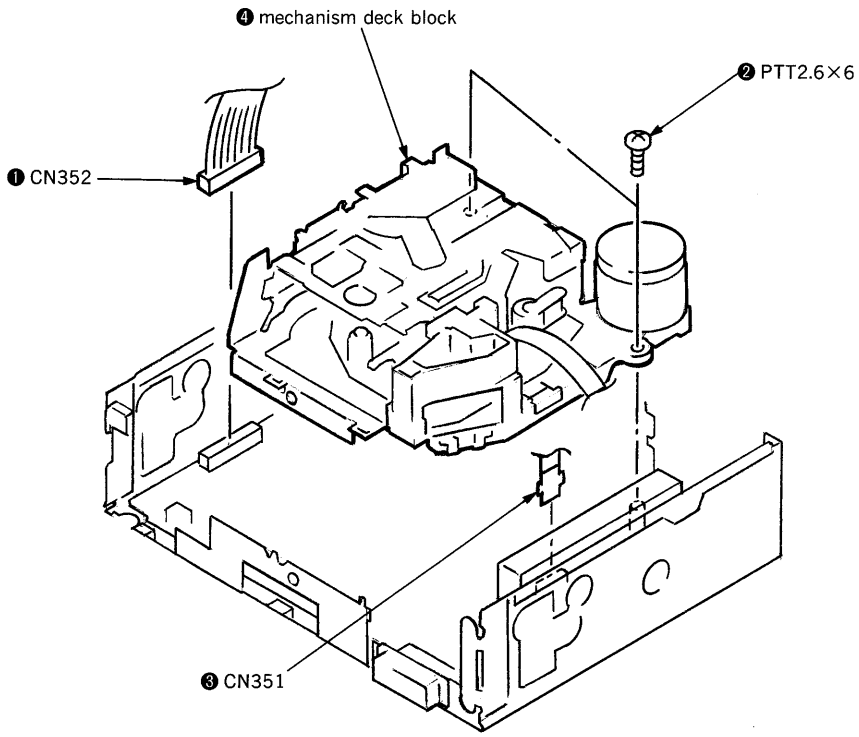

2-4. MAIN BOARD

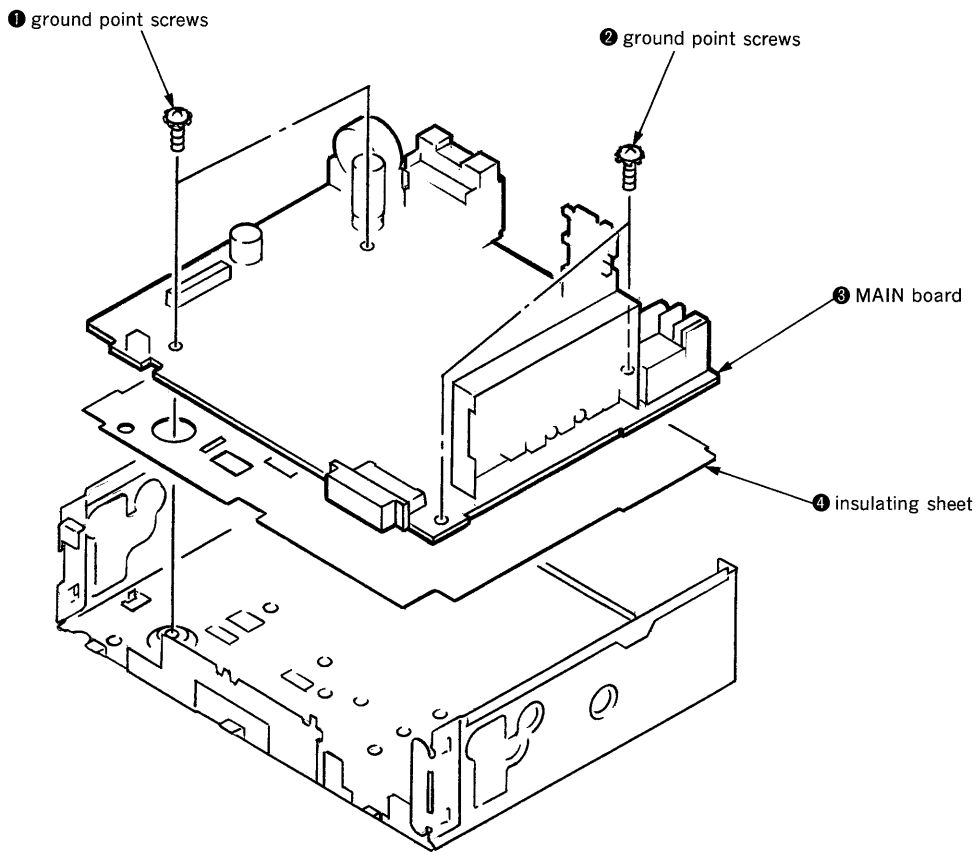

2-5. KEY BOARD

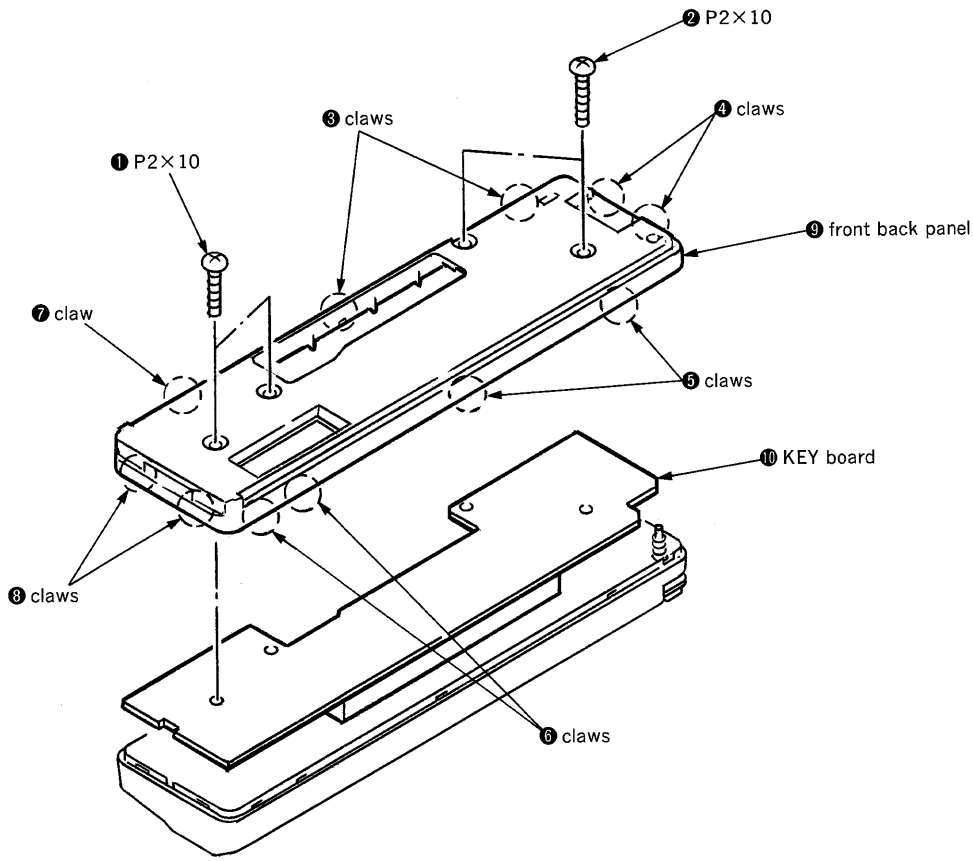
❷ P2×10
❸ claws
❹ claws
❶ P2×10
❾ front back panel
❼ claw
❺ claws
❿ KEY board
❽ claws
❻ claws

SECTION 3
ASSEMBLY OF MECHANISM DECK

SEE ADDITIONAL INFORMATION

Note : Follow the assembly procedure in the numerical order given.

3-1. INSTALLING THE LOADING GEARS

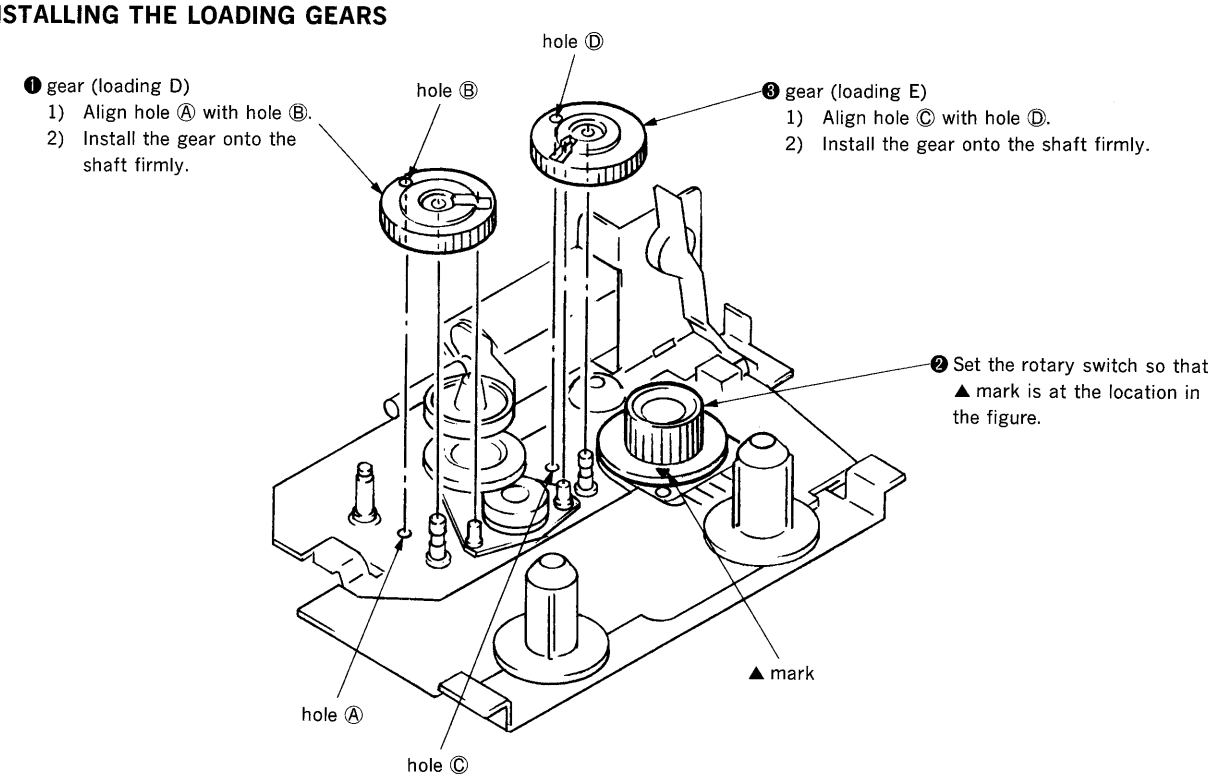
❶ gear (loading D)
1) Align hole Ⓐ with hole Ⓑ.
2) Install the gear onto the shaft firmly.
hole Ⓑ
hole Ⓓ
❸ gear (loading E)
1) Align hole Ⓒ with hole Ⓓ.
2) Install the gear onto the shaft firmly.
❷ Set the rotary switch so that ▲ mark is at the location in the figure.
▲ mark
hole Ⓐ
hole Ⓒ

3-2. INSTALLING THE REEL BRACKET

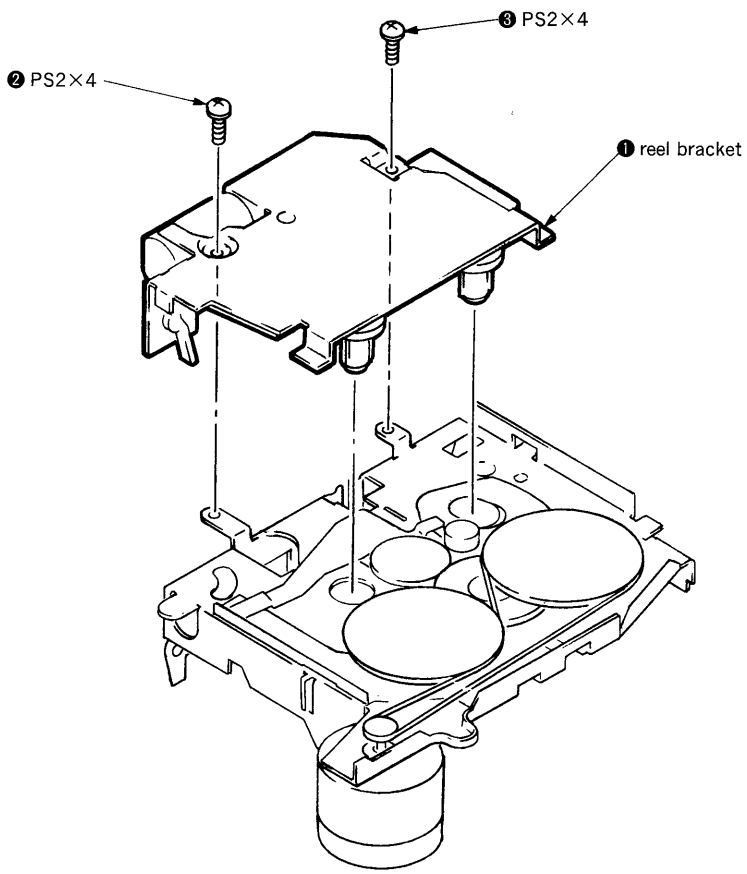

3-3. INSTALLING THE MODE LEVER AND PINCH LEVERS

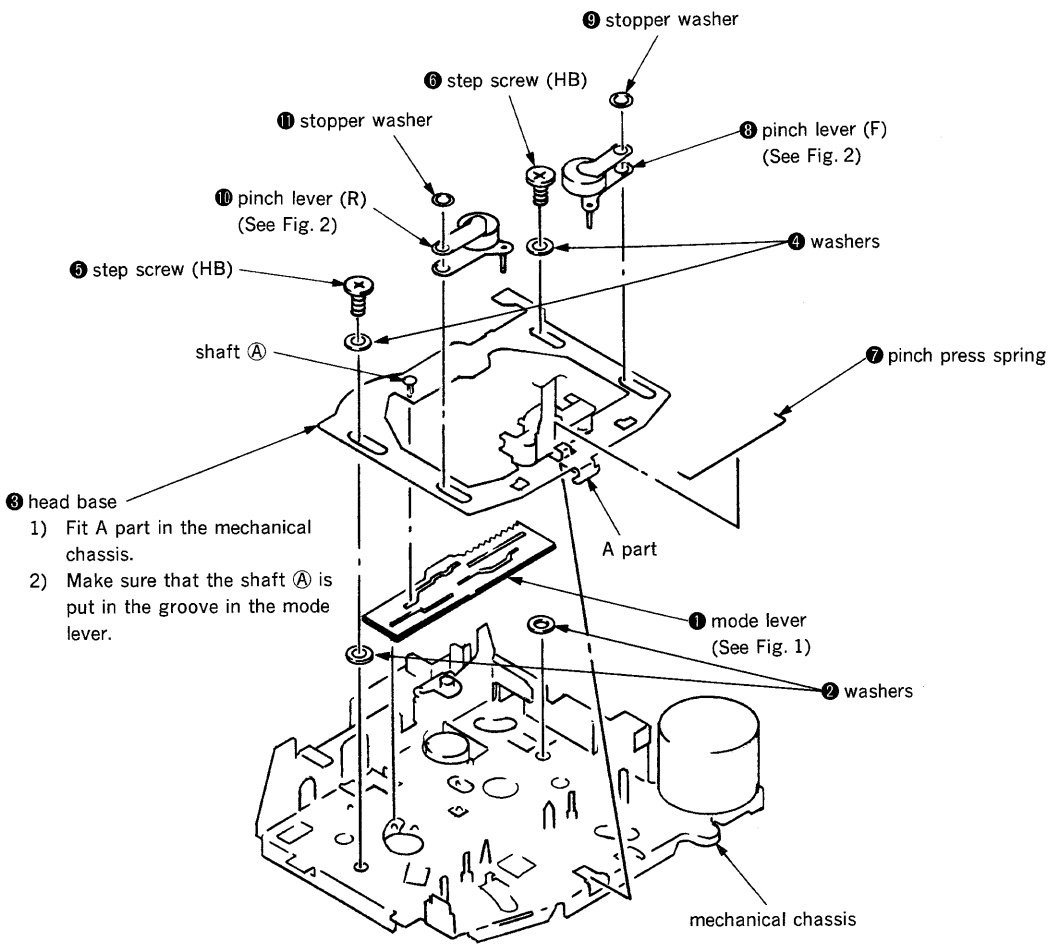

1) Align • mark on the rotary switch with hole on the mode lever.
2) Make sure that the two shafts and three projections are located as shown below.

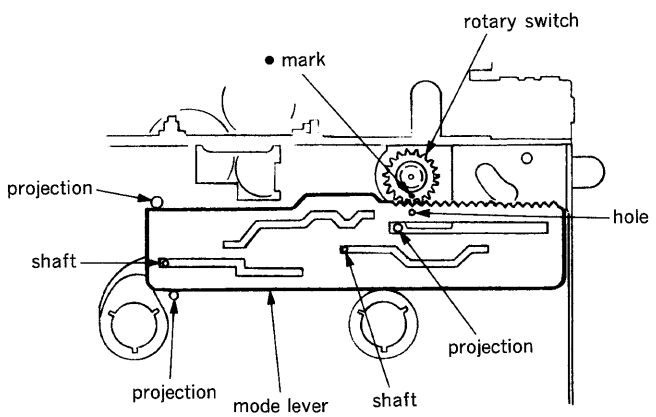

Fig. 1

1) Put the shafts of the pinch levers in the pinch press spring on its head side.

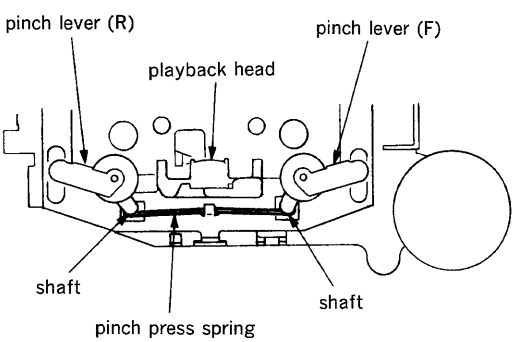

Fig. 2

3-4. INSTALLING THE CASSETTE HOUSING

❸ housing hanger
1) Fit three projections in holes on the mechanical chassis.
2) Bend C part in the direction of the arrow and fasten to prevent dislocation from the chassis.

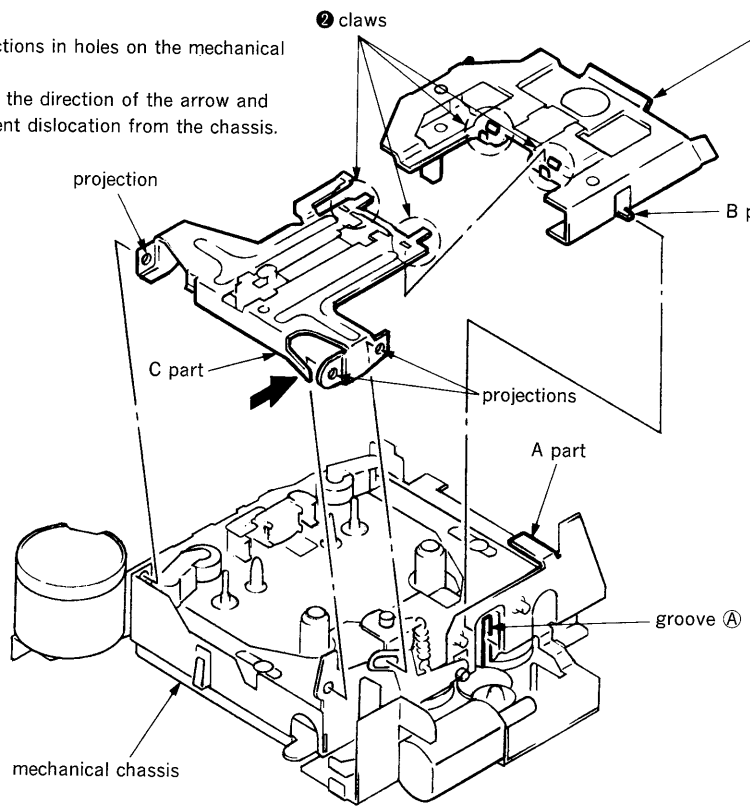

3-5. INSTALLING THE LOADING LEVER

❶ suction arm
1) Align with axis Ⓐ and install the arm onto the claw.
2) With the claw in the center, rotate the arm so as to be directed along axis Ⓑ, then fit the arm on the projection.

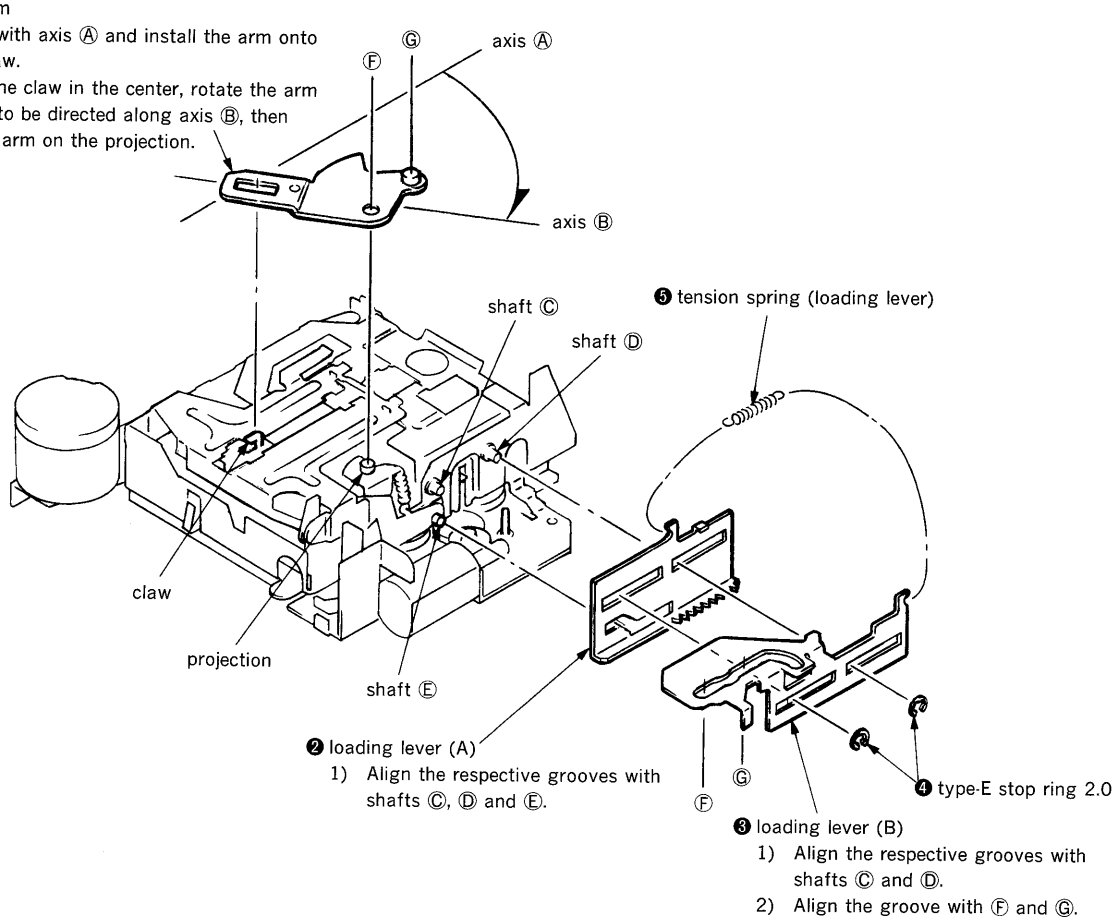

3-6. POSITIONING THE LOADING LEVERS

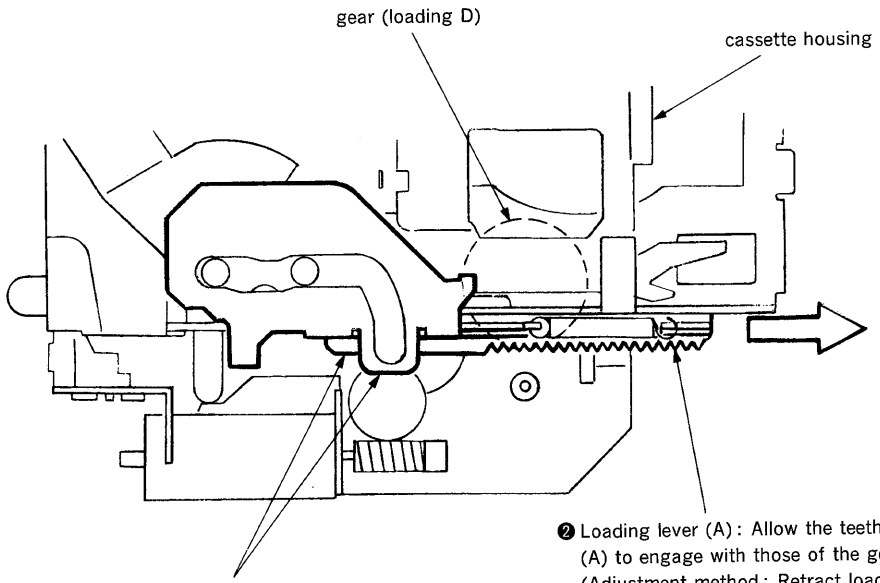

❶ Loading levers (A) and (B): Move loading levers (A) and (B) in the direction of the arrow.
(The cassette housing is put down fully at this time.)

❷ Loading lever (A): Allow the teeth of loading lever (A) to engage with those of the gear (loading D).
(Adjustment method: Retract loading lever (A) by 0.2 to 0.5mm in the opposite direction of the arrow.)

3-7. INSTALLING THE GEAR (LOADING F)

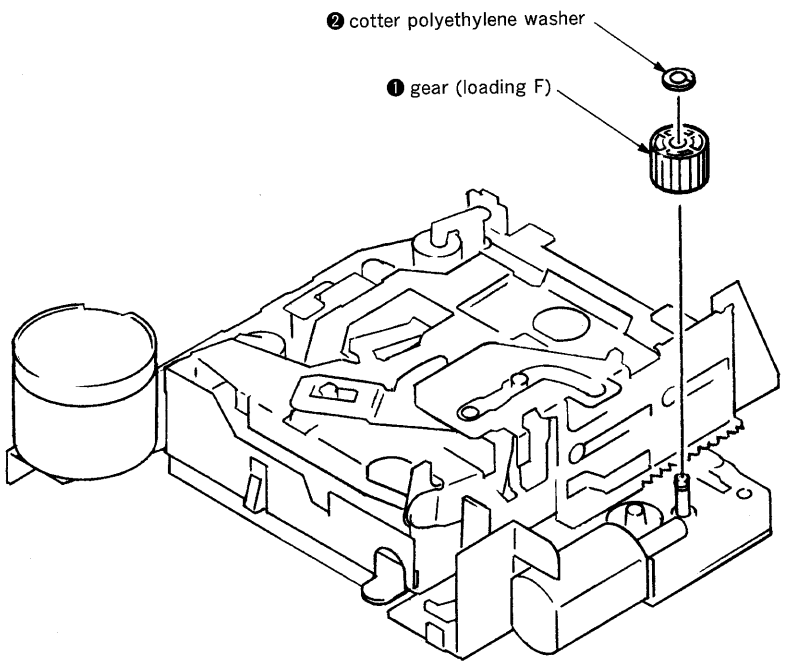

SECTION 4
MECHANICAL ADJUSTMENTS

PRECAUTION

1. Wipe the following components with an absorbent cotton cloth moistened with alcohol before adjustment:
   PB head　　Pinch roller
   Idler　　Rubber belt
   Capstan
2. Demagnetize the PB head using a head demagnetizer.
3. Be careful not to use a magnetized screwdriver.
4. After the adjustment is completed, lock the adjustment parts using screws.
5. Unless otherwise specified, make adjustments at the specified voltage (14.4V).

Torque Measurement

Mode	Torque Meter	Meter Reading
FWD	CQ-102C	30−65g•cm (0.42−0.90 oz•inch)
FWD Back Tension		0.5−4.5g•cm (0.01−0.06 oz•inch)
REV	CQ-102RC	30−65g•cm (0.42−0.90 oz•inch)
REV Back Tension		0.5−4.5g•cm (0.01−0.06 oz•inch)
FF, REW	CQ-201B	60−200g•cm (0.83−2.78 oz•inch)

Tape Tension Measurement

Mode	Tension Meter	Meter Reading
FWD	CQ-403A	more than 90g (more than 3.18 oz)
REV	CQ-403R	

SECTION 5
ELECTRICAL ADJUSTMENTS

TEST MODE

This set have the test mode function. In the test mode, FM Auto Scan/Stop Level and MW Auto Scan/Stop Level adjustments can be performed easier than it in ordinaly procedure.

〈Set the Test Mode〉

1. Set the "OFF" mode.
2. Push the preset [4] button.
3. Push the preset [5] button.
4. Press the preset [1] button for more than two seconds.
5. Then the display indicates all lights, the test mode is set.

〈Release the Test mode〉

1. Push the "OFF" button.

See the adjustment location from on page 21 for the adjustment.

DECK SECTION　**0dB=0.775V**

Tape Speed Adjustment

Procedure:

1. Put the set into the FWD PB mode.

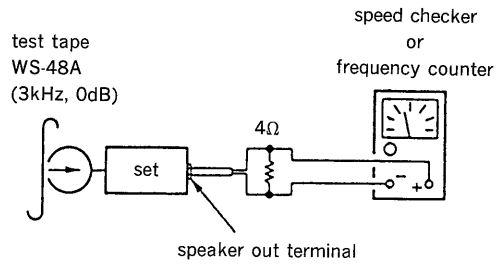

Specification: Constant speed

Speed checker	Frequency counter
−1.5 to +2.5%	2,955 to 3,075Hz

Adjustment Location: See page 21.

DOLBY Level Adjustment (XR-6700RDS only)

Setting:

Preset [3] (DOLBY) button : OFF
SEL (BAS) button : Center
SEL (TRE) button : Center
SEL (BAL) button : Center
SEL (FAD) button : Center
SEL (VOL) button : Maximum

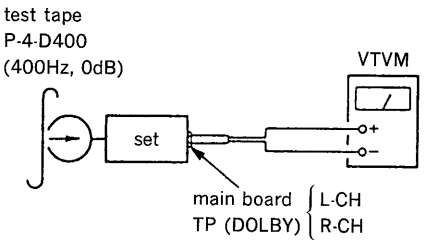

Procedure:

1. Put the set into the FWD PB mode.
2. Adjust RV301 (R-CH) and RV401 (L-CH) so that VTVM reading is −6±0.5 dB (0.37 to 0.41V).

Adjustment Location: See page 21.

TUNER SECTION | **0dB=1μV**

Cautions during repair
When the front end is defective, replace it by a new one because its internal block is difficult to repair.

FM Auto Scan/Stop Level Adjustment

Setting :

TUNER button : FM

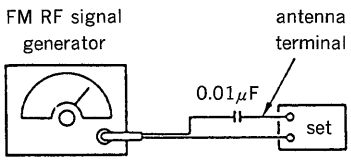

Carrier frequency : 98.00MHz
Output level : 22dB (12.6μV)
Mode : mono
Modulation : 1kHz, 22.5kHz deviation

Procedure :

1. Set to the test mode. (See page 17.)
2. Push the [TUNER] button and set to FM.

Display

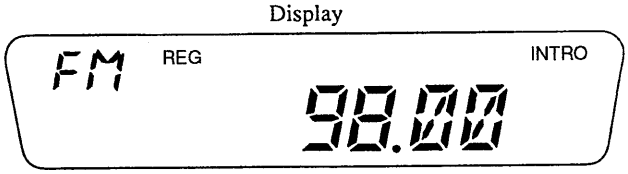

3. Adjust with the volume RV2 on TU1 so that the "FM" indication turns to "FM0" indication on the display window.
   But, in case of already indicated "FM0", turn the RV2 so that put out light "0" indication and adjustment.

Display

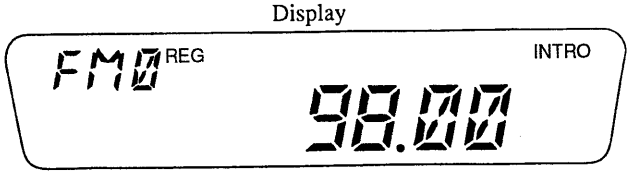

Adjustment Location : See page 21.

FM Stereo Separation Adjustment

Setting :

TUNER button : FM

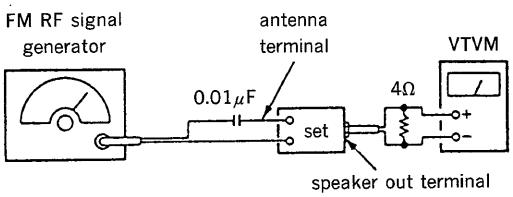

Carrier frequency : 98.00MHz
Output level : 70dB (3.2mV)
Mode : stereo
Modulation : main : 1kHz, 20kHz deviation (53%)
sub : 1kHz, 20kHz deviation (53%)
19kHz pilot : 7.5kHz deviation (10%)

Procedure :

FM stereo signal generator output channel	VTVM connection	VTVM reading (dB)
L-CH	L-CH	Ⓐ
R-CH	L-CH	Ⓑ Adjust RV4 on TU1 for minimum reading.
R-CH	R-CH	Ⓒ
L-CH	R-CH	Ⓓ Adjust RV4 on TU1 for minimum reading.

L-CH Stereo separation : Ⓐ−Ⓑ
R-CH Stereo separation : Ⓒ−Ⓓ
The separations of both channels should be equal.

Specification : Separation more than 30dB

Adjustment Location : See page 21.

FM Noise Focus Adjustment

Setting :

TUNER button : FM

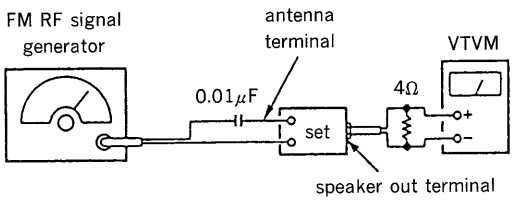

Carrier frequency : 98.00MHz
Output level : 60dB (1mV)
Mode : mono
Modulation : 1kHz, 75kHz deviation

Procedure :

1. Tune the 98.00MHz.
2. The then output level is supposing that (B) dB.
3. Adjust with the volume RV3 on TU1 so that the output level is (B)−32dB then signal generator input set to −20dB.

Adjustment Location : See page 21.

FM Signal Meter Adjustment

Setting :

TUNER button : FM

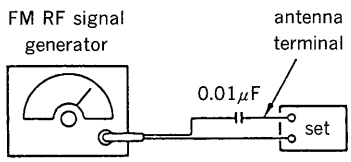

Carrier frequency : 98.00MHz
Output level : 35dB (56.2μV)
Mode : mono
Modulation : no modulation

Procedure :

1. Set to the test mode. (See page 17.)
2. Push the [TUNER] button and set to FM.

Display

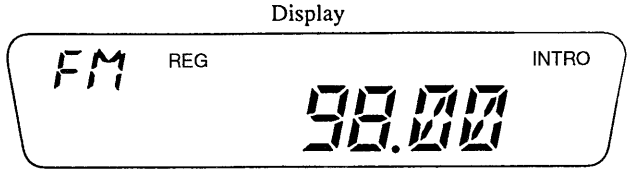

3. Push the preset [6] button.
4. Adjust RV1 so that the display indication is "118".

Display

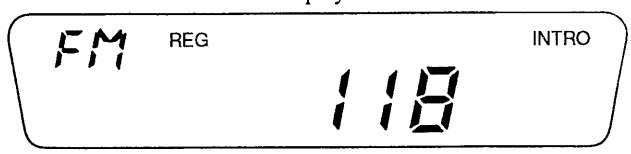

Specification : Display indication : 116 to 120

Adjustment Location : See page 21.

MW Auto Scan/Stop Level Adjustment

Setting :

TUNER button : MW

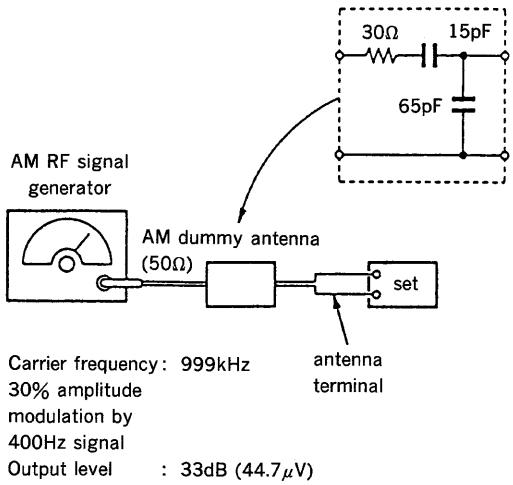

Carrier frequency : 999kHz
30% amplitude modulation by 400Hz signal
Output level : 33dB (44.7μV)

Procedure :

1. Set to the test mode. (See page 17.)
2. Push the [TUNER] button and set to MW.

Display

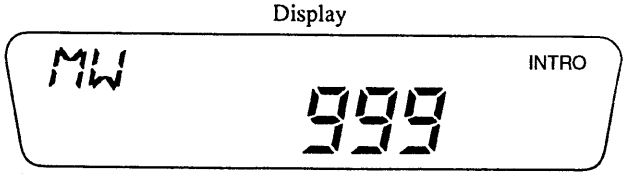

3. Adjust with the volume RV1 on TU1 so that the "MW" indication turns to "MW0" indication on the display window.
   But, in case of already indicated "MW0", turn the RV1 so that put out light "0" indication and adjustment.

Display

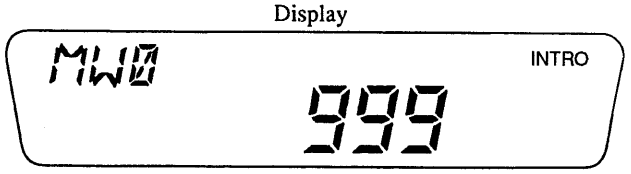

Adjustment Location : See page 21.

Adjustment Location :

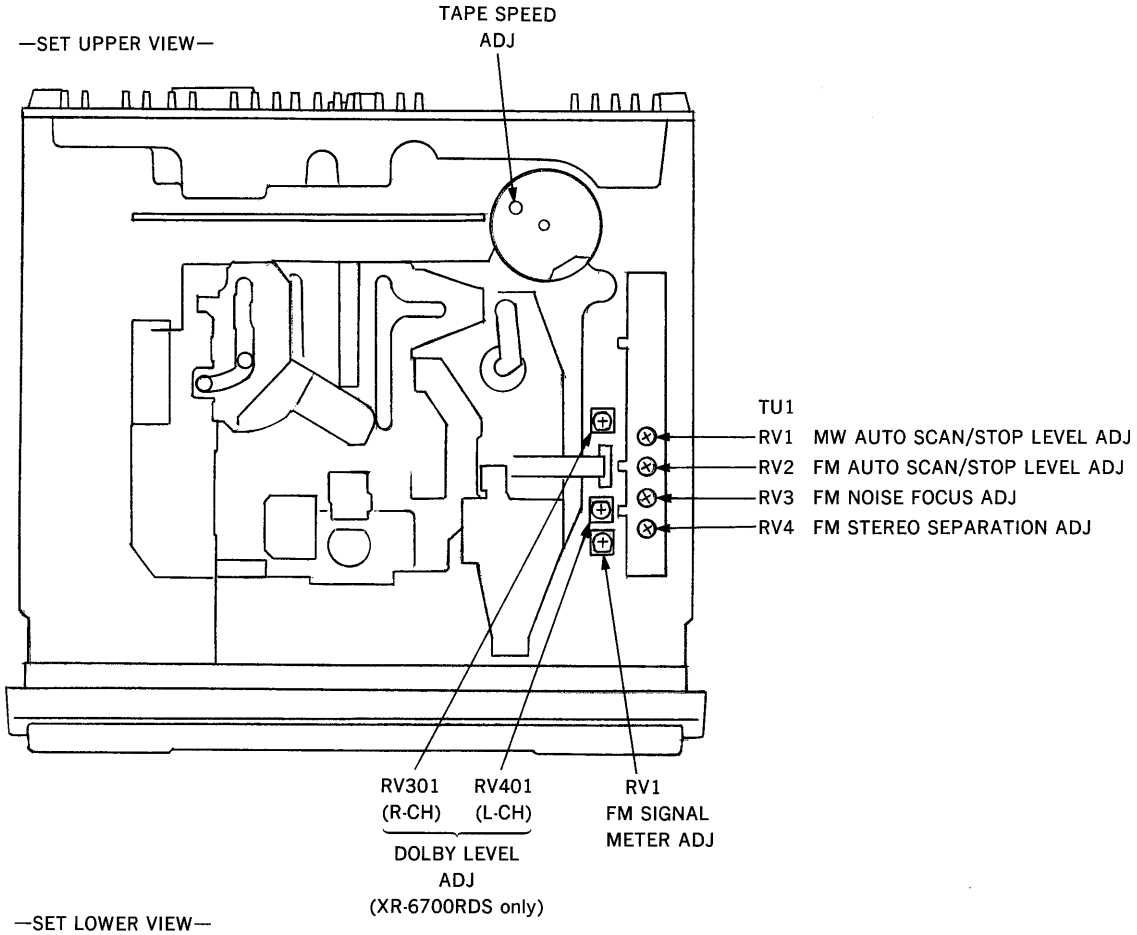

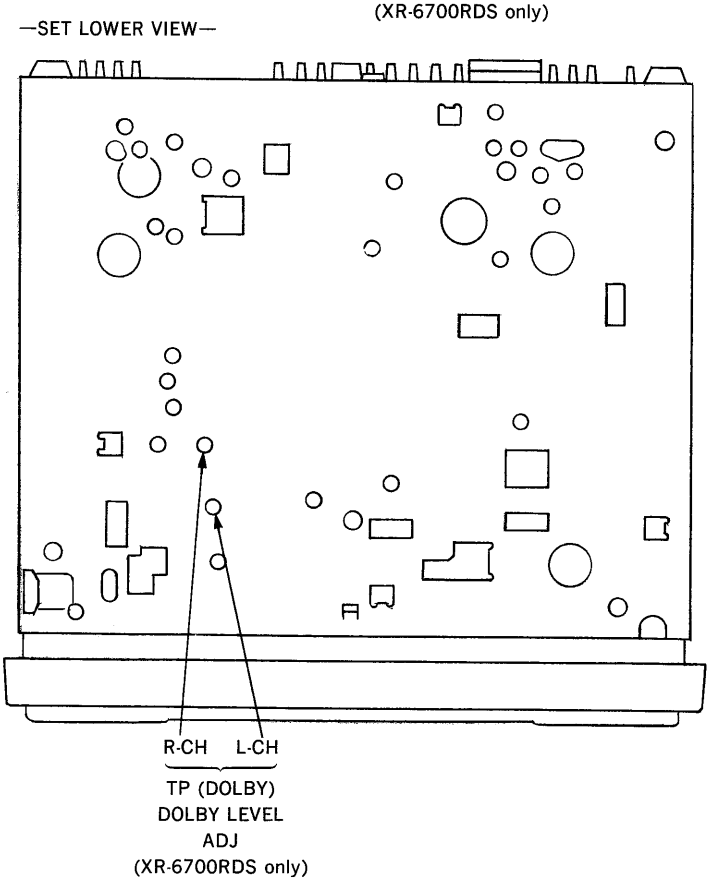

SECTION 6
DIAGRAMS

6-1. IC PIN DESCRIPTION

• IC501 MN1884820S3N (System Control)

Pin No.	Pin Name	I/O	Pin Description
1	TUNMUT	O	TUNER MUTE output terminal
2	AMPON	O	Power amplifier power control output terminal
3	ILLON	O	Illumination power control output terminal
4	PW ON	O	System power control output terminal
5	$\overline{\text{AMPMUT}}$	O	Power amplifier mute control output terminal
6	RCIN1	I	Rotary Commander Shift input terminal
7	VDD	—	Power terminal
8	X IN	I	Connection oscillator 8MHz cera-lock
9	X OUT	O	Connection oscillator 8MHz cera-lock
10	GND	—	GND
11	XT IN	I	32kHz crystal connection
12	XT OUT	O	32kHz crystal connection
13	EX2	—	Connect to GND.
14	$\overline{\text{RESET}}$	—	Reset input terminal. "L" for Reset.
15	RDSCKI	I	RDS-CLK input terminal
16	BU IN	I	BACK-UP detection input terminal
17	KEYACK	I	Key input acknowledge terminal
18	VOLSO	O	Electric volume serial data output terminal
19	VOLCKO	O	Electric volume serial clock output terminal
20	VOLCE	O	Electric volume serial chip enable output terminal
21	TAPEMUT	O	AUDIO signal select control output terminal
22	LMLOD	O	LOADING MOTOR control output terminal (LOADING direction)
23	LMEJ	O	LOADING MOTOR control output terminal (EJECT direction)
24	$\overline{\text{AMSON}}$	O	AMS control output terminal
25	$\overline{\text{N}}$ ROUT	O	FORWARD/REVERSE detection output terminal
26	$\overline{\text{AMSIN}}$	I	Music with/without detection input terminal at AMS.
27	PLLSO	O	PLL DATA output terminal
28	PLLCKO	O	PLL CLK output terminal
29	PLLCE	O	PLL CE output terminal
30	RDSSI	I	RDS-DATA input terminal
31	$\overline{\text{AD ON}}$	O	AD port power control output terminal
32	DOLON	I/O	DOLBY control input/output terminal
33	MTLON	I/O	METAL control input/output terminal
34	CMON	O	TAPE capstan motor control signal output terminal
35	TAPON	O	TAPE power control output terminal
36	$\overline{\text{ACCON}}$	I	ACC power detection input terminal
37	PLLSI	I	PLL DATA input terminal
38	BEEP	O	Control output terminal for BEEP sound.
39	LCDCKO	O	LCD serial clock output terminal
40	LCDSO	O	LCD serial data output terminal
41	LCDINH	O	LCD blank display control output terminal
42	LCDCE	O	LCD chip enable output terminal
43	UNICKO	—	Not used.
44	UNICI	—	Not used.
45	UNISI	—	Not used.
46	UNISO	—	Not used.

Pin No.	Pin Name	I/O	Pin Description
47	VDD	—	Power terminal
48	AVDD	—	Power terminal of AD input port. Connect to pin ㊼.
49	AVREF+	—	Reference voltage input of AD input port. (+ side)
50, 51	KEYIN1, KEYIN0	I	KEY input terminal
52	KEYSEL1	I	KEY function select input terminal. "L" for XR-6600RDS, "H" for XR-6700RDS.
53	KEYSEL0	I	Connect to GND.
54, 55	DSTSEL1, DSTSEL0	I	Connect to GND.
56	RCIN0	I	Rotary Commander Shift input terminal
57	VSM	I	Signal meter AD input port terminal of FM/AM common.
58	AVREF−	—	Reference voltage input of AD input port. (− side)
59	AVSS	—	GND. Connect to pin ㊽.
60	GND	—	GND
61	BUSON	—	Not used.
62	$\overline{\text{SYSRST}}$	—	Not used.
63	$\overline{\text{SEKOUT}}$	O	SEEK OUT output terminal
64	TUNON	O	TUNER power control output terminal
65	FM ON	O	FM power control output terminal
66	MUT	O	System MUTE output terminal
67	AF SEK	O	Output terminal for AF-SEEK.
68	COLOR	O	Illumination color select control output terminal
69	NOSESW	I	Input pin for detecting mounting of front panel.
70	ST	I	ST indicate to turn ON for "L".
		O	At forced monaural, output for "L".
71	SD IN	I	STOP decide on SEEK, AUTO-MEMORY and SCAN.
72	REL S	I	Reverse direction rotation detection input terminal of reel table.
73	PW SEL	I	Power select switching input terminal
74	REL T	I	Forward direction rotation detection input terminal of reel table.
75—78	POS4—POS1	I	Position signal detection input terminal
79	$\overline{\text{TEST}}$	I	Test mode input terminal
80	ILLIN	I	Connect to GND.

6-2. PRINTED WIRING BOARDS—MAIN SECTION—

SEE ADDITIONAL INFORMATION

● Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D2	D-3	IC2	E-4
D3	C-5	IC3	H-5
D350	F-5	IC151	E-7
D361	H-10	IC152	E-5
D362	F-11	IC351	G-4
D501	E-5	IC360	G-10
D504	H-6	IC501	H-8
D505	H-6	IC571	E-10
D506	I-6	IC601	E-11
D601	E-8	IC801	D-15
D605	B-7		
D606	B-8	Q2	C-5
D607	B-8	Q3	D-3
D609	I-2	Q4	C-4
D610	I-2	Q101	F-4
D611	I-4	Q201	F-4
D612	I-4	Q361	I-11
D613	I-3	Q362	I-11
D614	I-3	Q364	F-11
D615	I-9	Q365	F-10
D616	I-3	Q501	F-5
D617	B-3	Q503	H-3
D618	I-2	Q603	F-8
D619	I-4	Q605	E-8
D620	B-10	Q606	G-6
D621	B-11	Q607	E-8
D622	B-3	Q608	G-6
D624	E-10	Q609	B-6
D650	B-10	Q610	B-7
D651	B-11	Q611	E-10
D652	B-11	Q612	E-10
D653	B-11	Q701	H-10
D701	I-11	Q702	I-11
D702	I-11	Q801	E-18
D821	F-16	Q802	D-18
D823	E-17	Q821	E-17
D824	E-19	Q822	D-19
		Q851	E-16
IC1	C-3		

Note :
● ○— : parts extracted from the component side.

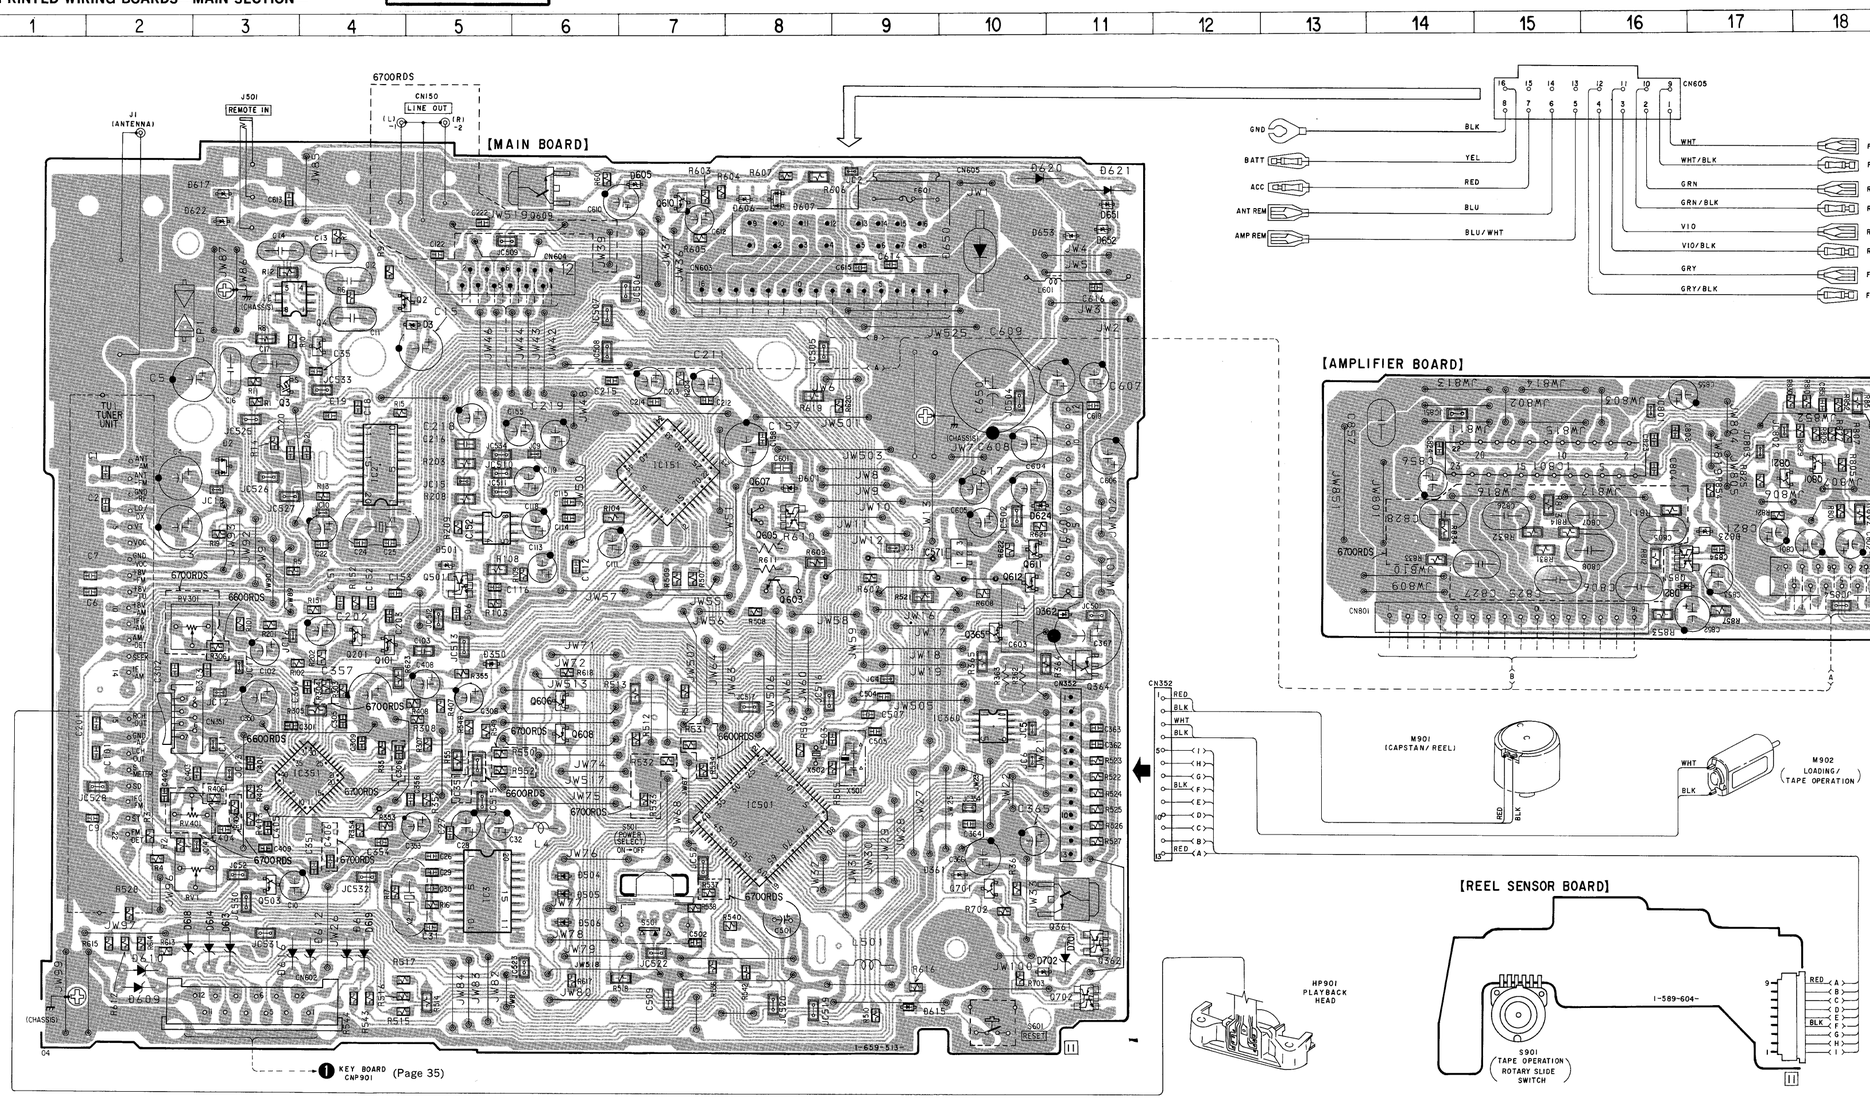

SEE ADDITIONAL INFORMATION

6-3. SCHEMATIC DIAGRAM—MAIN SECTION— • Refer to page 37 for IC Block Diagrams.

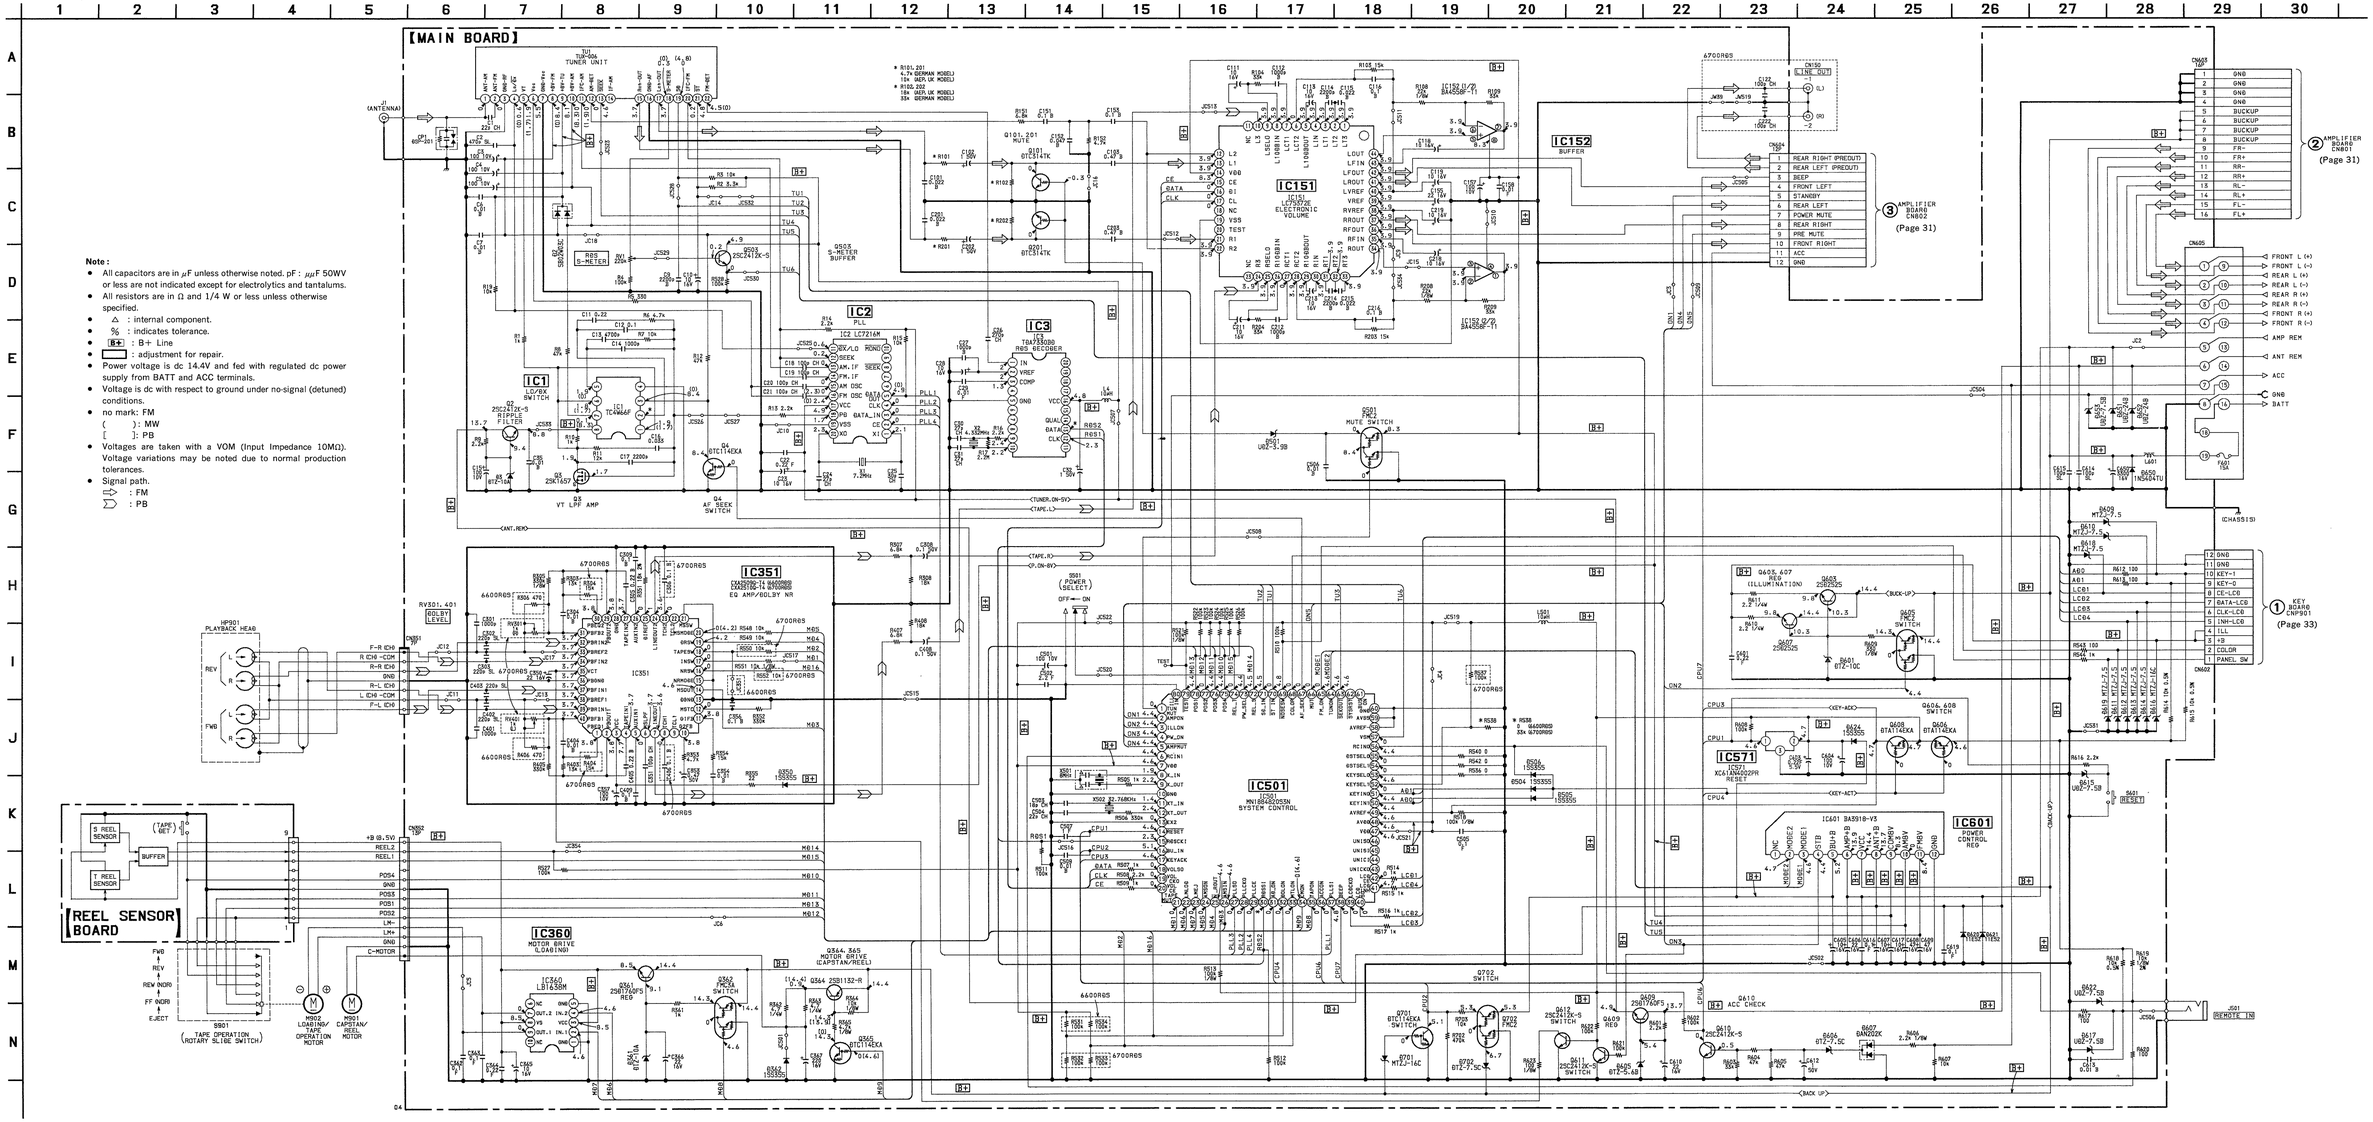
【MAIN BOARD】
【REEL SENSOR BOARD】
IC1 LCD/BX SWITCH
IC2 PLL
IC3 RDS DECODER
IC151 ELECTRONIC VOLUME
IC152 BUFFER
IC351 EQ AMP/GOLDBY NR
IC501 SYSTEM CONTROL
IC571 RESET
IC601 POWER CONTROL REG.
IC360 MOTOR DRIVE LOADING
Q564,565 MOTOR DRIVE (CAPSTAN/REEL)
S901 (TAPE OPERATION ROTARY SLIDE SWITCH)
M902 LOADING/TAPE OPERATION MOTOR
M901 CAPSTAN/REEL MOTOR
CN150 (LINE OUT)
CN602 (KEY BOARD CNP901)
CN603 (AMPLIFIER BOARD CN801)
CN605 (AMPLIFIER BOARD CN801)
(Page 31)
(Page 33)
Note :
All capacitors are in μF unless otherwise noted. pF : μμF 50WV or less are not indicated except for electrolytics and tantalums.
All resistors are in Ω and 1/4 W or less unless otherwise specified.
△ : internal component.
% : indicates tolerance.
B+ : B+ Line
: adjustment for repair.
Power voltage is dc 14.4V and fed with regulated dc power supply from BATT and ACC terminals.
Voltage is dc with respect to ground under no-signal (detuned) conditions.
no mark: FM
( ): MW
[ ]: PB
Voltages are taken with a VOM (Input Impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
Signal path.
: FM
: PB

6-4. SCHEMATIC DIAGRAM—AMPLIFIER SECTION—

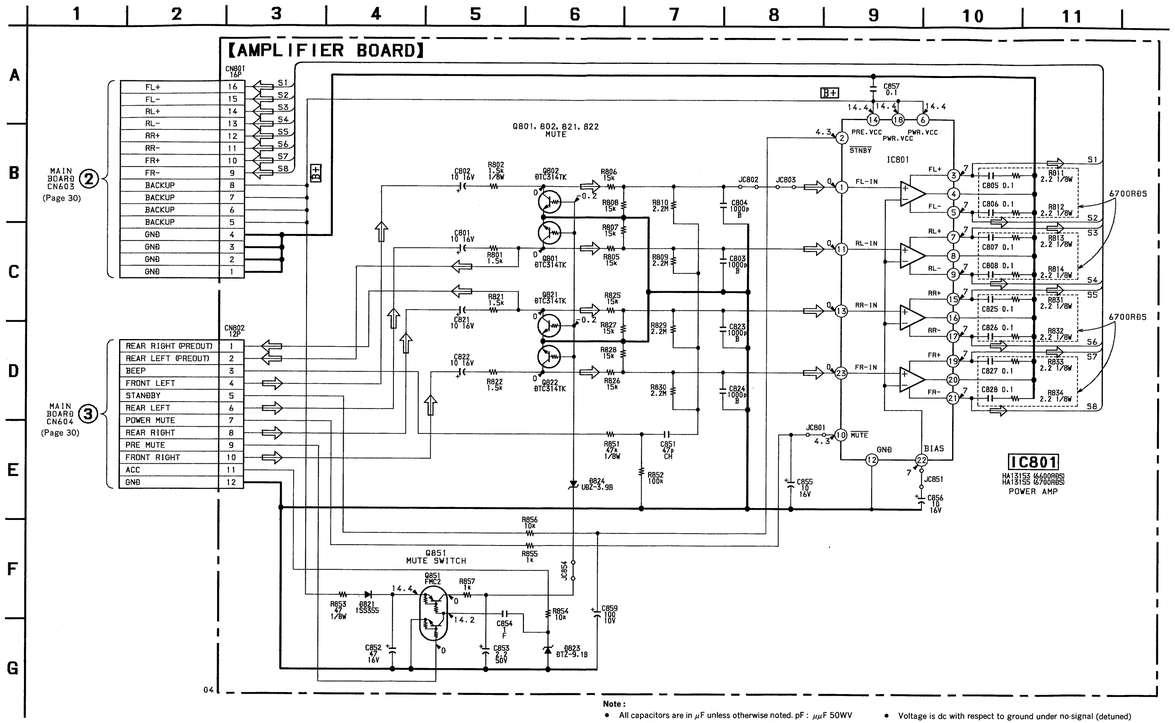

Note :

- All capacitors are in μF unless otherwise noted. pF : μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- B+ : B+ Line
- Power voltage is dc 14.4V and fed with regulated dc power supply from BATT and ACC terminals.
- Voltage is dc with respect to ground under no-signal (detuned) conditions.
- no mark: FM
- Voltages are taken with a VOM (Input Impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
- Signal path. ⇨ : FM

6-5. SCHEMATIC DIAGRAM—PANEL SECTION—

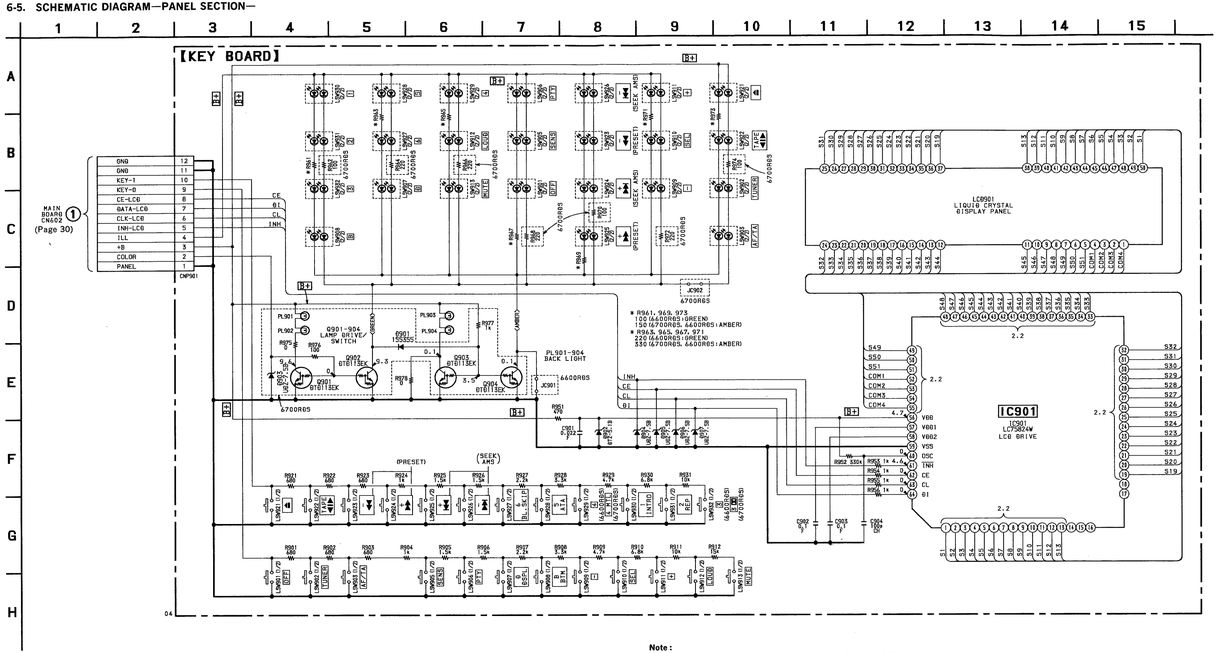

Note :

- All capacitors are in μF unless otherwise noted. pF : μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- B+ : B+ Line
- Power voltage is dc 14.4V and fed with regulated dc power supply from BATT and ACC terminals.
- Voltage is dc with respect to ground under no-signal (detuned) conditions.
- no mark: FM
- Voltages are taken with a VOM (Input Impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.

6-6. PRINTED WIRING BOARD—PANEL SECTION—

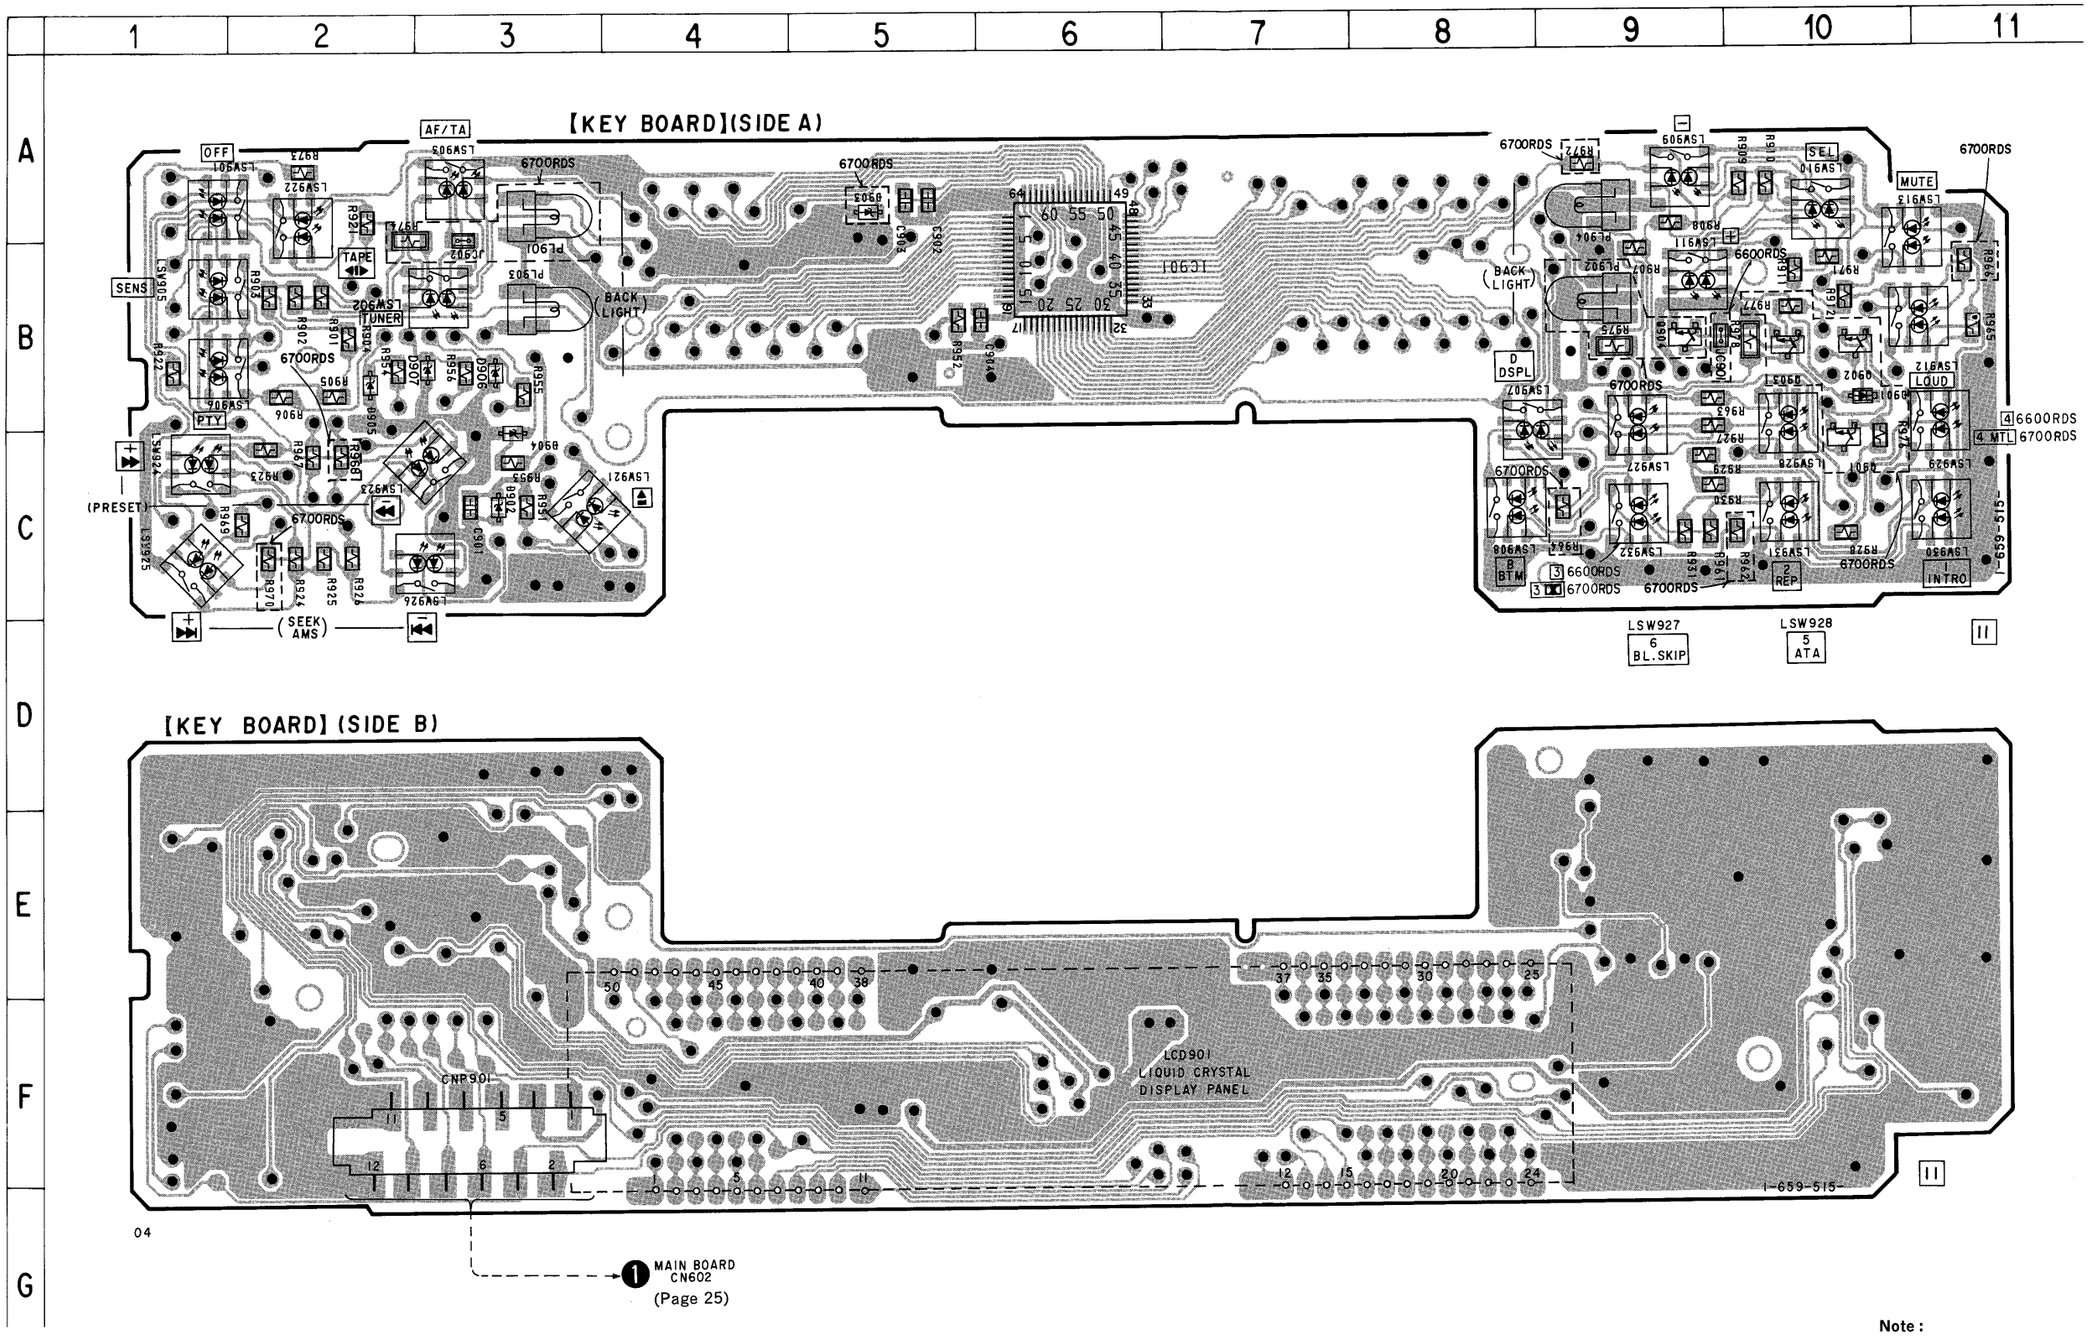

● **Semiconductor Location**

Ref. No.	Location
(D901)	B-10
D902	C-3
(D903)	A-5
D904	B-3
D905	B-2
D906	B-3
D907	B-3
IC901	B-6
(Q901)	C-10
(Q902)	B-10
(Q903)	B-10
(Q904)	B-9

( ): XR-6700RDS only

Note :

- ○— : parts extracted from the component side.
- ● : Through hole.
- ▨ : Pattern on the side which is seen.

(The other layer's patterns are not indicated.)

• IC Block Diagrams

IC1 TC4W66F

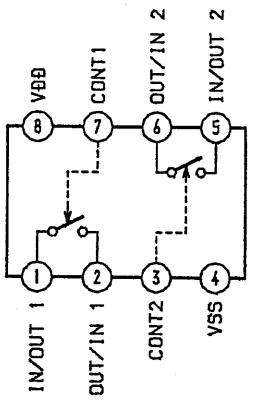

IC2 LC7216M

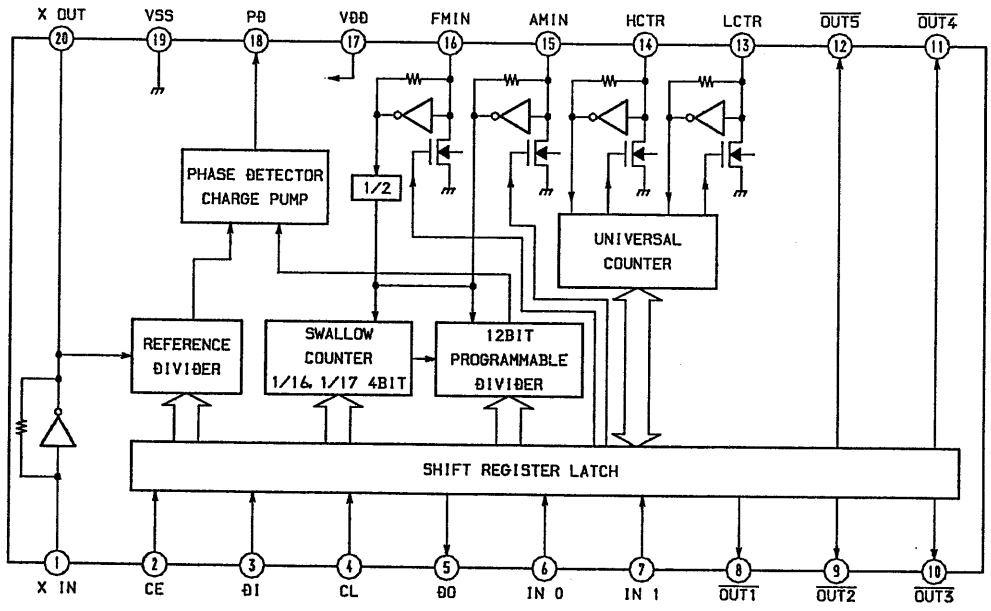

IC151 LC75372E

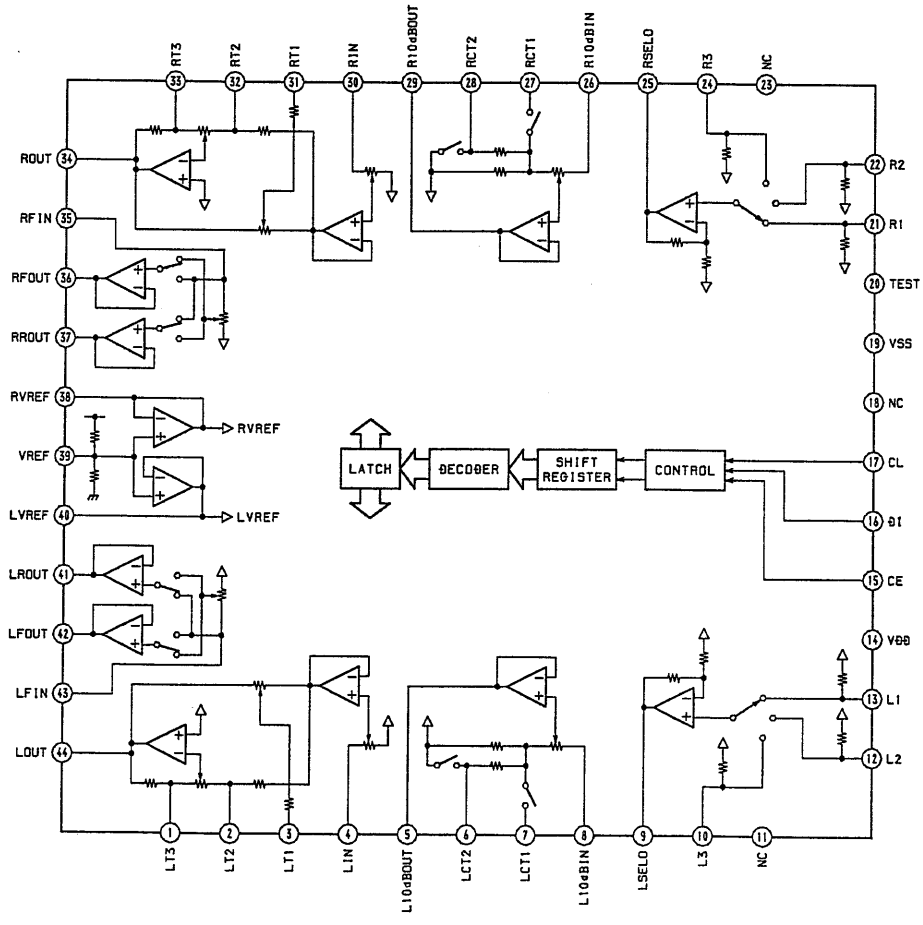

IC351 CXA2509Q-T4 (XR-6600RDS)

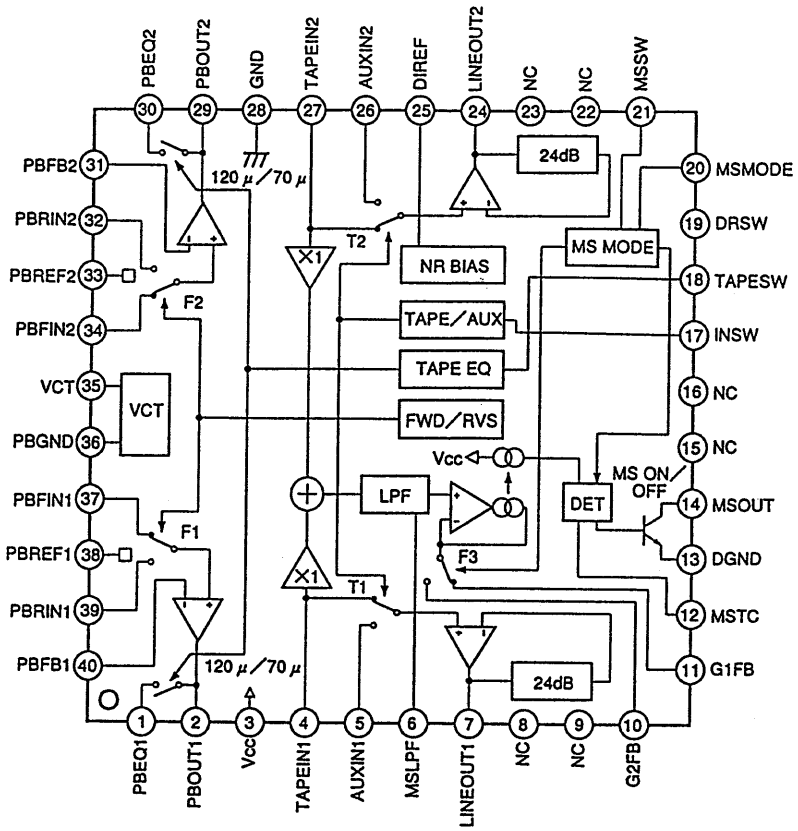

IC351 CXA2510Q-T4 (XR-6700RDS)

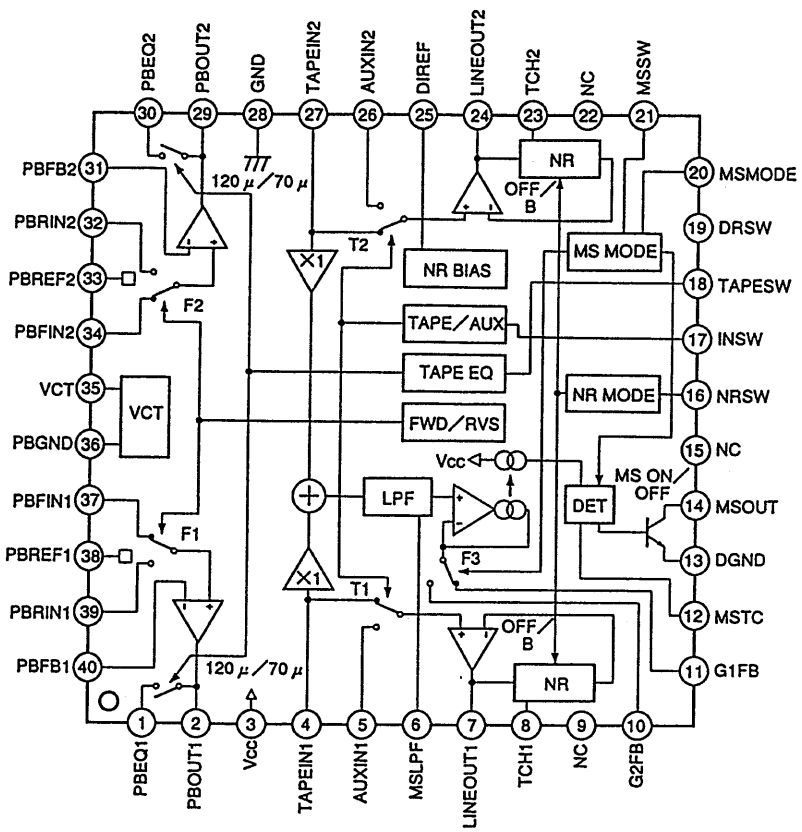

IC360 LB1638M

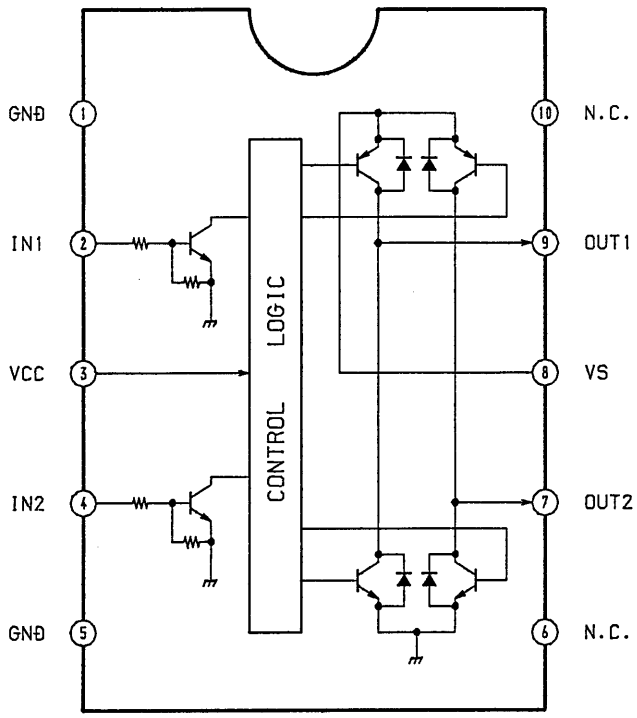

IC601 BA3918-V3

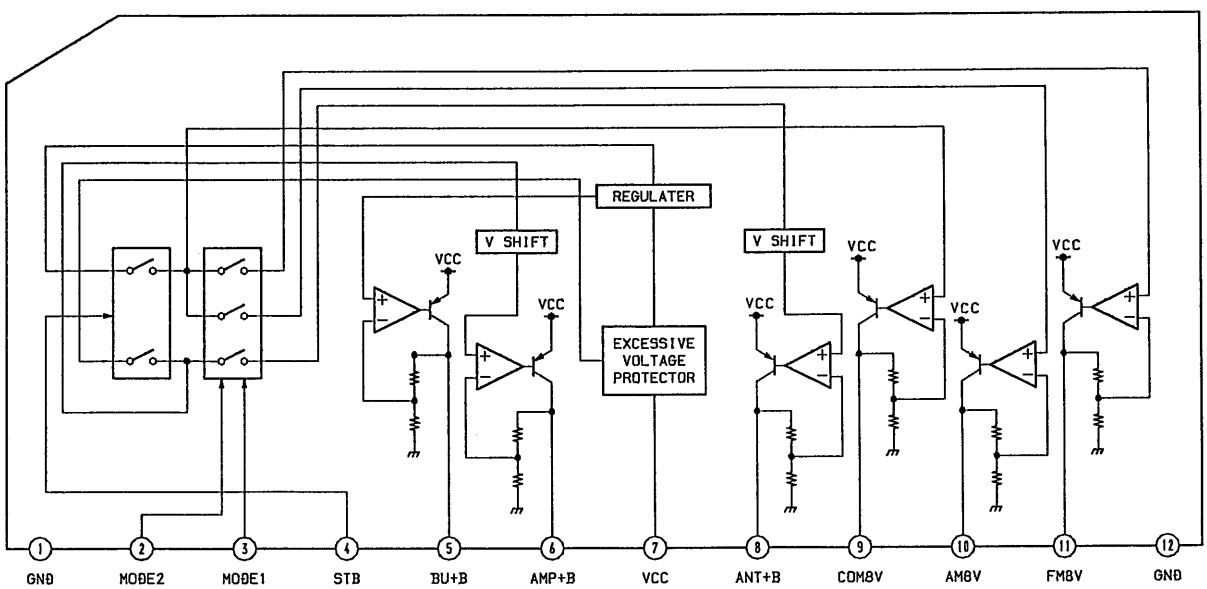

SECTION 7
EXPLODED VIEWS

SEE ADDITIONAL INFORMATION

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
  Example :
  KNOB, BALANCE (WHITE)... (RED)
  ↑ ↑
  Parts Color Cabinet's Color
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.
- Abbreviation
  G : German model

7-1. CHASSIS SECTION

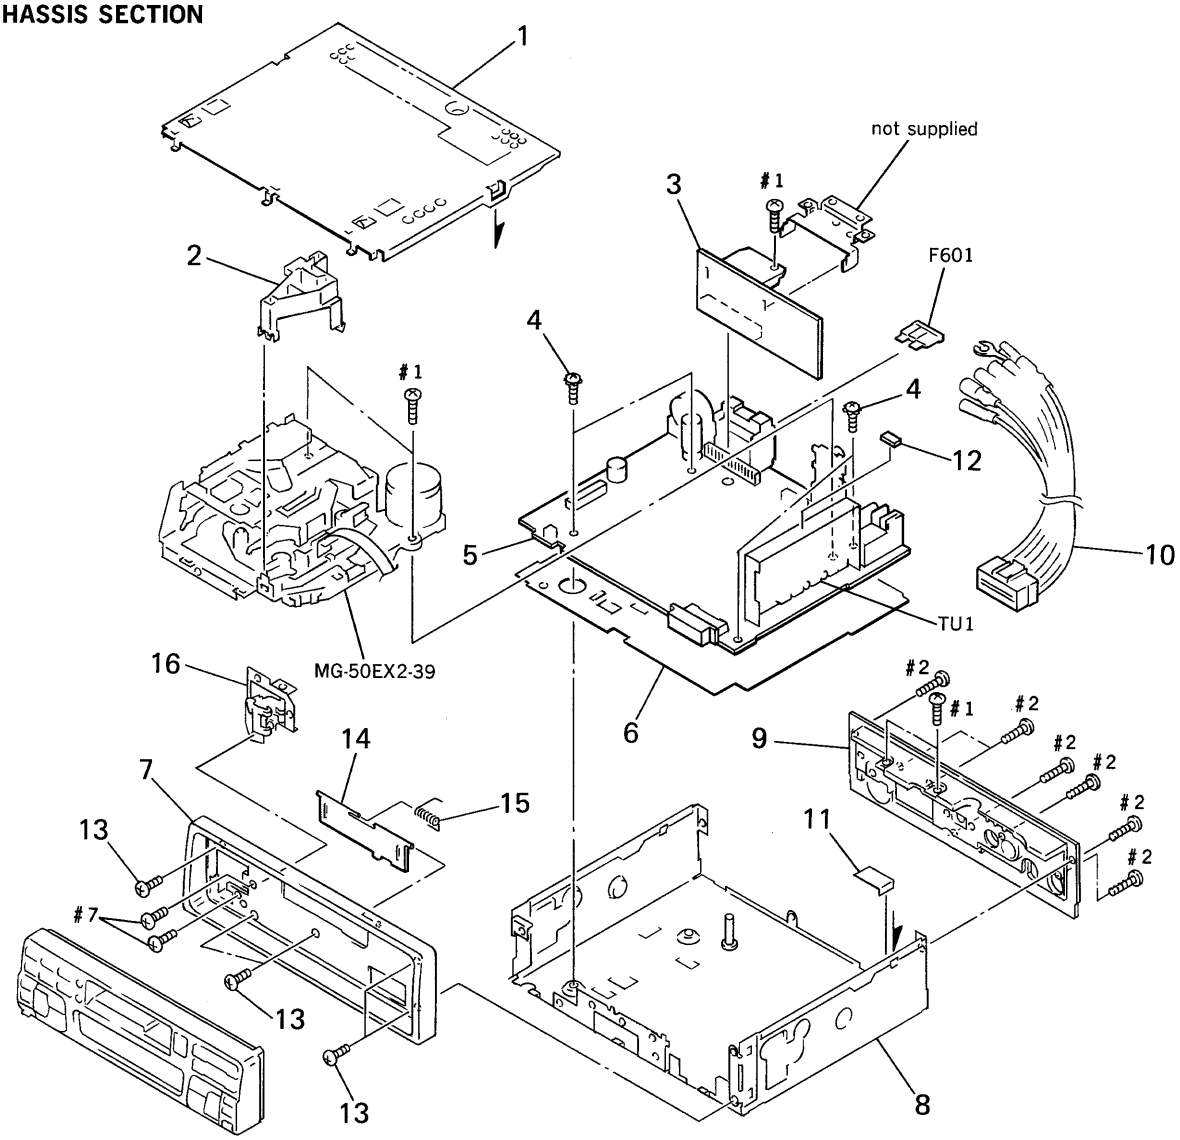

Ref. No.	Part No.	Description	Remark
* 1	X-3369-736-1	COVER ASSY	
2	3-927-799-01	GUIDE (CASSETTE)	
* 3	A-3309-056-A	AMPLIFIER BOARD, COMPLETE (6600RDS)	
* 3	A-3309-090-A	AMPLIFIER BOARD, COMPLETE (6700RDS)	
4	3-915-923-01	SCREW, GROUND POINT	
* 5	A-3309-081-A	MAIN BOARD, COMPLETE (6600RDS:G)	
* 5	A-3309-082-A	MAIN BOARD, COMPLETE (6600RDS:AEP,UK)	
* 5	A-3309-088-A	MAIN BOARD, COMPLETE (6700RDS:AEP,UK)	
* 5	A-3309-089-A	MAIN BOARD, COMPLETE (6700RDS:G)	
* 6	3-931-201-01	SHEET, INSULATING	
7	3-921-650-05	PANEL, SUB	
* 8	X-3371-519-1	CHASSIS ASSY	

Ref. No.	Part No.	Description	Remark
* 9	3-931-219-11	HEAT SINK (6700RDS)	
* 9	3-931-219-31	HEAT SINK (6600RDS)	
10	1-776-527-31	CORD (WITH CONNECTOR) (ISO)	
* 11	3-925-065-01	SHEET (CU)	
12	9-911-840-XX	CUSHION (U)	
13	3-907-995-01	SCREW (2.6X8) (BZN), +PTT	
14	3-922-165-53	DOOR, CASSETTE (6700RDS)	
14	3-922-165-83	DOOR, CASSETTE (6600RDS)	
15	3-913-076-01	SPRING (C DOOR), TORSION	
16	X-3367-636-1	LOCK ASSY	
F601	1-533-331-11	FUSE (BLADE TYPE) (AUTO FUSE) (15A)	
TU1	A-3282-012-A	TUNER UNIT (TUX-006)	

SEE ADDITIONAL INFORMATION

7-2. FRONT PANEL SECTION

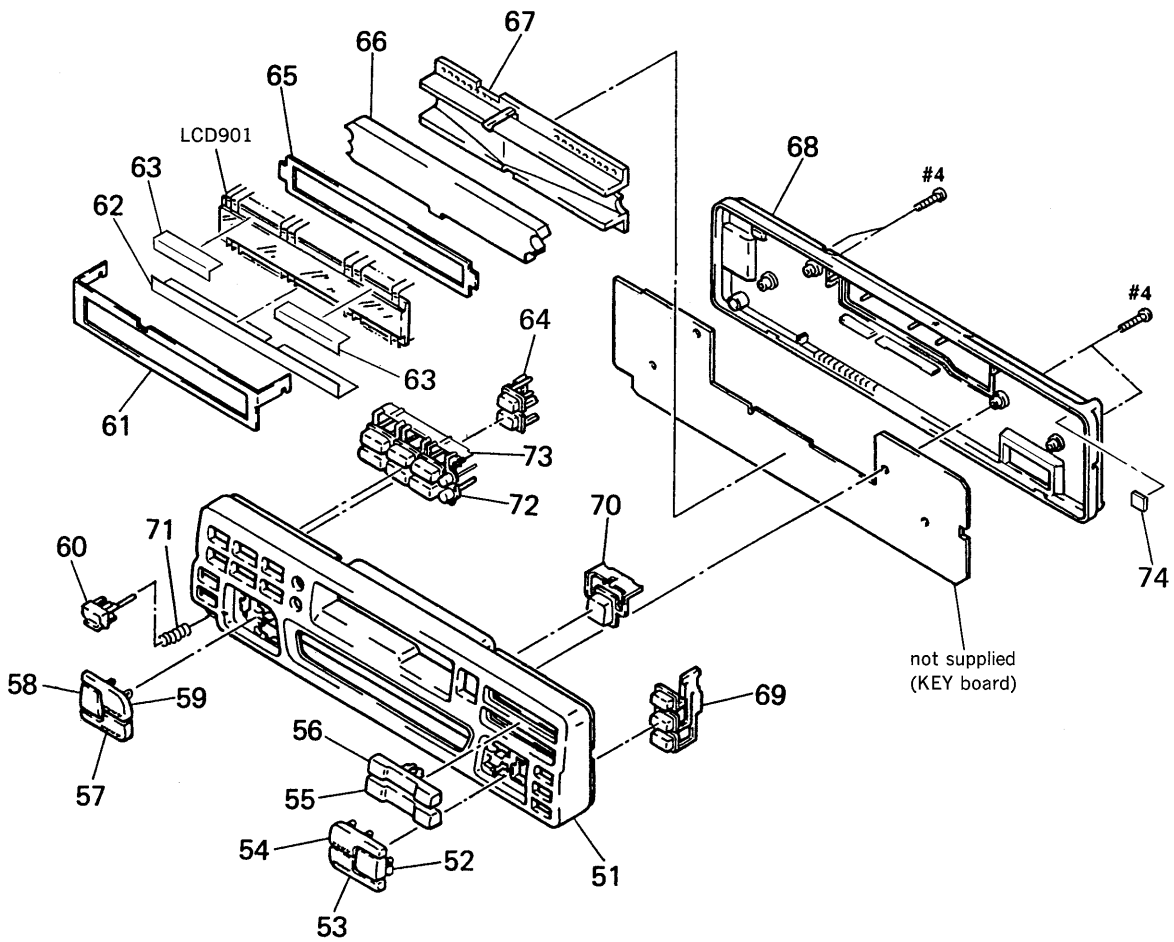

Ref. No.	Part No.	Description	Remark
51	3-921-648-51	PANEL, FRONT (6700RDS)	
51	3-932-828-01	PANEL, FRONT (6600RDS)	
52	3-921-916-11	BUTTON (CD. TAPE)	
53	3-921-909-31	BUTTON (AM)	
54	3-921-915-11	BUTTON (FM)	
55	3-921-652-01	BUTTON (PRESET)	
56	3-921-651-01	BUTTON (SEEK)	
57	3-921-911-01	BUTTON (-)	
58	3-921-902-01	BUTTON (SEL)	
59	3-921-910-01	BUTTON (+)	
60	3-918-693-01	SPRING (RELEASE)	
* 61	3-921-659-01	PLATE (LCD), GROUND	
* 62	3-921-726-02	SHEET (LCD) (L)	
* 63	3-921-727-02	SHEET (LCD) (S)	
64	3-921-903-01	BUTTON (2 GANG)	
* 65	3-935-363-01	SHEET (REFLECTOR)	
* 66	3-921-656-01	PLATE, LIGHT GUIDE	
* 67	3-921-957-01	HOLDER (LCD)	
68	3-921-649-01	PANEL, FRONT BACK	
69	3-921-898-21	BUTTON (3 GANG)	
70	3-921-653-01	BUTTON (EJECT)	
71	3-930-844-01	BUTTON (RELEASE)	
72	3-921-655-01	BUTTON (4-6) (6700RDS)	
72	3-921-655-21	BUTTON (4-6) (6600RDS)	
73	3-921-654-01	BUTTON (1-3) (6700RDS)	
73	3-921-654-11	BUTTON (1-3) (6600RDS)	
74	9-911-841-XX	CUSHION, CASSETTE LID	
LCD901	1-801-160-11	DISPLAY PANEL, LIQUID CRYSTAL	

7-3. MECHANISM DECK SECTION (MG-50EX2-39)

SEE ADDITIONAL INFORMATION

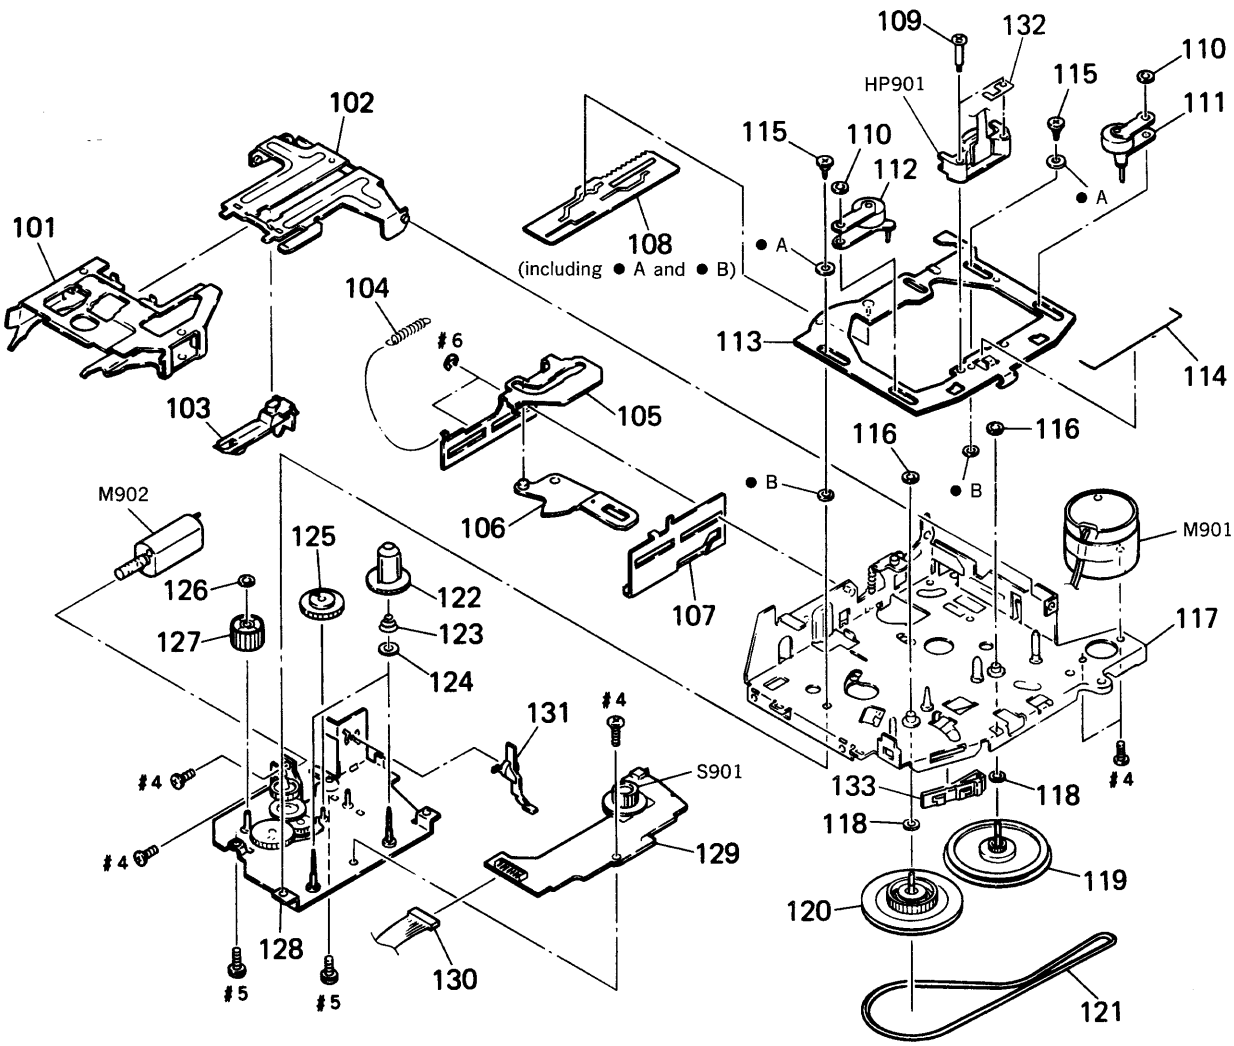

Ref. No.	Part No.	Description	Remark
101	3-928-222-01	HOUSING (2), CASSETTE	
102	3-912-882-01	HANGER (2), HOUSING	
103	3-912-884-01	CATCHER	
104	3-912-885-01	SPRING (LOADING LEVER), TENSION	
* 105	3-912-892-01	LEVER (B), LOADING	
* 106	3-912-883-01	ARM, SUCTION	
107	3-922-941-01	LEVER (LOADING A)	
* 108	X-3370-516-1	LEVER (SV) ASSY, MODE	
109	3-927-100-11	SCREW (+PS 2X10), SPECIAL	
110	3-579-788-01	WASHER, STOPPER	
111	X-3368-266-1	PINCH LEVER (F) ASSY	
112	X-3368-267-1	PINCH LEVER (R) ASSY	
113	X-3370-824-1	BASE ASSY (HD2), HEAD	
114	3-912-879-01	SPRING, PINCH PRESS	
115	3-931-184-01	SCREW (HB2), STEP	
116	3-364-151-01	WASHER	
117	X-3368-841-1	CHASSIS (SV) ASSY (A), MECHANICAL	
118	3-701-437-21	WASHER	
119	3-930-932-01	FLYWHEEL (F) (SEF)	

Ref. No.	Part No.	Description	Remark
120	X-3371-303-1	CLUTCH (SEF) ASSY, FR	
121	3-912-896-01	BELT	
122	X-3368-843-1	GEAR ASSY, REEL	
123	3-917-222-01	SPRING (B-T), COIL	
124	3-917-324-01	WASHER (B-T)	
125	3-912-888-03	GEAR (LOADING E)	
126	3-321-813-01	WASHER, COTTER POLYETHYLENE	
127	3-912-889-01	GEAR (LOADING F)	
128	X-3368-842-1	BRACKET (SV) ASSY, REEL	
129	1-589-604-11	REEL SENSOR BOARD	
130	1-765-460-12	CORD (WITH CONNECTOR)	
131	3-916-358-01	LEVER (TAPE IN 2)	
* 132	3-917-258-01	PLATE, GROUND	
133	3-919-553-01	GUIDE (BELT)	
HP901	1-500-196-21	HEAD, MAGNETIC (PLAYBACK)	
M901	X-3368-684-1	MOTOR ASSY, MAIN (CAPSTAN/REEL)	
M902	X-3368-685-1	MOTOR ASSY, SUB (LOADING/TAPE OPERATION)	
S901	1-692-885-11	SWITCH, ROTARY SLIDE (TAPE OPERATION)	

SEE ADDITIONAL INFORMATION

SECTION 8
ELECTRICAL PARTS LIST

AMPLIFIER

NOTE:
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms.
  METAL:Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F:nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u:μ, for example:
  uA..: μA.. uPA..: μPA..
  uPB..: μPB.. uPC..: μPC.. uPD..: μPD..
- CAPACITORS
  uF: μF
- COILS
  uH: μH

When indicating parts by reference number, please include the board.

- Abbreviation
  G : German model

Ref.No.	Part No.	Description			Remark
*	A-3309-056-A	AMPLIFIER BOARD, COMPLETE (6600RDS)			
*	A-3309-090-A	AMPLIFIER BOARD, COMPLETE (6700RDS)			
		**********			
	3-934-043-01	BRACKET (IC)			
	7-621-770-67	SCREW +PTT 2.6X6 (S)			
		< CAPACITOR >			
C801	1-126-157-11	ELECT	10uF	20%	16V
C802	1-126-157-11	ELECT	10uF	20%	16V
C803	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C804	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C805-808					
	1-136-165-00	FILM	0.1uF	5%	50V (6700RDS)
C821	1-126-157-11	ELECT	10uF	20%	16V
C822	1-126-157-11	ELECT	10uF	20%	16V
C823	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C824	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C825-828					
	1-136-165-00	FILM	0.1uF	5%	50V (6700RDS)
C851	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C852	1-126-967-11	ELECT	47uF	20%	16V
C853	1-124-257-00	ELECT	2.2uF	20%	50V
C854	1-164-346-11	CERAMIC CHIP	1uF		16V
C855	1-126-157-11	ELECT	10uF	20%	16V
C856	1-126-157-11	ELECT	10uF	20%	16V
C857	1-136-165-00	FILM	0.1uF	5%	50V
C859	1-124-584-00	ELECT	100uF	2%	10V
		< CONNECTOR >			
CN801	1-774-755-11	CONNECTOR, BOARD TO BOARD 16P			
CN802	1-774-810-11	CONNECTOR, BOARD TO BOARD 12P			
		< DIODE >			
D821	8-719-988-62	DIODE 1SS355			
D823	8-719-977-24	DIODE DTZ9.1B			
D824	8-719-976-88	DIODE UDZ3.9B			

Ref.No.	Part No.	Description			Remark
		< IC >			
IC801	8-759-369-41	IC HA13155 (6700RDS)			
IC801	8-759-369-42	IC HA13153 (6600RDS)			
		< JUMPER RESISTOR >			
JC801-803					
	1-216-295-00	CONDUCTOR, CHIP			(2012)
JC851	1-216-296-00	CONDUCTOR, CHIP			(3216)
JC854	1-216-296-00	CONDUCTOR, CHIP			(3216)
		< TRANSISTOR >			
Q801	8-729-920-21	TRANSISTOR DTC314TKH04			
Q802	8-729-920-21	TRANSISTOR DTC314TKH04			
Q821	8-729-920-21	TRANSISTOR DTC314TKH04			
Q822	8-729-920-21	TRANSISTOR DTC314TKH04			
Q851	8-729-921-25	TRANSISTOR FMC2			
		< RESISTOR >			
R801	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R802	1-216-202-00	METAL GLAZE	1.5K	5%	1/8W
R805-808					
	1-216-077-00	METAL CHIP	15K	5%	1/10W
R809	1-216-129-00	METAL CHIP	2.2M	5%	1/10W
R810	1-216-129-00	METAL CHIP	2.2M	5%	1/10W
R811-814					
	1-216-134-00	METAL CHIP	2.2	5%	1/8W (6700RDS)
R821	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R822	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R825-828					
	1-216-077-00	METAL CHIP	15K	5%	1/10W
R829	1-216-129-00	METAL CHIP	2.2M	5%	1/10W
R830	1-216-129-00	METAL CHIP	2.2M	5%	1/10W
R831-834					
	1-216-134-00	METAL CHIP	2.2	5%	1/8W (6700RDS)
R851	1-216-238-00	METAL CHIP	47K	5%	1/8W
R852	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R853	1-216-166-00	METAL GLAZE	47	5%	1/8W
R854	1-216-073-00	METAL CHIP	10K	5%	1/10W

Ref.No.	Part No.	Description			Remark
R855	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R856	1-216-073-00	METAL CHIP	10K	5%	1/10W
R857	1-216-049-11	METAL GLAZE	1K	5%	1/10W

****

KEY BOARD
****

*	3-921-656-01	PLATE, LIGHT GUIDE	
	3-921-957-01	HOLDER (LCD)	
*	3-921-659-01	PLATE (LCD), GROUND	
*	3-921-726-01	SHEET (LCD) (L)	
*	3-921-727-01	SHEET (LCD) (S)	
*	3-935-363-01	SHEET (REFLECTOR)	

< CAPACITOR >

C901	1-163-033-11	CERAMIC CHIP	0.022uF		50V
C902	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C903	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C904	1-163-251-11	CERAMIC CHIP	100PF	5%	50V

< CONNECTOR >

CNP901	1-764-423-11	PIN, CONNECTOR 12P

< DIODE >

D901	8-719-988-62	DIODE	1SS355 (6700RDS)
D902	8-719-976-99	DIODE	DTZ5.1B
D903	8-719-056-84	DIODE	UDZ-TE-17-7.5B (6700RDS)
D904	8-719-056-84	DIODE	UDZ-TE-17-7.5B
D905	8-719-056-84	DIODE	UDZ-TE-17-7.5B
D906	8-719-056-84	DIODE	UDZ-TE-17-7.5B
D907	8-719-056-84	DIODE	UDZ-TE-17-7.5B

< IC >

IC901	8-759-365-90	IC	LC75824W

< JUMPER RESISTOR >

JC901	1-216-295-00	CONDUCTOR, CHIP	(2012)	(6600RDS)
JC902	1-216-295-00	CONDUCTOR, CHIP	(2012)	(6700RDS)

< LIQUID CRYSTAL DISPLAY >

LCD901	1-801-160-11	DISPLAY PANEL, LIQUID CRYSTAL

< SWITCH >

LSW901	1-762-141-12	SWITCH, KEY BOARD (WITH LED)	(OFF) (6600RDS:AMBER)
LSW901	1-762-142-12	SWITCH, KEY BOARD (WITH LED)	(OFF) (6600RDS:GREEN)
LSW901	1-762-143-12	SWITCH, KEY BOARD (WITH LED)	(OFF) (6700RDS)
LSW902	1-762-141-12	SWITCH, KEY BOARD (WITH LED)	(TUNER) (6600RDS:AMBER)
LSW902	1-762-142-12	SWITCH, KEY BOARD (WITH LED)	(TUNER) (6600RDS:GREEN)
LSW902	1-762-143-12	SWITCH, KEY BOARD (WITH LED)	(TUNER) (6700RDS)
LSW903	1-762-141-12	SWITCH, KEY BOARD (WITH LED)	(AF/TA) (6600RDS:AMBER)
LSW903	1-762-142-12	SWITCH, KEY BOARD (WITH LED)	(AF/TA) (6600RDS:GREEN)
LSW903	1-762-143-12	SWITCH, KEY BOARD (WITH LED)	(AF/TA) (6700RDS)
LSW905	1-762-141-12	SWITCH, KEY BOARD (WITH LED)	(SENS) (6600RDS:AMBER)
LSW905	1-762-142-12	SWITCH, KEY BOARD (WITH LED)	(SENS) (6600RDS:GREEN)
LSW905	1-762-143-12	SWITCH, KEY BOARD (WITH LED)	(SENS) (6700RDS)
LSW906	1-762-141-12	SWITCH, KEY BOARD (WITH LED)	(PTY) (6600RDS:AMBER)
LSW906	1-762-142-12	SWITCH, KEY BOARD (WITH LED)	(PTY) (6600RDS:GREEN)
LSW906	1-762-143-12	SWITCH, KEY BOARD (WITH LED)	(PTY) (6700RDS)
LSW907	1-762-141-12	SWITCH, KEY BOARD (WITH LED)	(D DSPL) (6600RDS:AMBER)
LSW907	1-762-142-12	SWITCH, KEY BOARD (WITH LED)	(D DSPL) (6600RDS:GREEN)
LSW907	1-762-143-12	SWITCH, KEY BOARD (WITH LED)	(D DSPL) (6700RDS)
LSW908	1-762-141-12	SWITCH, KEY BOARD (WITH LED)	(B BTM) (6600RDS:AMBER)
LSW908	1-762-142-12	SWITCH, KEY BOARD (WITH LED)	(B BTM) (6600RDS:GREEN)
LSW908	1-762-143-12	SWITCH, KEY BOARD (WITH LED)	(B BTM) (6700RDS)
LSW909	1-762-141-12	SWITCH, KEY BOARD (WITH LED)	(-) (6600RDS:AMBER)
LSW909	1-762-142-12	SWITCH, KEY BOARD (WITH LED)	(-) (6600RDS:GREEN)
LSW909	1-762-143-12	SWITCH, KEY BOARD (WITH LED)	(-) (6700RDS)
LSW910	1-762-141-12	SWITCH, KEY BOARD (WITH LED)	(SEL) (6600RDS:AMBER)
LSW910	1-762-142-12	SWITCH, KEY BOARD (WITH LED)	(SEL) (6600RDS:GREEN)
LSW910	1-762-143-12	SWITCH, KEY BOARD (WITH LED)	(SEL) (6700RDS)
LSW911	1-762-141-12	SWITCH, KEY BOARD (WITH LED)	(+) (6600RDS:AMBER)

Ref. No.	Part No.	Description	Remark
LSW911	1-762-142-12	SWITCH, KEY BOARD (WITH LED) (+)	(6600RDS:GREEN)
LSW911	1-762-143-12	SWITCH, KEY BOARD (WITH LED) (+)	(6700RDS)
LSW912	1-762-141-12	SWITCH, KEY BOARD (WITH LED) (LOUD)	(6600RDS:AMBER)
LSW912	1-762-142-12	SWITCH, KEY BOARD (WITH LED) (LOUD)	(6600RDS:GREEN)
LSW912	1-762-143-12	SWITCH, KEY BOARD (WITH LED) (LOUD)	(6700RDS)
LSW913	1-762-141-12	SWITCH, KEY BOARD (WITH LED) (MUTE)	(6600RDS:AMBER)
LSW913	1-762-142-12	SWITCH, KEY BOARD (WITH LED) (MUTE)	(6600RDS:GREEN)
LSW913	1-762-143-12	SWITCH, KEY BOARD (WITH LED) (MUTE)	(6700RDS)
LSW921	1-762-141-12	SWITCH, KEY BOARD (WITH LED) (⏏)	(6600RDS:AMBER)
LSW921	1-762-142-12	SWITCH, KEY BOARD (WITH LED) (⏏)	(6600RDS:GREEN)
LSW921	1-762-143-12	SWITCH, KEY BOARD (WITH LED) (⏏)	(6700RDS)
LSW922	1-762-141-12	SWITCH, KEY BOARD (WITH LED) (TAPE ◀▮▶)	(6600RDS:AMBER)
LSW922	1-762-142-12	SWITCH, KEY BOARD (WITH LED) (TAPE ◀▮▶)	(6600RDS:GREEN)
LSW922	1-762-143-12	SWITCH, KEY BOARD (WITH LED) (TAPE ◀▮▶)	(6700RDS)
LSW923	1-762-141-12	SWITCH, KEY BOARD (WITH LED) (- ◀◀ (PRESET))	(6600RDS:AMBER)
LSW923	1-762-142-12	SWITCH, KEY BOARD (WITH LED) (- ◀◀ (PRESET))	(6600RDS:GREEN)
LSW923	1-762-143-12	SWITCH, KEY BOARD (WITH LED) (- ◀◀ (PRESET))	(6700RDS)
LSW924	1-762-141-12	SWITCH, KEY BOARD (WITH LED) (+ ▶▶ (PRESET))	(6600RDS:AMBER)
LSW924	1-762-142-12	SWITCH, KEY BOARD (WITH LED) (+ ▶▶ (PRESET))	(6600RDS:GREEN)
LSW924	1-762-143-12	SWITCH, KEY BOARD (WITH LED) (+ ▶▶ (PRESET))	(6700RDS)
LSW925	1-762-141-12	SWITCH, KEY BOARD (WITH LED) (+ ▶▶▮ (SEEK AMS))	(6600RDS:AMBER)
LSW925	1-762-142-12	SWITCH, KEY BOARD (WITH LED) (+ ▶▶▮ (SEEK AMS))	(6600RDS:GREEN)
LSW925	1-762-143-12	SWITCH, KEY BOARD (WITH LED) (+ ▶▶▮ (SEEK AMS))	(6700RDS)
LSW926	1-762-141-12	SWITCH, KEY BOARD (WITH LED) (- ▮◀◀ (SEEK AMS))	(6600RDS:AMBER)
LSW926	1-762-142-12	SWITCH, KEY BOARD (WITH LED) (- ▮◀◀ (SEEK AMS))	(6600RDS:GREEN)
LSW926	1-762-143-12	SWITCH, KEY BOARD (WITH LED) (- ▮◀◀ (SEEK AMS))	(6700RDS)
LSW927	1-762-141-12	SWITCH, KEY BOARD (WITH LED) (6 BL. SKIP)	(6600RDS:AMBER)
LSW927	1-762-142-12	SWITCH, KEY BOARD (WITH LED) (6 BL. SKIP)	(6600RDS:GREEN)
LSW927	1-762-143-12	SWITCH, KEY BOARD (WITH LED) (6 BL. SKIP)	(6700RDS)
LSW928	1-762-141-12	SWITCH, KEY BOARD (WITH LED) (5 ATA)	(6600RDS:AMBER)
LSW928	1-762-142-12	SWITCH, KEY BOARD (WITH LED) (5 ATA)	(6600RDS:GREEN)
LSW928	1-762-143-12	SWITCH, KEY BOARD (WITH LED) (5 ATA)	(6700RDS)
LSW929	1-762-141-12	SWITCH, KEY BOARD (WITH LED) (4)	(6600RDS:AMBER)
LSW929	1-762-142-12	SWITCH, KEY BOARD (WITH LED) (4)	(6600RDS:GREEN)
LSW929	1-762-143-12	SWITCH, KEY BOARD (WITH LED) (4 MTL)	(6700RDS)
LSW930	1-762-141-12	SWITCH, KEY BOARD (WITH LED) (1 INTRO)	(6600RDS:AMBER)
LSW930	1-762-142-12	SWITCH, KEY BOARD (WITH LED) (1 INTRO)	(6600RDS:GREEN)
LSW930	1-762-143-12	SWITCH, KEY BOARD (WITH LED) (1 INTRO)	(6700RDS)
LSW931	1-762-141-12	SWITCH, KEY BOARD (WITH LED) (2 REP)	(6600RDS:AMBER)
LSW931	1-762-142-12	SWITCH, KEY BOARD (WITH LED) (2 REP)	(6600RDS:GREEN)
LSW931	1-762-143-12	SWITCH, KEY BOARD (WITH LED) (2 REP)	(6700RDS)
LSW932	1-762-141-12	SWITCH, KEY BOARD (WITH LED) (3)	(6600RDS:AMBER)
LSW932	1-762-142-12	SWITCH, KEY BOARD (WITH LED) (3)	(6600RDS:GREEN)
LSW932	1-762-143-12	SWITCH, KEY BOARD (WITH LED) (3 □□)	(6700RDS)

< PILOT LAMP >

PL901	1-517-407-21	LAMP, PILOT	(6700RDS)
PL902	1-517-407-21	LAMP, PILOT	(6700RDS)
PL903	1-517-406-21	LAMP, PILOT	(6700RDS, 6600RDS:AMBER)
PL903	1-517-407-21	LAMP, PILOT	(6600RDS:GREEN)
PL904	1-517-406-21	LAMP, PILOT	(6700RDS, 6600RDS:AMBER)
PL904	1-517-407-21	LAMP, PILOT	(6600RDS:GREEN)

< TRANSISTOR >

Q901	8-729-904-66	TRANSISTOR	DTD113EK (6700RDS)
Q902	8-729-904-66	TRANSISTOR	DTD113EK (6700RDS)
Q903	8-729-904-66	TRANSISTOR	DTD113EK (6700RDS)
Q904	8-729-904-66	TRANSISTOR	DTD113EK (6700RDS)

KEY **MAIN**

SEE ADDITIONAL INFORMATION

Ref. No.	Part No.	Description			Remark
		< RESISTOR >			
R901-903					
	1-216-045-00	METAL CHIP	680	5%	1/10W
R904	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R905	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R906	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R907	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R908	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R909	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R910	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R911	1-216-073-00	METAL CHIP	10K	5%	1/10W
R912	1-216-077-00	METAL CHIP	15K	5%	1/10W
R921-923					
	1-216-045-00	METAL CHIP	680	5%	1/10W
R924	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R925	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R926	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R927	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R928	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R929	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R930	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R931	1-216-073-00	METAL CHIP	10K	5%	1/10W
R951	1-216-041-00	METAL CHIP	470	5%	1/10W
R952	1-216-109-00	METAL CHIP	330K	5%	1/10W
R953-956					
	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R961	1-216-025-00	METAL GLAZE	100	5%	1/10W (6600RDS:GREEN)
R961	1-216-029-00	METAL CHIP	150	5%	1/10W (6700RDS, 6600RDS:AMBER)
R962	1-216-025-00	METAL GLAZE	100	5%	1/10W (6700RDS)
R963	1-216-033-00	METAL CHIP	220	5%	1/10W (6600RDS:GREEN)
R963	1-216-037-00	METAL CHIP	330	5%	1/10W (6700RDS, 6600RDS:AMBER)
R964	1-216-033-00	METAL CHIP	220	5%	1/10W (6700RDS)
R965	1-216-033-00	METAL CHIP	220	5%	1/10W (6600RDS:GREEN)
R965	1-216-037-00	METAL CHIP	330	5%	1/10W (6700RDS, 6600RDS:AMBER)
R966	1-216-033-00	METAL CHIP	220	5%	1/10W (6700RDS)
R967	1-216-033-00	METAL CHIP	220	5%	1/10W (6600RDS:GREEN)
R967	1-216-037-00	METAL CHIP	330	5%	1/10W (6700RDS, 6600RDS:AMBER)
R968	1-216-033-00	METAL CHIP	220	5%	1/10W (6700RDS)
R969	1-216-025-00	METAL GLAZE	100	5%	1/10W (6600RDS:GREEN)
R969	1-216-029-00	METAL CHIP	150	5%	1/10W (6700RDS, 6600RDS:AMBER)
R970	1-216-025-00	METAL GLAZE	100	5%	1/10W (6700RDS)
R971	1-216-033-00	METAL CHIP	220	5%	1/10W (6600RDS:GREEN)
R971	1-216-037-00	METAL CHIP	330	5%	1/10W (6700RDS, 6600RDS:AMBER)
R972	1-216-033-00	METAL CHIP	220	5%	1/10W (6700RDS)
R973	1-216-025-00	METAL GLAZE	100	5%	1/10W (6600RDS:GREEN)
R973	1-216-029-00	METAL CHIP	150	5%	1/10W (6700RDS, 6600RDS:AMBER)
R974	1-216-174-00	METAL GLAZE	100	5%	1/8W (6700RDS)
R975	1-216-296-00	CONDUCTOR, CHIP		(3216)	(6700RDS)
R976	1-216-025-00	METAL GLAZE	100	5%	1/10W (6700RDS)
R977	1-216-049-11	METAL GLAZE	1K	5%	1/10W (6700RDS)
R978	1-216-296-00	CONDUCTOR, CHIP		(3216)	
**********					
*	A-3309-081-A	MAIN BOARD, COMPLETE (6600RDS:G)			
*	A-3309-082-A	MAIN BOARD, COMPLETE (6600RDS:AEP, UK)			
*	A-3309-088-A	MAIN BOARD, COMPLETE (6700RDS:AEP, UK)			
*	A-3309-089-A	MAIN BOARD, COMPLETE (6700RDS:G)			
		**********			
		< CAPACITOR >			
C1	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C2	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C3-5					
	1-124-584-00	ELECT	100uF	20%	10V
C6	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C7	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C9	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C10	1-126-157-11	ELECT	10uF	20%	16V
C11	1-136-169-00	FILM	0.22uF	5%	50V
C12	1-136-165-00	FILM	0.1uF	5%	50V
C13	1-137-368-11	FILM	0.0047uF	5%	50V
C14	1-137-364-11	FILM	0.001uF	5%	50V
C15	1-124-584-00	ELECT	100uF	20%	10V
C16	1-136-159-00	FILM	0.033uF	5%	50V
C17	1-137-366-11	FILM	0.0022uF	5%	50V
C18-21					
	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C22	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C23	1-126-157-11	ELECT	10uF	20%	16V

SEE ADDITIONAL INFORMATION

MAIN

Ref. No.	Part No.	Description			Remark
C24	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C25	1-163-104-00	CERAMIC CHIP	30PF	5%	50V
C26	1-163-127-00	CERAMIC CHIP	270PF	5%	50V
C27	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C28	1-126-157-11	ELECT	10uF	20%	16V
C29	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C30	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C31	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C32	1-126-301-11	ELECT	1uF	20%	50V
C35	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C101	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C102	1-126-301-11	ELECT	1uF	20%	50V
C103	1-165-320-11	CERAMIC CHIP	0.47uF	10%	16V
C111	1-126-157-11	ELECT	10uF	20%	16V
C112	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C113	1-126-157-11	ELECT	10uF	20%	16V
C114	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C115	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C116	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C118	1-126-157-11	ELECT	10uF	20%	16V
C119	1-126-157-11	ELECT	10uF	20%	16V
C122	1-163-251-11	CERAMIC CHIP	100PF	5%	50V (6700RDS)
C151	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C152	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C153	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C155	1-124-234-00	ELECT	22uF	20%	16V
C157	1-124-584-00	ELECT	100uF	20%	10V
C158	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C201	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C202	1-126-301-11	ELECT	1uF	20%	50V
C203	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C211	1-126-157-11	ELECT	10uF	20%	16V
C212	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C213	1-126-157-11	ELECT	10uF	20%	16V
C214	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C215	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C216	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
C218	1-126-157-11	ELECT	10uF	20%	16V
C219	1-126-157-11	ELECT	10uF	20%	16V
C222	1-163-251-11	CERAMIC CHIP	100PF	5%	50V (6700RDS)
C301	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C302	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C303	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C304	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C305	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C306	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V (6700RDS)
C308	1-124-463-00	ELECT	0.1uF	20%	50V
C309	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C350	1-124-234-00	ELECT	22uF	20%	16V
C351	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C353	1-124-465-00	ELECT	0.47uF	20%	50V
C354	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C356	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C357	1-124-584-00	ELECT	100uF	20%	10V
C362	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C363	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C364	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C365	1-126-157-11	ELECT	10uF	20%	16V
C366	1-124-234-00	ELECT	22uF	20%	16V
C367	1-124-120-11	ELECT	220uF	20%	25V
C401	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C402	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C403	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C404	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C405	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C406	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V (6700RDS)
C408	1-124-463-00	ELECT	0.1uF	20%	50V
C409	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C501	1-124-584-00	ELECT	100uF	20%	10V
C502	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C503	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C504	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C505	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C506	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C507	1-164-346-11	CERAMIC CHIP	1uF		16V
C509	1-163-059-00	CERAMIC CHIP	0.01uF	10%	50V
C601	1-163-081-00	CERAMIC CHIP	0.22uF		25V
C603	1-125-705-11	CAPACITOR	0.22F		5.5V
C604	1-124-443-00	ELECT	100uF	20%	10V
C605	1-126-157-11	ELECT	10uF	20%	16V
C606	1-124-234-00	ELECT	22uF	20%	16V
C607	1-126-157-11	ELECT	10uF	20%	16V
C608	1-126-967-11	ELECT	47uF	20%	16V
C609	1-126-967-11	ELECT	47uF	20%	16V
C610	1-124-234-00	ELECT	22uF	20%	16V
C612	1-126-301-11	ELECT	1uF	20%	50V
C613	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C614	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C615	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C616	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C617	1-126-157-11	ELECT	10uF	20%	16V
C619	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C650	1-126-936-11	ELECT	3300uF	20%	16V

MAIN

SEE ADDITIONAL INFORMATION

Ref. No.	Part No.	Description	Remark
		< JACK >	
CN150	1-774-698-11	JACK, PIN 2P (LINE OUT) (6700RDS)	
		< CONNECTOR >	
CN351	1-766-260-11	CONNECTOR, FFC/FPC (ZIF) 7P	
* CN352	1-506-995-11	PIN, CONNECTOR (PC BOARD) 13P	
CN602	1-764-422-11	PLUG, CONNECTOR 12P	
* CN603	1-770-212-11	CONNECTOR, BOARD TO BOARD 16P	
CN604	1-774-809-11	CONNECTOR, BOARD TO BOARD 12P	
CN605	1-774-701-11	PIN, CONNECTOR 16P	
		< DISCHARGE GAP >	
CP1	1-519-504-11	GAP, DISCHARGE	
		< DIODE >	
D2	8-719-991-65	DIODE SB02W03C	
D3	8-719-977-27	DIODE DTZ10A	
D350	8-719-988-62	DIODE 1SS355	
D361	8-719-977-27	DIODE DTZ10A	
D362	8-719-988-62	DIODE 1SS355	
D501	8-719-976-88	DIODE UDZ3.9B	
D504	8-719-988-62	DIODE 1SS355	
D505	8-719-988-62	DIODE 1SS355	
D506	8-719-988-62	DIODE 1SS355	
D601	8-719-978-50	DIODE DTZ-TT11-10C	
D605	8-719-977-03	DIODE DTZ5.6B	
D606	8-719-977-17	DIODE DTZ7.5C	
D607	8-719-914-43	DIODE DAN202K	
D609	8-719-109-97	DIODE RD6.8ES-B2	
D610	8-719-109-97	DIODE RD6.8ES-B2	
D611	8-719-109-97	DIODE RD6.8ES-B2	
D612	8-719-109-97	DIODE RD6.8ES-B2	
D613	8-719-109-97	DIODE RD6.8ES-B2	
D614	8-719-109-97	DIODE RD6.8ES-B2	
D615	8-719-056-84	DIODE UDZ-TE-17-7.5B	
D616	8-719-923-93	DIODE MTZJ-T-77-16C	
D617	8-719-056-84	DIODE UDZ-TE-17-7.5B	
D618	8-719-109-97	DIODE RD6.8ES-B2	
D619	8-719-109-97	DIODE RD6.8ES-B2	
D620	8-719-200-82	DIODE 11ES2	
D621	8-719-200-82	DIODE 11ES2	
D622	8-719-056-84	DIODE UDZ-TE-17-7.5B	
D624	8-719-988-62	DIODE 1SS355	
D650	8-719-049-38	DIODE 1N5404TU	
D651	8-719-977-69	DIODE DTZ24B	
D652	8-719-977-69	DIODE DTZ24B	
D653	8-719-056-84	DIODE UDZ-TE-17-7.5B	
D701	8-719-923-93	DIODE MTZJ-T-77-16C	
D702	8-719-977-17	DIODE DTZ7.5C	
		< IC >	
IC1	8-759-242-66	IC TC4W66F	
IC2	8-759-823-81	IC LC7216M	
IC3	8-759-163-63	IC TDA7330BD-013TR	
IC151	8-759-368-11	IC LC75372E	
IC152	8-759-909-71	IC BA4558F	
IC351	8-752-075-58	IC CXA2510Q-T4 (6700RDS)	
IC351	8-752-076-05	IC CXA2509Q-T4 (6600RDS)	
IC360	8-759-823-87	IC LB1638M	
IC501	8-759-372-63	IC MN1884820S3T	
IC571	8-759-363-81	IC XC61AN4002PR	
IC601	8-759-347-50	IC BA3918-V3	
		< JACK >	
J1	1-770-279-11	JACK (ISO) (ANTENNA)	
J501	1-566-822-41	JACK (REMOTE IN)	
		< JUMPER RESISTOR >	
JC2-6	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC9-18	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC351	1-216-296-00	CONDUCTOR, CHIP (3216)	(6600RDS)
JC354	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC501	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC502	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC504-513	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC515-517	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC519-523	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC525-534	1-216-296-00	CONDUCTOR, CHIP (3216)	
		< COIL >	
L4	1-410-971-31	INDUCTOR 10uH	
L501	1-410-971-31	INDUCTOR 10uH	
L601	1-411-669-11	COIL, CHOKE	
		< TRANSISTOR >	
Q2	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q3	8-729-021-94	TRANSISTOR 2SK1657-T1B	
Q4	8-729-900-53	TRANSISTOR DTC114EK	
Q101	8-729-920-21	TRANSISTOR DTC314TKH04	
Q201	8-729-920-21	TRANSISTOR DTC314TKH04	

SEE ADDITIONAL INFORMATION

MAIN

Ref. No.	Part No.	Description			Remark
Q361	8-729-922-65	TRANSISTOR	2SD1760F5-PQR		
Q362	8-729-920-41	TRANSISTOR	FMC3		
Q364	8-729-106-60	TRANSISTOR	2SB1115A		
Q365	8-729-900-53	TRANSISTOR	DTC114EK		
Q501	8-729-921-25	TRANSISTOR	FMC2		
Q503	8-729-120-28	TRANSISTOR	2SC1623-L5L6		
Q603	8-729-030-18	TRANSISTOR	2SD2525		
Q605	8-729-921-25	TRANSISTOR	FMC2		
Q606	8-729-027-23	TRANSISTOR	DTA114EKA-T146		
Q607	8-729-030-18	TRANSISTOR	2SD2525		
Q608	8-729-027-23	TRANSISTOR	DTA114EKA-T146		
Q609	8-729-922-65	TRANSISTOR	2SD1760F5-PQR		
Q610	8-729-120-28	TRANSISTOR	2SC1623-L5L6		
Q611	8-729-120-28	TRANSISTOR	2SC1623-L5L6		
Q612	8-729-120-28	TRANSISTOR	2SC1623-L5L6		
Q701	8-729-900-53	TRANSISTOR	DTC114EK		
Q702	8-729-921-25	TRANSISTOR	FMC2		
		< RESISTOR >			
R1	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R2	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R3	1-216-073-00	METAL CHIP	10K	5%	1/10W
R4	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R5	1-216-037-00	METAL CHIP	330	5%	1/10W
R6	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R7	1-216-073-00	METAL CHIP	10K	5%	1/10W
R8	1-216-238-00	METAL GLAZE	47K	5%	1/8W
R9	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R10	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R11	1-216-075-00	METAL CHIP	12K	5%	1/10W
R12	1-216-238-00	METAL GLAZE	47K	5%	1/8W
R13	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R14	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R15	1-216-073-00	METAL CHIP	10K	5%	1/10W
R16	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R17	1-216-129-00	METAL CHIP	2.2M	5%	1/10W
R19	1-216-073-00	METAL CHIP	10K	5%	1/10W
R101	1-216-065-00	METAL CHIP	4.7K	5%	1/10W (G)
R101	1-216-073-00	METAL CHIP	10K	5%	1/10W (AEP, UK)
R102	1-216-079-00	METAL CHIP	18K	5%	1/10W (AEP, UK)
R102	1-216-085-00	METAL CHIP	33K	5%	1/10W (G)
R103	1-216-077-00	METAL CHIP	15K	5%	1/10W
R104	1-216-085-00	METAL CHIP	33K	5%	1/10W
R108	1-216-230-00	METAL GLAZE	22K	5%	1/8W
R109	1-216-085-00	METAL CHIP	33K	5%	1/10W
R151	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R152	1-216-065-00	METAL CHIP	4.7K	5%	1/10W

Ref. No.	Part No.	Description			Remark
R201	1-216-065-00	METAL CHIP	4.7K	5%	1/10W (G)
R201	1-216-073-00	METAL CHIP	10K	5%	1/10W (AEP, UK)
R202	1-216-079-00	METAL CHIP	18K	5%	1/10W (AEP, UK)
R202	1-216-085-00	METAL CHIP	33K	5%	1/10W (G)
R203	1-216-226-00	METAL GLAZE	15K	5%	1/8W
R204	1-216-085-00	METAL CHIP	33K	5%	1/10W
R208	1-216-230-00	METAL GLAZE	22K	5%	1/8W
R209	1-216-085-00	METAL CHIP	33K	5%	1/10W
R303	1-216-076-00	METAL CHIP	13K	5%	1/10W
R304	1-216-077-00	METAL CHIP	15K	5%	1/10W (6700RDS)
R305	1-216-258-00	METAL CHIP	330K	5%	1/8W
R306	1-216-041-00	METAL CHIP	470	5%	1/10W (6600RDS)
R307	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R308	1-216-079-00	METAL CHIP	18K	5%	1/10W
R351	1-208-812-11	METAL GLAZE	18K	2%	1/10W
R352	1-216-109-00	METAL CHIP	330K	5%	1/10W
R353	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R354	1-216-077-00	METAL CHIP	15K	5%	1/10W
R355	1-216-009-00	METAL GLAZE	22	5%	1/10W
R361	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R362	1-249-389-11	CARBON	4.7	5%	1/4W
R363	1-249-389-11	CARBON	4.7	5%	1/4W
R364	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R365	1-216-214-00	METAL GLAZE	4.7K	5%	1/8W
R403	1-216-076-00	METAL CHIP	13K	5%	1/10W
R404	1-216-077-00	METAL CHIP	15K	5%	1/10W (6700RDS)
R405	1-216-109-00	METAL CHIP	330K	5%	1/10W
R406	1-216-041-00	METAL CHIP	470	5%	1/10W (6600RDS)
R407	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R408	1-216-079-00	METAL CHIP	18K	5%	1/10W
R505	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R506	1-216-109-00	METAL CHIP	330K	5%	1/10W
R507	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R508	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R509	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R510-512	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R513	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R514	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R515-517	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R518	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R521	1-216-246-00	METAL GLAZE	100K	5%	1/8W

MAIN

SEE ADDITIONAL INFORMATION

Ref. No.	Part No.	Description			Remark
R522-528					
	1-216-097-00	METAL GLAZE	100K	5% 1/10W	
R531	1-216-097-00	METAL GLAZE	100K	5% 1/10W	(6600RDS)
R532	1-216-097-00	METAL GLAZE	100K	5% 1/10W	(6700RDS)
R533	1-216-097-00	METAL GLAZE	100K	5% 1/10W	(6700RDS)
R534	1-216-097-00	METAL GLAZE	100K	5% 1/10W	(6600RDS)
R536	1-216-295-00	CONDUCTOR, CHIP		(2012)	
R537	1-216-097-00	METAL GLAZE	100K	5% 1/10W	(6700RDS)
R538	1-216-085-00	METAL CHIP	33K	5% 1/10W	(6700RDS)
R538	1-216-295-00	CONDUCTOR, CHIP		(2012)	(6600RDS)
R540	1-216-295-00	CONDUCTOR, CHIP		(2012)	
R542	1-216-295-00	CONDUCTOR, CHIP		(2012)	
R543	1-216-025-00	METAL GLAZE	100	5% 1/10W	
R544	1-216-049-11	METAL GLAZE	1K	5% 1/10W	
R548	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R549	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R550	1-216-073-00	METAL CHIP	100K	5% 1/10W	(6700RDS)
R551	1-216-222-00	METAL GLAZE	10K	5% 1/8W	
R552	1-216-073-00	METAL CHIP	10K	5% 1/10W	(6700RDS)
R601	1-216-057-00	METAL CHIP	2.2K	5% 1/10W	
R602	1-216-097-00	METAL GLAZE	100K	5% 1/10W	
R603	1-216-085-00	METAL CHIP	33K	5% 1/10W	
R604	1-216-089-00	METAL GLAZE	47K	5% 1/10W	
R605	1-216-089-00	METAL GLAZE	47K	5% 1/10W	
R606	1-216-206-00	METAL GLAZE	2.2K	5% 1/8W	
R607	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R608	1-216-097-00	METAL GLAZE	100K	5% 1/10W	
R609	1-216-186-00	METAL GLAZE	330	5% 1/8W	
R610	1-249-385-11	CARBON	2.2	5% 1/6W	
R611	1-249-385-11	CARBON	2.2	5% 1/6W	
R612	1-216-025-00	METAL GLAZE	100	5% 1/10W	
R613	1-216-025-00	METAL GLAZE	100	5% 1/10W	
R614	1-208-806-11	METAL CHIP	10K	0.50% 1/10W	
R615	1-208-806-11	METAL CHIP	10K	0.50% 1/10W	
R616	1-216-057-00	METAL CHIP	2.2K	5% 1/10W	
R617	1-216-025-00	METAL GLAZE	100	5% 1/10W	
R618	1-208-806-11	METAL CHIP	10K	0.50% 1/10W	
R619	1-208-510-61	METAL GLAZE	10K	2% 1/8W	
R620	1-216-025-00	METAL GLAZE	100	5% 1/10W	
R621	1-216-097-00	METAL CHIP	100K	5% 1/10W	
R622	1-216-097-00	METAL GLAZE	100K	5% 1/10W	
R623	1-216-174-00	METAL CHIP	100	5% 1/8W	
R702	1-216-113-00	METAL CHIP	470K	5% 1/10W	
R703	1-216-073-00	METAL CHIP	10K	5% 1/10W	
		< VARIABLE RESISTOR >			
RV1	1-241-768-11	RES, ADJ, CARBON 220K			
RV301	1-238-597-11	RES, ADJ, CARBON 1K (6700RDS)			
RV401	1-238-597-11	RES, ADJ, CARBON 1K (6700RDS)			
		< SWITCH >			
S501	1-571-478-11	SWITCH, SLIDE (POWER SELECT)			
S601	1-692-431-21	SWITCH, TACTILE (RESET)			
		< TUNER UNIT >			
TU1	A-3282-012-A	TUNER UNIT (TUX-006)			
		< VIBRATOR >			
X1	1-567-848-11	VIBRATOR, CRYSTAL (7.2MHz)			
X2	1-579-242-41	VIBRATOR, CRYSTAL (4.332MHz)			
X501	1-579-952-21	VIBRATOR, CERAMIC (8MHz)			
X502	1-567-098-41	VIBRATOR, CRYSTAL (32.768kHz)			
**********					
		MISCELLANEOUS			
		**********			
10	1-776-527-31	CORD (WITH CONNECTOR) (ISO)			
130	1-765-460-12	CORD (WITH CONNECTOR)			
F601	1-533-331-11	FUSE (BLADE TYPE) (AUTO FUSE) (15A)			
HP901	1-500-196-21	HEAD, MAGNETIC (PLAYBACK)			
M901	X-3368-684-1	MOTOR ASSY, MAIN (CAPSTAN/REEL)			
M902	X-3368-685-1	MOTOR ASSY, SUB (LOADING/TAPE OPERATION)			
S901	1-692-885-11	SWITCH, ROTARY SLIDE (TAPE OPERATION)			
**********					

SEE ADDITIONAL INFORMATION

Ref. No.	Part No.	Description	Remark
		ACCESSORIES & PACKING MATERIALS	
		**********	
	3-810-046-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH, GERMAN, ITALIAN) (6700RDS:G)	
	3-810-046-21	MANUAL, INSTRUCTION (SPANISH, DUTCH, SWEDISH, PORTUGUESE) (6700RDS:AEP, UK)	
	3-810-054-11	MANUAL, INSTRUCTION, INSTALL (ENGLISH, FRENCH, GERMAN, ITALIAN) (6600RDS/6700RDS:G)	
	3-810-054-21	MANUAL, INSTRUCTION, INSTALL (SPANISH, DUTCH, SWEDISH, PORTUGUESE) (AEP, UK)	
	3-810-634-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH, GERMAN, ITALIAN) (6600RDS:G)	
	3-810-634-21	MANUAL, INSTRUCTION (SPANISH, DUTCH, SWEDISH, PORTUGUESE) (6600RDS:AEP, UK)	
	X-3367-795-1	CASE ASSY	
**********			
		**********	
		HARDWARE LIST	
		**********	
#1	7-621-770-67	SCREW +PTT 2.6X6 (S)	
#2	7-621-770-XX	SCREW +PTT 2.6X8 (S)	
#3	7-685-106-19	SCREW +P 2X10 TYPE2 NON-SLIT	
#4	7-627-553-17	PRECISION SCREW +P 2X2 TYPE 3	
#5	7-628-253-00	SCREW +PS 2X4	
#6	7-624-104-04	STOP RING 2.0, TYPE -E	
#7	7-621-772-10	SCREW +B 2X4	
**********			

Ref. No.	Part No.	Description	Remark
		MOUNTING HARDWARE	
		**********	
* 151	3-916-161-01	FRAME, FITTING	
152	3-386-828-01	SCREW, FITTING	
153	3-349-410-01	BUSHING	
154	3-388-078-01	KEY	
155	X-3370-077-1	SCREW ASSY (AE.KEY), FITTING	
156	1-776-527-31	CORD (WITH CONNECTOR) (ISO)	
157	1-575-616-21	CORD (WITH TERMINAL) (6700RDS)	

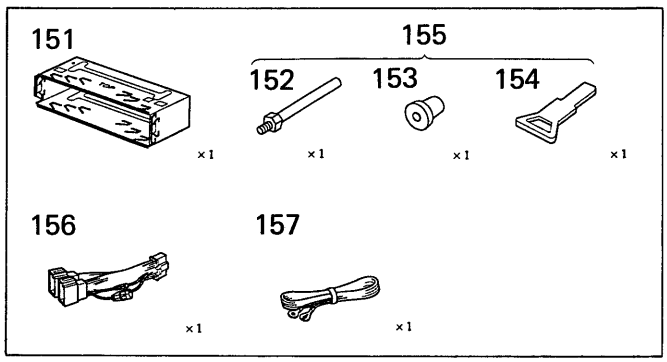

9-923-475-11

Sony Corporation
Mobile Electronics Company

English
96A047553-1
Printed in Germany
© 1996. 1
Published by Home A & V Products Div.
Quality Engineering Dept.

XR-660ORDS/670ORDS

SONY
SERVICE MANUAL

AEP Model
UK Model

SUPPLEMENT-1

File this Supplement with the Service Manual.

Subject :
CORRECTION
CHANGE OF MAIN BOARD AND CIRCUIT DUE TO CHANGE OF IC3

(ECN-CS600775)

IC3 han been changed from TDA7330BD-013TR to SAA6579T halfway in production. This change is for the main boards having the part numbers hyphened with 12 and later at the end.
When performing service and inspection, check the product name of IC3 and the suffix of the part number of the main board.

[MAIN BOARD] (COMPONENT SIDE)

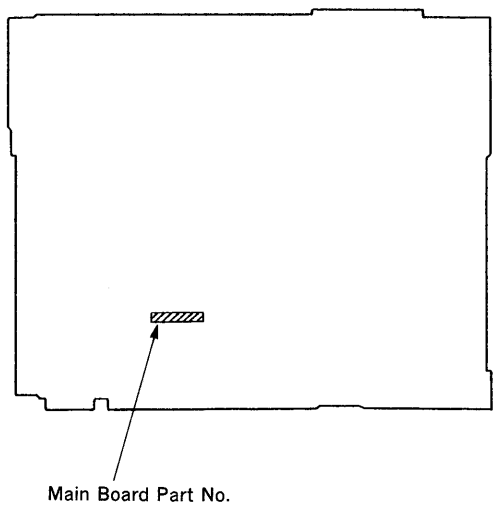

1. CORRECTION

☛: Corrected portion.

Page	INCORRECT				CORRECT		
	Ref. No.	Part No.	Description	Remark	Part No.	Description	Remark
40	10	1-776-527-31	CORD (WITH CONNECTOR) (ISO)		1-776-527-31	CORD (WITH CONNECTOR) (ISO) (6600RDS)	
	10	————			1-776-527-11	CORD (WITH CONNECTOR) (ISO) (6700RDS)	
	14	3-922-165-53	DOOR, CASSETTE (6700RDS)		3-931-233-21	DOOR, CASSETTE (6700RDS)	
	14	3-922-165-83	DOOR, CASSETTE (6600RDS)		3-931-233-41	DOOR, CASSETTE (6600RDS)	
41	51	3-921-648-51	PANEL, FRONT (6700RDS)		3-932-052-51	PANEL, FRONT (6700RDS)	
	51	3-932-828-01	PANEL, FRONT (6600RDS)		3-935-121-01	PANEL, FRONT (6600RDS)	
	55	3-921-652-01	BUTTON (PRESET)		3-921-652-21	BUTTON (PRESET)	
	60	3-918-693-01	SPRING (RELEASE)		3-930-844-01	BUTTON (RELEASE)	
	71	3-930-844-01	BUTTON (RELEASE)		3-375-373-01	SPRING (RELEASE)	
51	* 151	3-916-161-01	FRAME, FITTING		* 3-937-712-01	FRAME	
	156	1-776-527-31	CORD (WITH CONNECTOR) (ISO)		1-776-527-31	CORD (WITH CONNECTOR) (ISO) (6600RDS)	
	156	————			1-776-527-11	CORD (WITH CONNECTOR) (ISO) (6700RDS)	

• Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

2. PRINTED WIRING BOARDS—MAIN SECTION—

SEE ADDITIONAL INFORMATION

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D1	H-4	IC2	E-4
D2	D-3	IC3	H-5
D3	C-5	IC151	E-7
D350	F-5	IC152	E-5
D361	H-10	IC351	G-4
D362	F-11	IC360	G-10
D501	E-5	IC501	H-8
D504	H-6	IC571	E-10
D505	H-6	IC601	E-11
D506	I-6	IC801	D-15
D601	E-8		
D605	B-7	Q1	H-4
D606	B-8	Q2	C-5
D607	B-8	Q3	D-3
D609	I-2	Q4	C-4
D610	I-2	Q101	F-4
D611	I-4	Q201	F-4
D612	I-4	Q361	I-11
D613	I-3	Q362	I-11
D614	I-3	Q364	F-11
D615	I-9	Q365	F-10
D616	I-3	Q501	F-5
D617	B-3	Q503	H-3
D618	I-2	Q603	F-8
D619	I-4	Q605	E-8
D620	B-10	Q606	G-6
D621	B-11	Q607	E-8
D622	B-3	Q608	G-6
D624	E-10	Q609	B-6
D650	B-10	Q610	B-7
D651	B-11	Q611	E-10
D652	B-11	Q612	E-10
D653	B-11	Q701	H-10
D701	I-11	Q702	I-11
D702	I-11	Q801	E-18
D821	F-16	Q802	D-18
D823	E-17	Q821	E-17
D824	E-19	Q822	D-19
		Q851	E-16
IC1	C-3		

Note :

• ○— : parts extracted from the component side.

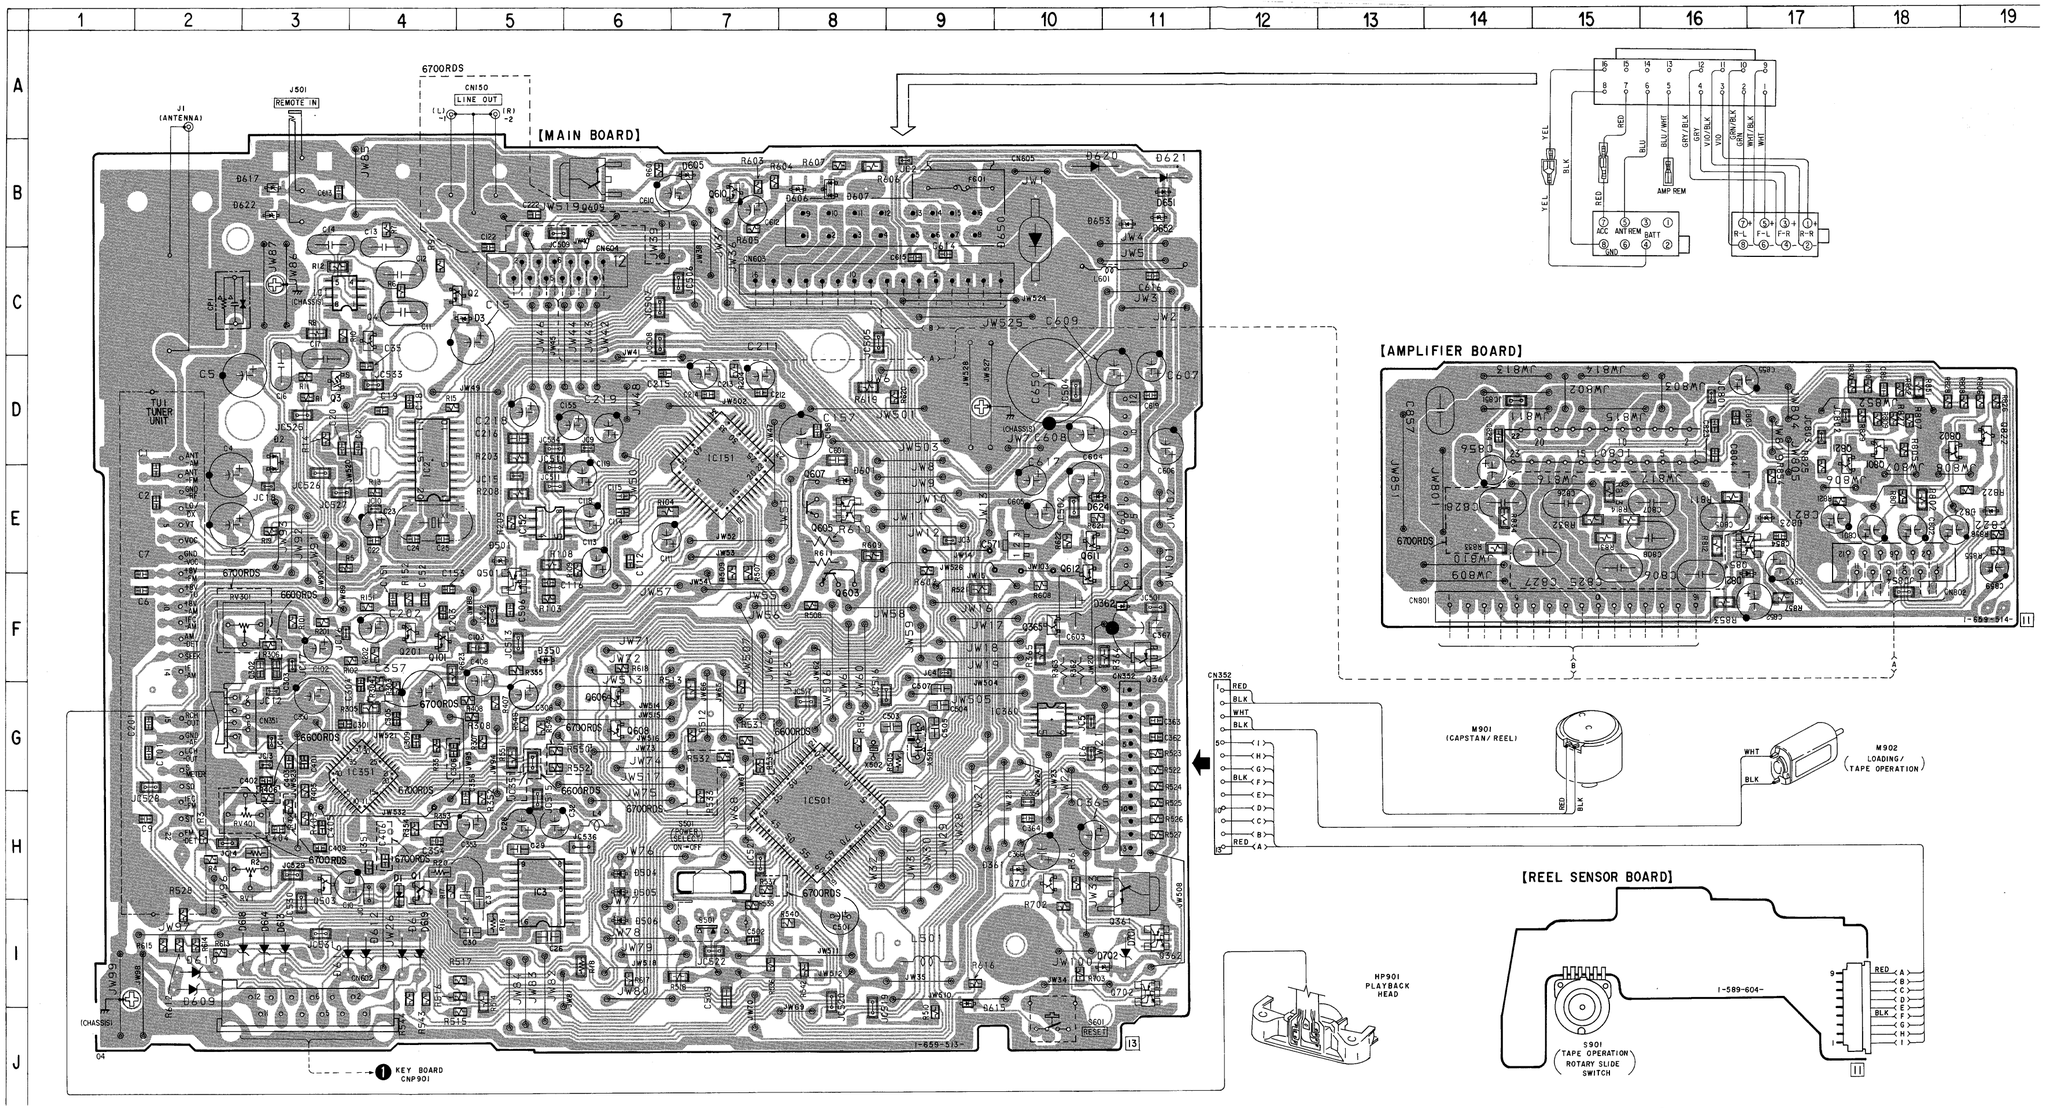

3. SCHEMATIC DIAGRAM—MAIN SECTION—

SEE ADDITIONAL INFORMATION

SEE ADDITIONAL INFORMATION

【MAIN BOARD】

Note :

- All capacitors are in μF unless otherwise noted. pF : μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- △ : internal component.
- % : indicates tolerance.
- B+ : B+ Line
- ▭ : adjustment for repair.
- Power voltage is dc 14.4V and fed with regulated dc power supply from BATT and ACC terminals.
- Voltage is dc with respect to ground under no-signal (detuned) conditions.
- no mark: FM
  ( ) : MW
  [ ] : PB
- Voltages are taken with a VOM (Input Impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
- Signal path.
  ⇨ : FM
  ⇨ : PB

【REEL SENSOR BOARD】

SEE ADDITIONAL INFORMATION

MAIN

4. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms.
  METAL:Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F:nonflammable
- Abbreviation
  G : German model
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u:μ, for example:
  uA..: μA.. uPA..: μPA..
  uPB..: μPB.. uPC..: μPC.. uPD..: μPD..
- CAPACITORS
  uF: μF
- COILS
  uH: μH

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description			Remark
*	A-3309-081-A	MAIN BOARD, COMPLETE (6600RDS:G)			
*	A-3309-082-A	MAIN BOARD, COMPLETE (6600RDS:AEP, UK)			
*	A-3309-088-A	MAIN BOARD, COMPLETE (6700RDS:AEP, UK)			
*	A-3309-089-A	MAIN BOARD, COMPLETE (6700RDS:G)			
		**********			
		< CAPACITOR >			
C1	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C2	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C3	1-124-584-00	ELECT	100uF	20%	10V
C4	1-124-584-00	ELECT	100uF	20%	10V
C5	1-124-584-00	ELECT	100uF	20%	10V
C6	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C7	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C9	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C10	1-126-157-11	ELECT	10uF	20%	16V
C11	1-136-169-00	FILM	0.22uF	5%	50V
C12	1-136-165-00	FILM	0.1uF	5%	50V
C13	1-137-368-11	FILM	0.0047uF	5%	50V
C14	1-137-364-11	FILM	0.001uF	5%	50V
C15	1-124-584-00	ELECT	100uF	20%	10V
C16	1-136-159-00	FILM	0.033uF	5%	50V
C17	1-137-366-11	FILM	0.0022uF	5%	50V
C18	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C19	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C20	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C21	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C22	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C23	1-126-157-11	ELECT	10uF	20%	16V
C24	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C25	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C26	1-163-193-00	CERAMIC CHIP	330PF	5%	50V
C28	1-124-257-00	ELECT	2.2uF	20%	50V
C29	1-163-135-00	CERAMIC CHIP	560PF	5%	50V
C30	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C31	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C32	1-126-301-11	ELECT	1uF	20%	50V
C35	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C101	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C102	1-126-301-11	ELECT	1uF	20%	50V
C103	1-165-320-11	CERAMIC CHIP	0.47uF	10%	16V
C111	1-126-157-11	ELECT	10uF	20%	16V
C112	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C113	1-126-157-11	ELECT	10uF	20%	16V
C114	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C115	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C116	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C118	1-126-157-11	ELECT	10uF	20%	16V
C119	1-126-157-11	ELECT	10uF	20%	16V
C122	1-163-251-11	CERAMIC CHIP	100PF	5%	50V (6700RDS)
C151	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C152	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C153	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C155	1-124-234-00	ELECT	22uF	20%	16V
C157	1-124-584-00	ELECT	100uF	20%	10V
C158	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C201	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C202	1-126-301-11	ELECT	1uF	20%	50V
C203	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C211	1-126-157-11	ELECT	10uF	20%	16V
C212	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C213	1-126-157-11	ELECT	10uF	20%	16V
C214	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C215	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C216	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
C218	1-126-157-11	ELECT	10uF	20%	16V
C219	1-126-157-11	ELECT	10uF	20%	16V
C222	1-163-251-11	CERAMIC CHIP	100PF	5%	50V (6700RDS)
C301	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C302	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C303	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C304	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C305	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C306	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V (6700RDS)
C308	1-124-463-00	ELECT	0.1uF	20%	50V
C309	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C350	1-124-234-00	ELECT	22uF	20%	16V

MAIN

SEE ADDITIONAL INFORMATION

Ref. No.	Part No.	Description			Remark
C351	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C353	1-124-465-00	ELECT	0.47uF	20%	50V
C354	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C356	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C357	1-124-584-00	ELECT	100uF	20%	10V
C362	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C363	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C364	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C365	1-126-157-11	ELECT	10uF	20%	16V
C366	1-124-234-00	ELECT	22uF	20%	16V
C367	1-124-120-11	ELECT	220uF	20%	25V
C401	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C402	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C403	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C404	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C405	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C406	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
					(6700RDS)
C408	1-124-463-00	ELECT	0.1uF	20%	50V
C409	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C501	1-124-584-00	ELECT	100uF	20%	10V
C502	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C503	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C504	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C505	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C506	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C507	1-164-346-11	CERAMIC CHIP	1uF		16V
C509	1-163-059-00	CERAMIC CHIP	0.01uF	10%	50V
C601	1-163-081-00	CERAMIC CHIP	0.22uF		25V
C603	1-125-705-11	CAPACITOR	0.22F		5.5V
C604	1-126-933-11	ELECT	100uF	20%	10V
C605	1-126-157-11	ELECT	10uF	20%	16V
C606	1-124-234-00	ELECT	22uF	20%	16V
C607	1-126-157-11	ELECT	10uF	20%	16V
C608	1-126-967-11	ELECT	47uF	20%	16V
C609	1-126-967-11	ELECT	47uF	20%	16V
C610	1-124-234-00	ELECT	22uF	20%	16V
C612	1-126-301-11	ELECT	1uF	20%	50V
C613	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C614	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C615	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C616	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C617	1-126-157-11	ELECT	10uF	20%	16V
C619	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C650	1-126-936-11	ELECT	3300uF	20%	16V

< CONNECTOR >

CN150	1-774-698-11	JACK, PIN 2P (LINE OUT)	(6700RDS)
CN351	1-766-260-11	CONNECTOR, FFC/FPC (ZIF) 7P	

Ref. No.	Part No.	Description	Remark
* CN352	1-506-995-11	PIN, CONNECTOR (PC BOARD) 13P	
CN602	1-764-422-11	PLUG, CONNECTOR 12P	
* CN603	1-770-212-11	CONNECTOR, BOARD TO BOARD 16P	
CN604	1-774-809-11	CONNECTOR, BOARD TO BOARD 12P	
CN605	1-774-701-11	PIN, CONNECTOR 16P	

< DISCHARGE GAP >

CP1	1-519-504-11	GAP, DISCHARGE	

< DIODE >

D1	8-719-976-81	DIODE	DTZ3.3A-TT11
D2	8-719-991-65	DIODE	SB02W03C
D3	8-719-977-27	DIODE	DTZ10A
D350	8-719-988-62	DIODE	1SS355
D361	8-719-977-27	DIODE	DTZ10A
D362	8-719-988-62	DIODE	1SS355
D501	8-719-976-88	DIODE	DTZ3.9B
D504	8-719-988-62	DIODE	1SS355
D505	8-719-988-62	DIODE	1SS355
D506	8-719-988-62	DIODE	1SS355
D601	8-719-978-50	DIODE	DTZ-TT11-10C
D605	8-719-977-03	DIODE	DTZ5.6B
D606	8-719-977-17	DIODE	DTZ7.5C
D607	8-719-914-43	DIODE	DAN202K
D609	8-719-109-97	DIODE	RD6.8ES-B2
D610	8-719-109-97	DIODE	RD6.8ES-B2
D611	8-719-109-97	DIODE	RD6.8ES-B2
D612	8-719-109-97	DIODE	RD6.8ES-B2
D613	8-719-109-97	DIODE	RD6.8ES-B2
D614	8-719-109-97	DIODE	RD6.8ES-B2
D615	8-719-056-84	DIODE	UDZ-TE-17-7.5B
D616	8-719-923-93	DIODE	MTZJ-T-77-16C
D617	8-719-056-84	DIODE	UDZ-TE-17-7.5B
D618	8-719-109-97	DIODE	RD6.8ES-B2
D619	8-719-109-97	DIODE	RD6.8ES-B2
D620	8-719-200-82	DIODE	11ES2
D621	8-719-200-82	DIODE	11ES2
D622	8-719-056-84	DIODE	UDZ-TE-17-7.5B
D624	8-719-988-62	DIODE	1SS355
D650	8-719-049-38	DIODE	1N5404TU
D651	8-719-977-69	DIODE	DTZ24B
D652	8-719-977-69	DIODE	DTZ24B
D653	8-719-056-84	DIODE	UDZ-TE-17-7.5B
D701	8-719-923-93	DIODE	MTZJ-T-77-16C
D702	8-719-977-17	DIODE	DTZ7.5C

< IC >

IC1	8-759-242-66	IC	TC4W66F
IC2	8-759-823-81	IC	LC7216M

SEE ADDITIONAL INFORMATION

MAIN

Ref. No.	Part No.	Description	Remark
IC3	8-759-065-98	IC SAA6579T	
IC151	8-759-368-11	IC LC75372E	
IC152	8-759-909-71	IC BA4558F	
IC351	8-752-075-58	IC CXA2510Q-T4 (6700RDS)	
IC351	8-752-076-05	IC CXA2509Q-T4 (6600RDS)	
IC360	8-759-823-87	IC LB1638M	
IC501	8-759-395-47	IC MN1884820S3Y	
IC571	8-759-363-81	IC XC61AN4002PR	
IC601	8-759-347-50	IC BA3918-V3	
		< JACK >	
J1	1-770-279-12	JACK (ANTENNA)	
J501	1-566-822-41	JACK (REMOTE IN)	
		< JUMPER RESISTOR >	
JC1	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC2	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC3	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC4	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC5	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC6	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC9	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC10	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC11	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC12	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC13	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC14	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC15	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC16	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC17	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC18	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC351	1-216-296-00	CONDUCTOR, CHIP (3216)	(6600RDS)
JC354	1-216-295-00	CONDUCTOR, CHIP (2012)	
JC501	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC502	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC504	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC505	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC506	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC507	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC508	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC509	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC510	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC511	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC512	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC513	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC515	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC516	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC517	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC519	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC520	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC521	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC522	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC525	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC526	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC527	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC528	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC529	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC530	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC531	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC533	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC534	1-216-296-00	CONDUCTOR, CHIP (3216)	
JC536	1-216-296-00	CONDUCTOR, CHIP (3216)	
		< COIL >	
L4	1-410-971-11	INDUCTOR 10uH	
L501	1-410-971-11	INDUCTOR 10uH	
L601	1-411-669-12	COIL, CHOKE	
		< TRANSISTOR >	
Q1	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q2	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q3	8-729-021-94	TRANSISTOR 2SK1657-T1B	
Q4	8-729-900-53	TRANSISTOR DTC114EK	
Q101	8-729-920-21	TRANSISTOR DTC314TKH04	
Q201	8-729-920-21	TRANSISTOR DTC314TKH04	
Q361	8-729-922-65	TRANSISTOR 2SD1760F5-PQR	
Q362	8-729-920-41	TRANSISTOR FMC3	
Q364	8-729-106-60	TRANSISTOR 2SB1115A	
Q365	8-729-900-53	TRANSISTOR DTC114EK	
Q501	8-729-921-25	TRANSISTOR FMC2	
Q503	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q603	8-729-030-18	TRANSISTOR 2SD2525	
Q605	8-729-921-25	TRANSISTOR FMC2	
Q606	8-729-027-23	TRANSISTOR DTA114EKA-T146	
Q607	8-729-030-18	TRANSISTOR 2SD2525	
Q608	8-729-027-23	TRANSISTOR DTA114EKA-T146	
Q609	8-729-922-65	TRANSISTOR 2SD1760F5-PQR	
Q610	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q611	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q612	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q701	8-729-900-53	TRANSISTOR DTC114EK	
Q702	8-729-921-25	TRANSISTOR FMC2	
		< RESISTOR >	
R1	1-216-049-11	METAL GLAZE 1K 5% 1/10W	
R2	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
R3	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R4	1-216-097-00	METAL GLAZE 100K 5% 1/10W	

MAIN

SEE ADDITIONAL INFORMATION

Ref. No.	Part No.	Description			Remark
R5	1-216-037-00	METAL CHIP	330	5%	1/10W
R6	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R7	1-216-073-00	METAL CHIP	10K	5%	1/10W
R8	1-216-238-00	METAL GLAZE	47K	5%	1/8W
R9	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R10	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R11	1-216-075-00	METAL CHIP	12K	5%	1/10W
R12	1-216-238-00	METAL GLAZE	47K	5%	1/8W
R13	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R14	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R15	1-216-073-00	METAL CHIP	10K	5%	1/10W
R16	1-216-081-00	METAL CHIP	22K	5%	1/10W
R17	1-216-129-00	METAL CHIP	2.2M	5%	1/10W
R18	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R19	1-216-073-00	METAL CHIP	10K	5%	1/10W
R20	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R101	1-216-065-00	METAL CHIP	4.7K	5%	1/10W (G)
R101	1-216-073-00	METAL CHIP	10K	5%	1/10W (AEP, UK)
R102	1-216-079-00	METAL CHIP	18K	5%	1/10W (AEP, UK)
R102	1-216-085-00	METAL CHIP	33K	5%	1/10W (G)
R103	1-216-077-00	METAL CHIP	15K	5%	1/10W
R104	1-216-085-00	METAL CHIP	33K	5%	1/10W
R108	1-216-230-00	METAL GLAZE	22K	5%	1/8W
R109	1-216-085-00	METAL CHIP	33K	5%	1/10W
R151	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R152	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R201	1-216-065-00	METAL CHIP	4.7K	5%	1/10W (G)
R201	1-216-073-00	METAL CHIP	10K	5%	1/10W (AEP, UK)
R202	1-216-079-00	METAL CHIP	18K	5%	1/10W (AEP, UK)
R202	1-216-085-00	METAL CHIP	33K	5%	1/10W (G)
R203	1-216-226-00	METAL GLAZE	15K	5%	1/8W
R204	1-216-085-00	METAL CHIP	33K	5%	1/10W
R208	1-216-230-00	METAL GLAZE	22K	5%	1/8W
R209	1-216-085-00	METAL CHIP	33K	5%	1/10W
R303	1-216-076-00	METAL CHIP	13K	5%	1/10W
R304	1-216-077-00	METAL CHIP	15K	5%	1/10W (6700RDS)
R305	1-216-258-00	METAL GLAZE	330K	5%	1/8W
R306	1-216-041-00	METAL CHIP	470	5%	1/10W (6600RDS)
R307	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R308	1-216-079-00	METAL CHIP	18K	5%	1/10W
R351	1-208-812-11	METAL GLAZE	18K	2%	1/10W
R352	1-216-109-00	METAL CHIP	330K	5%	1/10W
R353	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R354	1-216-077-00	METAL CHIP	15K	5%	1/10W

Ref. No.	Part No.	Description			Remark
R355	1-216-009-00	METAL CHIP	22	5%	1/10W
R361	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R362	1-249-389-11	CARBON	4.7	5%	1/4W
R363	1-249-389-11	CARBON	4.7	5%	1/4W
R364	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R365	1-216-214-00	METAL GLAZE	4.7K	5%	1/8W
R403	1-216-076-00	METAL CHIP	13K	5%	1/10W
R404	1-216-077-00	METAL CHIP	15K	5%	1/10W (6700RDS)
R405	1-216-109-00	METAL CHIP	330K	5%	1/10W
R406	1-216-041-00	METAL CHIP	470	5%	1/10W (6600RDS)
R407	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R408	1-216-079-00	METAL CHIP	18K	5%	1/10W
R505	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R506	1-216-109-00	METAL CHIP	330K	5%	1/10W
R507	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R508	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R509	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R510	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R511	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R512	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R513	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R514	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R515	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R516	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R517	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R518	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R521	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R522	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R523	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R524	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R525	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R526	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R527	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R528	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R531	1-216-097-00	METAL GLAZE	100K	5%	1/10W (6600RDS)
R532	1-216-097-00	METAL GLAZE	100K	5%	1/10W (6700RDS)
R533	1-216-097-00	METAL GLAZE	100K	5%	1/10W (6700RDS)
R534	1-216-097-00	METAL GLAZE	100K	5%	1/10W (6600RDS)
R536	1-216-295-00	CONDUCTOR, CHIP			(2012)
R537	1-216-097-00	METAL GLAZE	100K	5%	1/10W (6700RDS)
R538	1-216-085-00	METAL CHIP	33K	5%	1/10W (6700RDS)
R538	1-216-295-00	CONDUCTOR, CHIP			(2012) (6600RDS)

SEE ADDITIONAL INFORMATION

MAIN

Ref. No.	Part No.	Description			Remark
R540	1-216-295-00	CONDUCTOR, CHIP		(2012)	
R542	1-216-295-00	CONDUCTOR, CHIP		(2012)	
R543	1-216-025-00	METAL GLAZE	100	5% 1/10W	
R544	1-216-049-11	METAL GLAZE	1K	5% 1/10W	
R548	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R549	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R550	1-216-073-00	METAL CHIP	10K	5% 1/10W	(6700RDS)
R551	1-216-222-00	METAL GLAZE	10K	5% 1/8W	
R552	1-216-073-00	METAL CHIP	10K	5% 1/10W	(6700RDS)
R601	1-216-057-00	METAL CHIP	2.2K	5% 1/10W	
R602	1-216-097-00	METAL GLAZE	100K	5% 1/10W	
R603	1-216-085-00	METAL CHIP	33K	5% 1/10W	
R604	1-216-089-00	METAL GLAZE	47K	5% 1/10W	
R605	1-216-089-00	METAL GLAZE	47K	5% 1/10W	
R606	1-216-206-00	METAL GLAZE	2.2K	5% 1/8W	
R607	1-216-073-00	METAL CHIP	10K	5% 1/10W	
R608	1-216-097-00	METAL GLAZE	100K	5% 1/10W	
R609	1-216-186-00	METAL GLAZE	330	5% 1/8W	
R610	1-249-385-11	CARBON	2.2	5% 1/6W	
R611	1-249-385-11	CARBON	2.2	5% 1/6W	
R612	1-216-025-00	METAL GLAZE	100	5% 1/10W	
R613	1-216-025-00	METAL GLAZE	100	5% 1/10W	
R614	1-208-806-11	METAL CHIP	10K	0.50% 1/10W	
R615	1-208-806-11	METAL CHIP	10K	0.50% 1/10W	
R616	1-216-057-00	METAL CHIP	2.2K	5% 1/10W	
R617	1-216-025-00	METAL GLAZE	100	5% 1/10W	
R618	1-208-806-11	METAL CHIP	10K	0.50% 1/10W	
R619	1-208-510-61	METAL GLAZE	10K	2% 1/8W	
R620	1-216-025-00	METAL GLAZE	100	5% 1/10W	
R621	1-216-097-00	METAL GLAZE	100K	5% 1/10W	
R622	1-216-097-00	METAL GLAZE	100K	5% 1/10W	
R623	1-216-174-00	METAL GLAZE	100	5% 1/8W	
R702	1-216-113-00	METAL CHIP	470K	5% 1/10W	
R703	1-216-073-00	METAL CHIP	10K	5% 1/10W	

< VARIABLE RESISTOR >

RV1	1-241-768-11	RES, ADJ, CARBON 220K
RV301	1-238-597-11	RES, ADJ, CARBON 1K (6700RDS)
RV401	1-238-597-11	RES, ADJ, CARBON 1K (6700RDS)

< SWITCH >

S501	1-571-478-11	SWITCH, SLIDE (POWER SELECT)
S601	1-692-431-21	SWITCH, TACTILE (RESET)

< TUNER >

TU1	A-3282-012-A	TUNER UNIT (TUX-006(E))

Ref. No.	Part No.	Description	Remark

< VIBRATOR >

X1	1-567-848-11	VIBRATOR, CRYSTAL (7.2MHz)
X2	1-579-242-41	VIBRATOR, CRYSTAL (4.332MHz)
X501	1-579-952-21	VIBRATOR, CERAMIC (8MHz)
X502	1-567-098-41	VIBRATOR, CRYSTAL (32.768kHz)

****

9-923-475-81

Sony Corporation
Personal & Mobile Communication Company

English
96F047545-1
Printed in Germany
© 1996. 6
Published by Quality Assurance Dept.

XR-6600RDS/6700RDS

SONY

AEP Model
UK Model

SERVICE MANUAL

SUPPLEMENT-2

File this supplement with the service manual.

Subject : Addition of Thailand Made Model

(ENG-96027)

- Those models without "MADE IN JAPAN" indication on the model number label are Thailand made model.
  Thailand made models have the new mechanism deck MG-52B-135 which has been changed from MG-50EX2-39. This change has involved the changed microcomputer and peripheral circuits.
- This supplement-2 only describes differences from Japan made models.
  Refer to supplement-1 for the Printed Wiring Board, Schematic Diagram and Electrical Parts List and to the appropriate service manual for other information.

Model Number Label

XR-6600RDS
XR-6700RDS

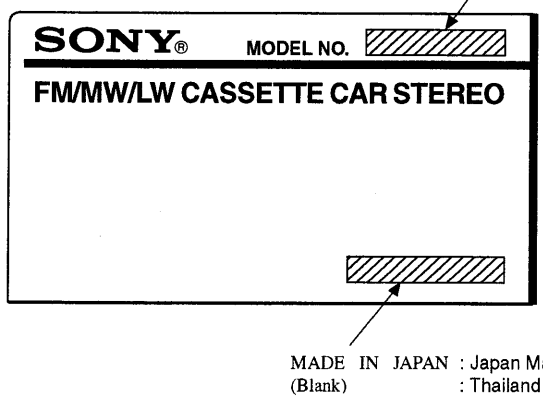

MADE IN JAPAN : Japan Made Model
(Blank) : Thailand Made Model

1. DIFFERENCE OF PARTS LIST

• The page indicates that of service manual supplement-1.

Page	Japan Made Model						Thailand Made Model					
	Ref.No.	Part No.	Description			Remark	Ref.No.	Part No.	Description			Remark
11	*	A-3309-081-A	MAIN BOARD, COMPLETE (6600RDS: G)				*	A-3309-245-A	MAIN BOARD, COMPLETE (6600RDS: G)			
	*	A-3309-082-A	MAIN BOARD, COMPLETE (6600RDS: AEP,UK)				*	A-3309-244-A	MAIN BOARD, COMPLETE (6600RDS: AEP,UK)			
	*	A-3309-088-A	MAIN BOARD, COMPLETE (6700RDS: AEP,UK)				*	A-3309-221-A	MAIN BOARD, COMPLETE (6700RDS: AEP,UK)			
	*	A-3309-089-A	MAIN BOARD, COMPLETE (6700RDS: G)				*	A-3309-220-A	MAIN BOARD, COMPLETE (6700RDS: G)			
	C302	1-163-125-00	CERAMIC CHIP	220PF	5%	50V	C302	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
	C303	1-163-125-00	CERAMIC CHIP	220PF	5%	50V	C303	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
12	C402	1-163-125-00	CERAMIC CHIP	220PF	5%	50V	C402	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
	C403	1-163-125-00	CERAMIC CHIP	220PF	5%	50V	C403	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
13	IC501	8-759-395-47	IC MN1884820S3Y				IC501	8-759-421-76	IC MN1884820S4D			
	JC354	1-216-295-00	CONDUCTOR, CHIP (2012)									
14	R303	1-216-076-00	METAL CHIP	13K	5%	1/10W	R303	1-216-077-00	METAL CHIP	15K	5%	1/10W
	R352	1-216-109-00	METAL CHIP	330K	5%	1/10W	R352	1-216-105-00	METAL CHIP	220K	5%	1/10W
	R403	1-216-076-00	METAL CHIP	13K	5%	1/10W	R403	1-216-077-00	METAL CHIP	15K	5%	1/10W
	R527	1-216-097-00	METAL GLAZE	100K	5%	1/10W						
15							R553	1-216-097-00	METAL GLAZE	100K	5%	1/10W

• The page indicates that of service manual.

Page	Japan Made Model						Thailand Made Model					
	Ref.No.	Part No.	Description			Remark	Ref.No.	Part No.	Description			Remark
43	*	A-3309-056-A	AMPLIFIER BOARD, COMPLETE (6600RDS)				*	A-3309-232-A	AMPLIFIER BOARD, COMPLETE (6600RDS)			
	*	A-3309-090-A	AMPLIFIER BOARD, COMPLETE (6700RDS)				*	A-3309-222-A	AMPLIFIER BOARD, COMPLETE (6700RDS)			
50	130	1-765-460-12	CORD (WITH CONNECTOR)									
	HP901	1-500-196-21	HEAD, MAGNETIC (PLAYBACK)				HP901	1-500-157-21	HEAD, MAGNETIC (PLAYBACK)			
	M901	X-3368-684-1	MOTOR ASSY, MAIN (CAPSTAN/REEL)				M901	A-3291-665-A	MOTOR ASSY, MAIN (CAPSTAN/REEL)			
	M902	X-3368-685-1	MOTOR ASSY, SUB (LOADING/TAPE OPERATION)				M902	A-3291-664-A	MOTOR ASSY, SUB (LOADING/TAPE OPERATION)			
51								1-465-459-11	ADAPTOR, ANTENNA (AEP, UK)			
		X-3367-795-1	CASE ASSY					X-3370-436-1	CASE ASSY			
	#2	7-621-770-XX	SCREW +PTT 2.6X8 (S)				#2	7-621-773-87	SCREW +PTT 2.6X10 (S)			
	#3	7-685-106-19	SCREW +P 2X10 TYPE2 NON-SLIT				#3	7-621-775-40	SCREW +PTT 2.6X8 (S)			
	#4	7-627-553-17	PRECISION SCREW +P 2X2 TYPE 3				#4	7-685-106-19	SCREW +P 2X10 TYPE2 NON-SLIT			
	#7	7-621-772-10	SCREW +B 2X4				#7	7-627-553-17	PRECISION SCREW +P 2X2 TYPE 3			
							#8	7-621-772-10	SCREW +B 2X4			
	157	1-575-616-21	CORD (WITH TERMINAL) (6700RDS)				157	1-775-543-11	CORD (GROUND) (6700RDS)			

2. DIFFERENCE OF PRINTED WIRING BOARDS

☛ : indicates difference portion.

Page	Japan Made Model
5	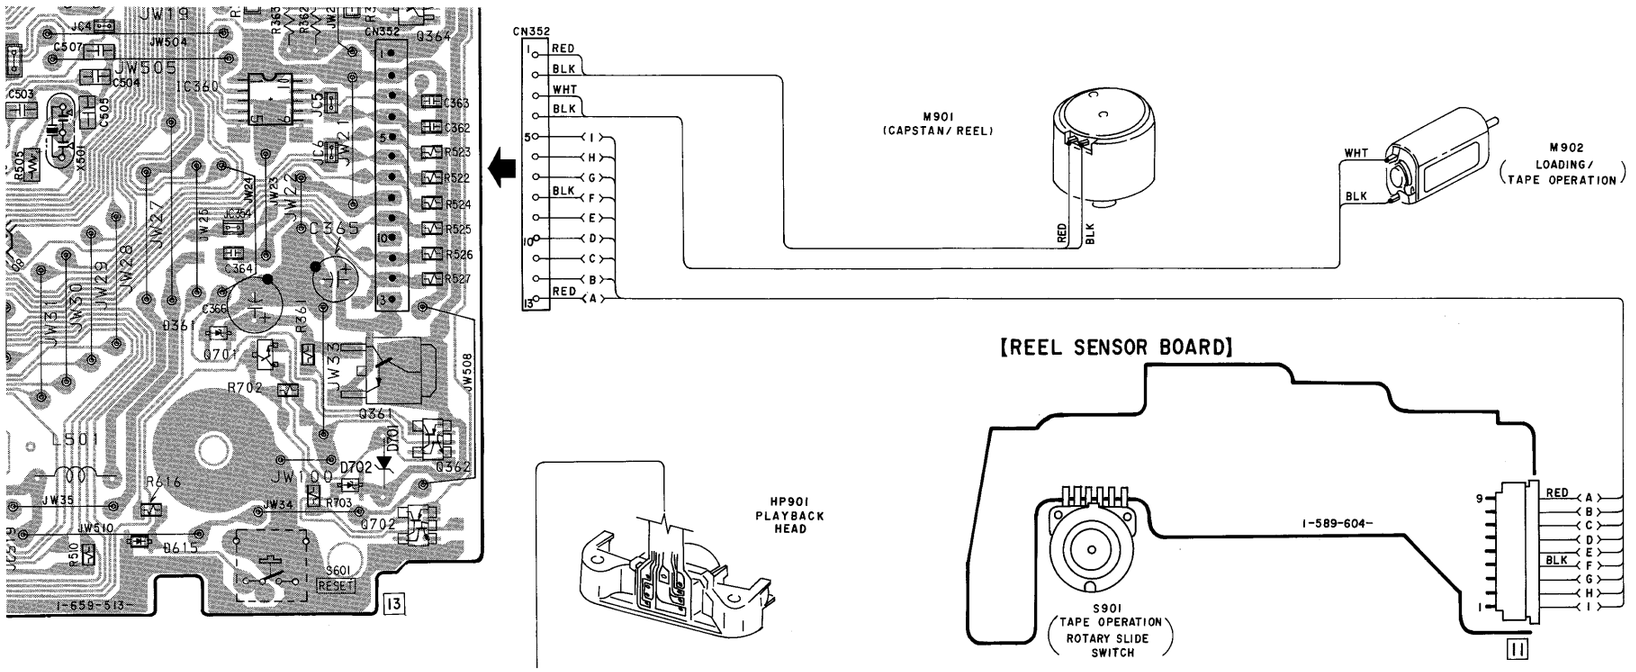

Thailand Made Model
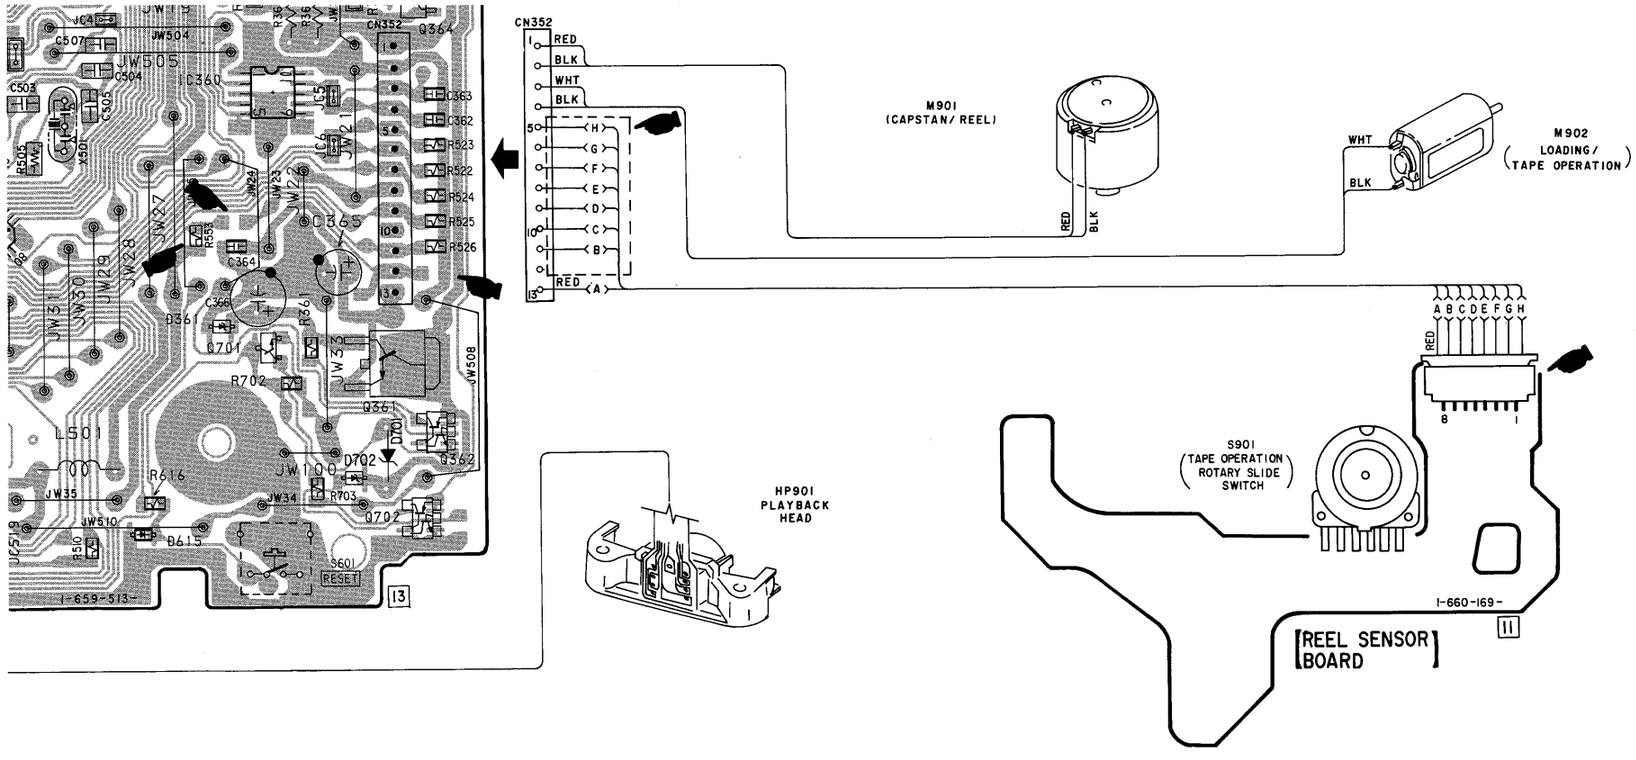

3. DIFFERENCE OF SCHEMATIC DIAGRAM

☛ : indicates difference portion.

Page	Japan Made Model
7	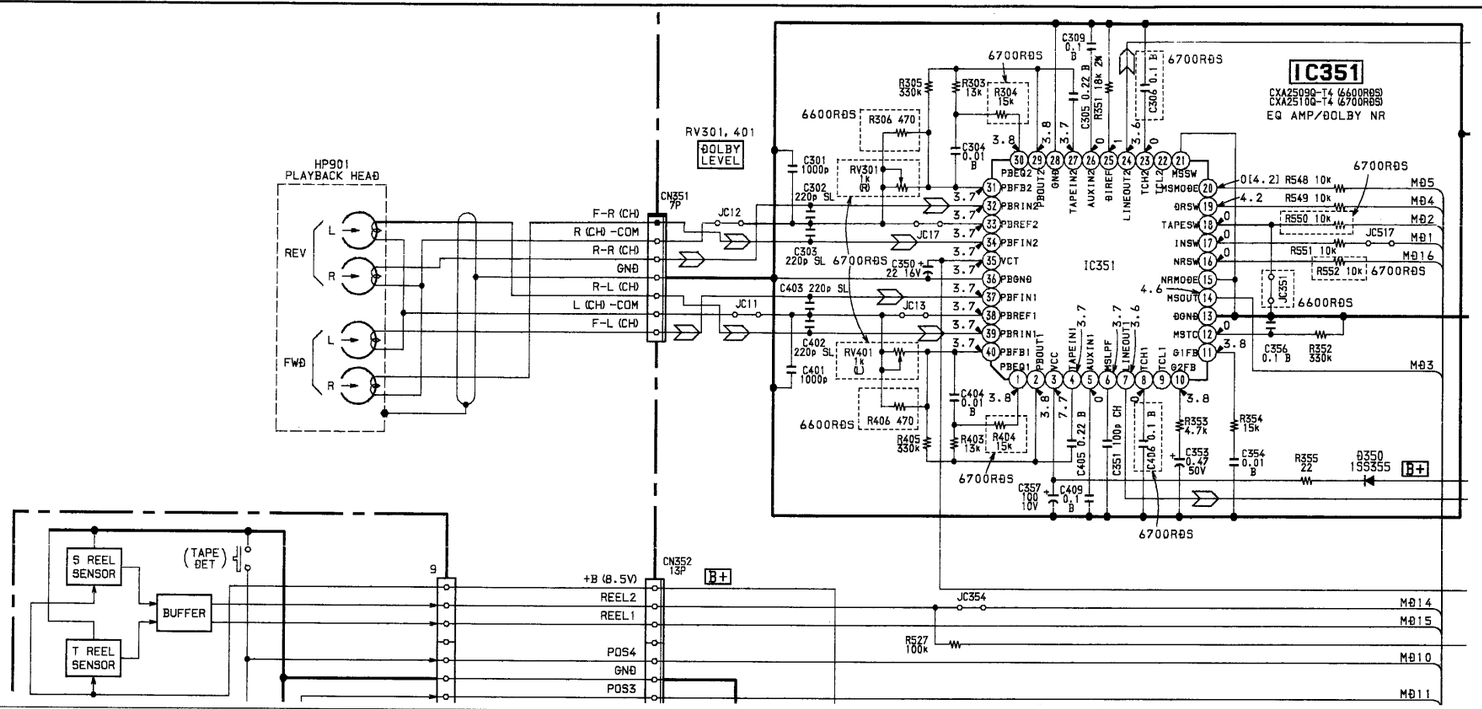

Thailand Made Model

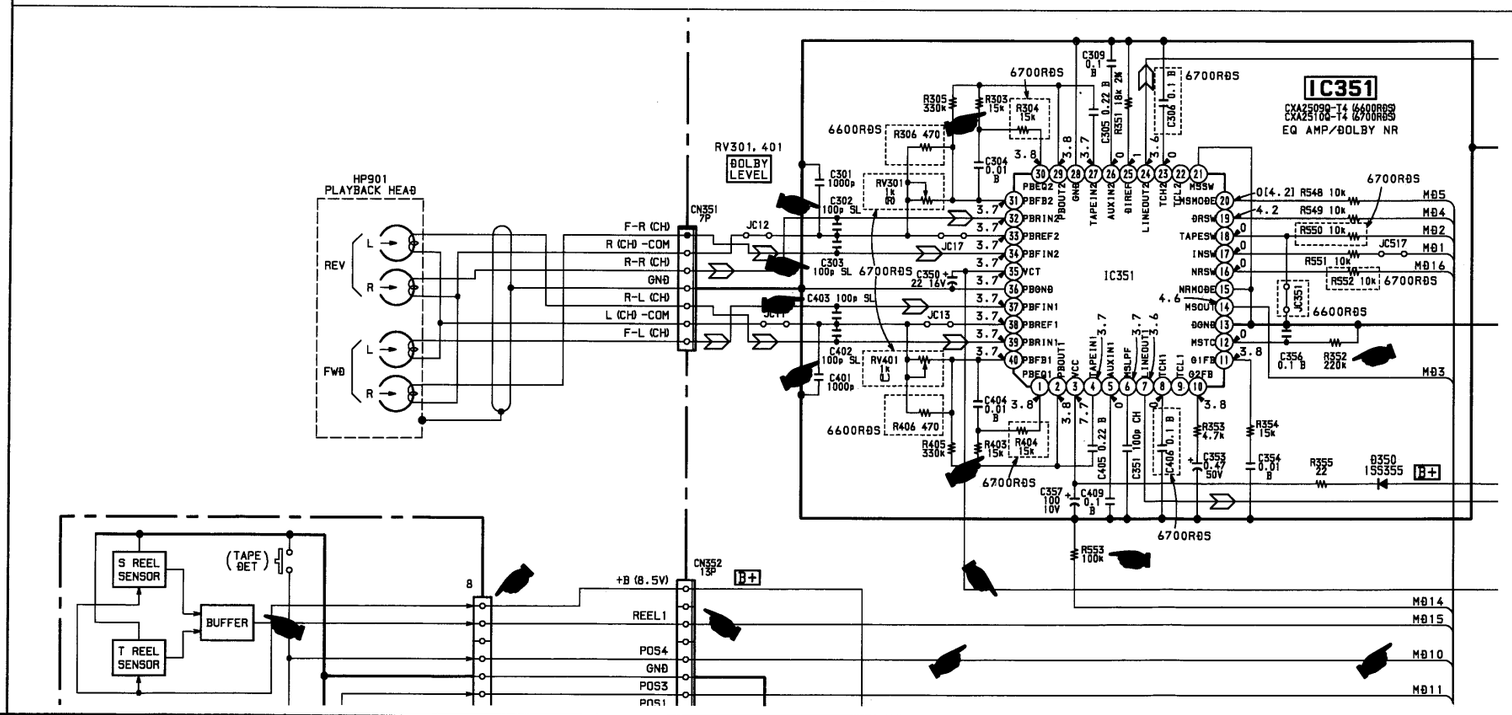

☛ : indicates difference portion.

Page	Japan Made Model	Thailand Made Model
9	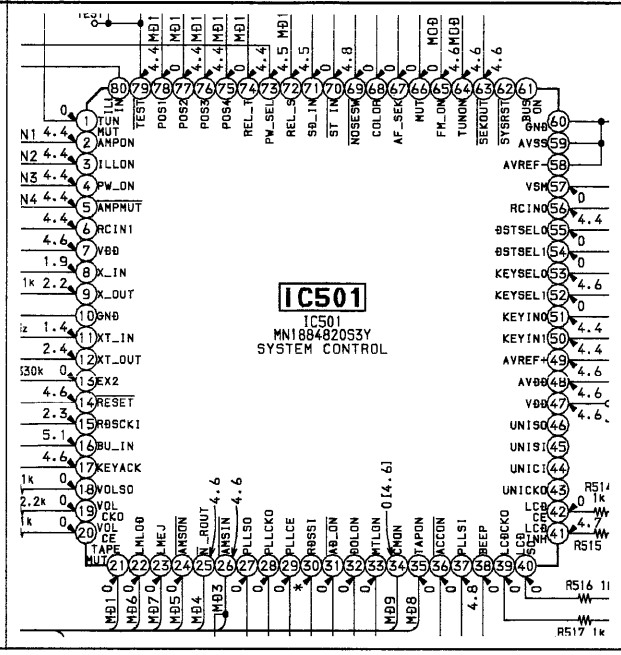	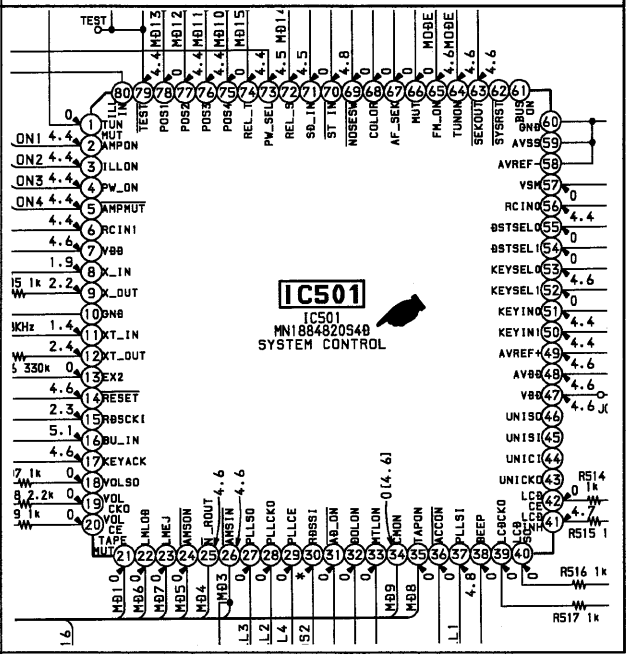

4. ASSEMBLY OF MECHANISM DECK

Note : Follow the assembly procedure in the numerical order given.

4-1. ALIGNMENT OF ROTARY SWITCH

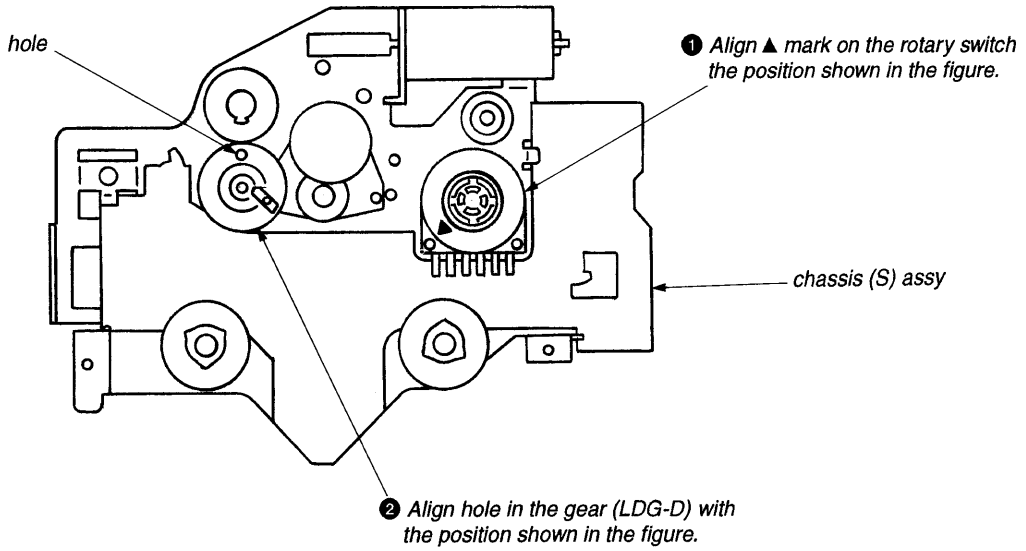
hole
❶ Align ▲ mark on the rotary switch the position shown in the figure.
chassis (S) assy
❷ Align hole in the gear (LDG-D) with the position shown in the figure.

4-2. GEAR (LDG-E)

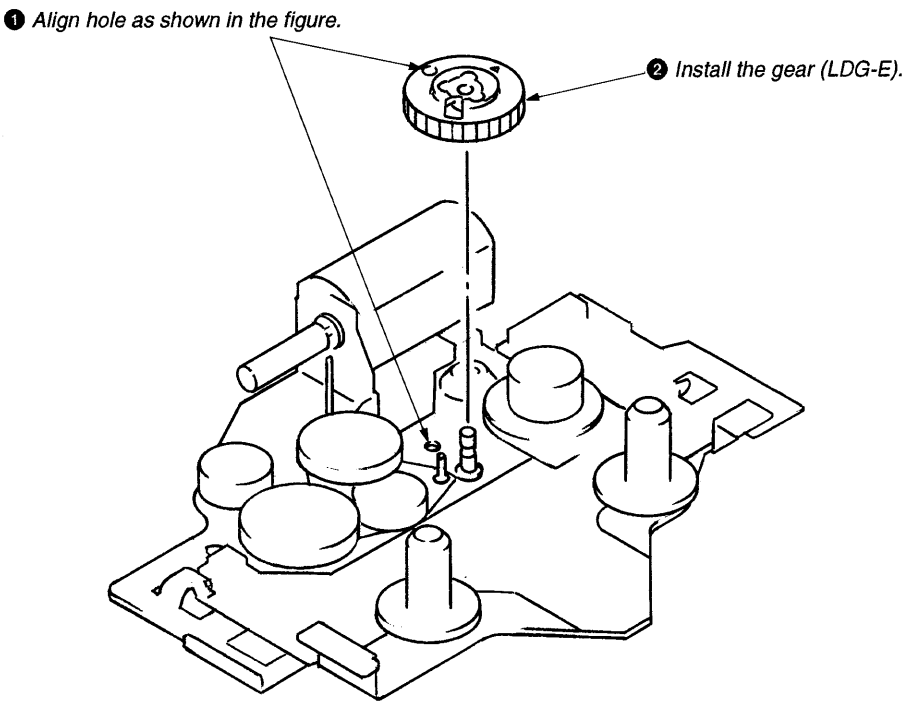

4-3. CHASSIS (S) ASSY

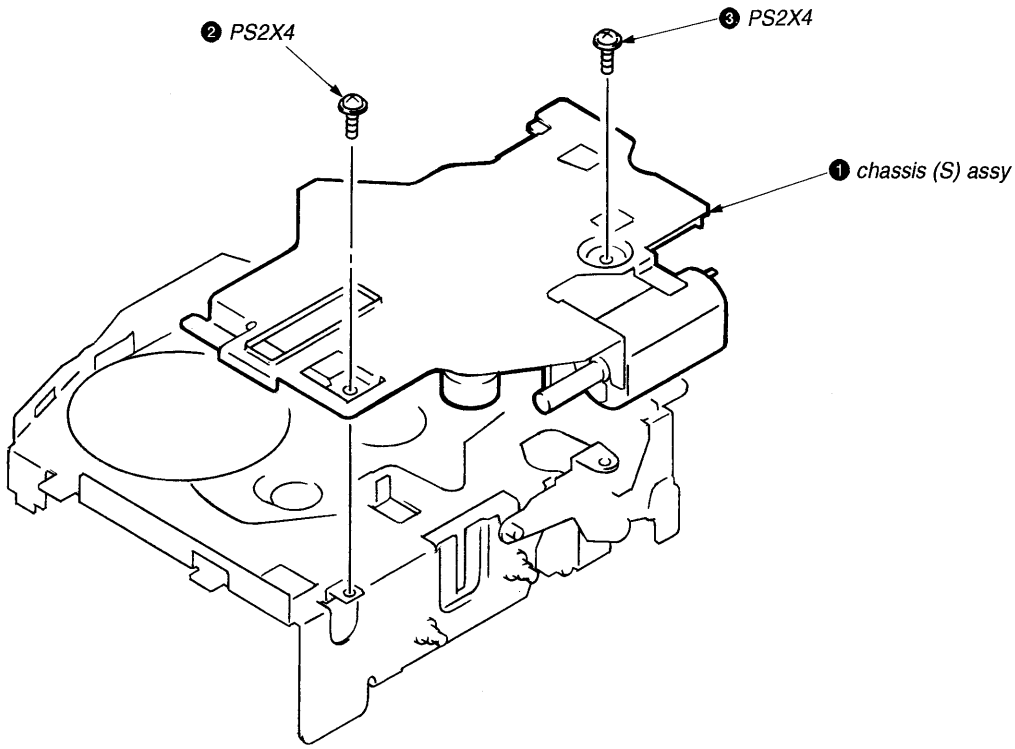

4-4. LEVER (MODE)

1) Align ▲ mark on the rotary switch with hole in the lever (mode). (See Fig. 1)
2) Fit on positions Ⓐ, Ⓑ and Ⓒ and install the lever (mode).

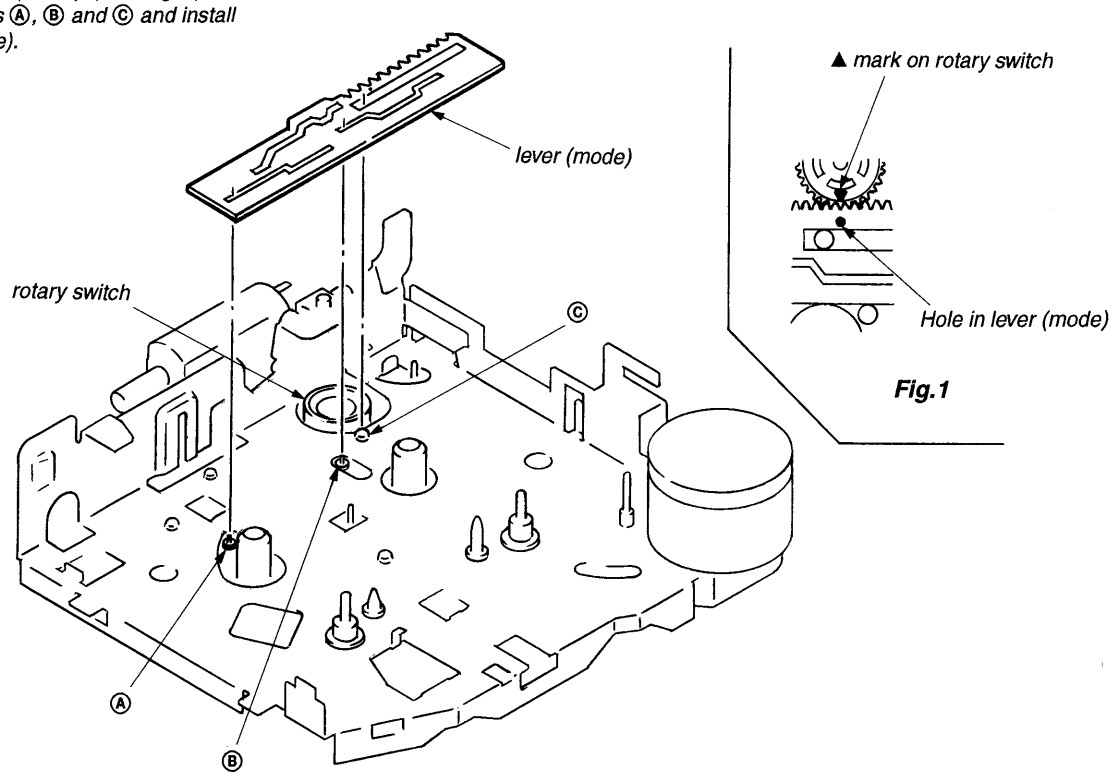

Fig.1

4-5. LEVER (PINCH SELECTION)

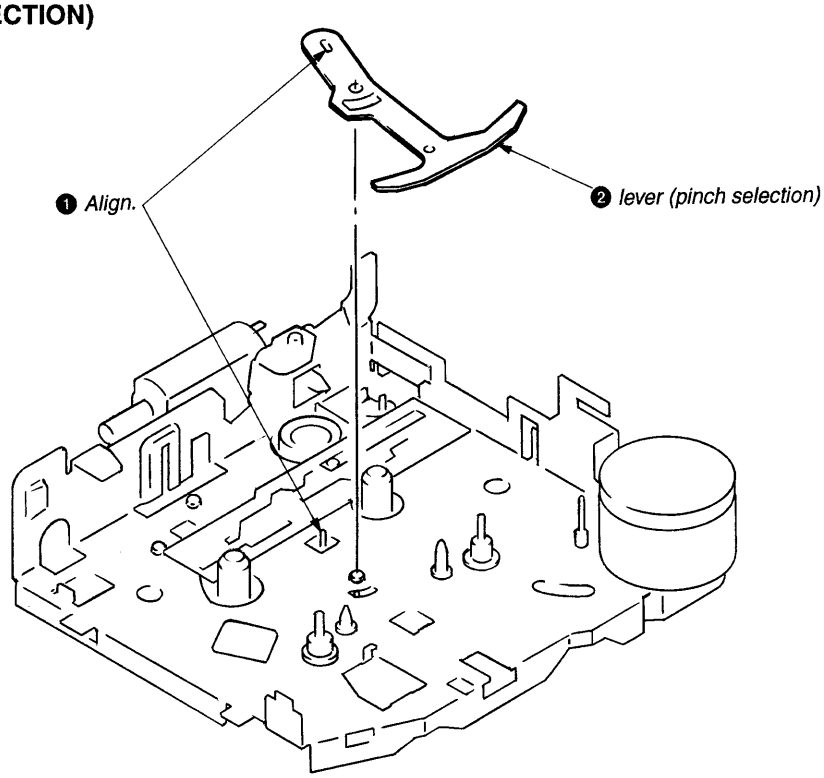

4-6. HEAD PLATE ASSY

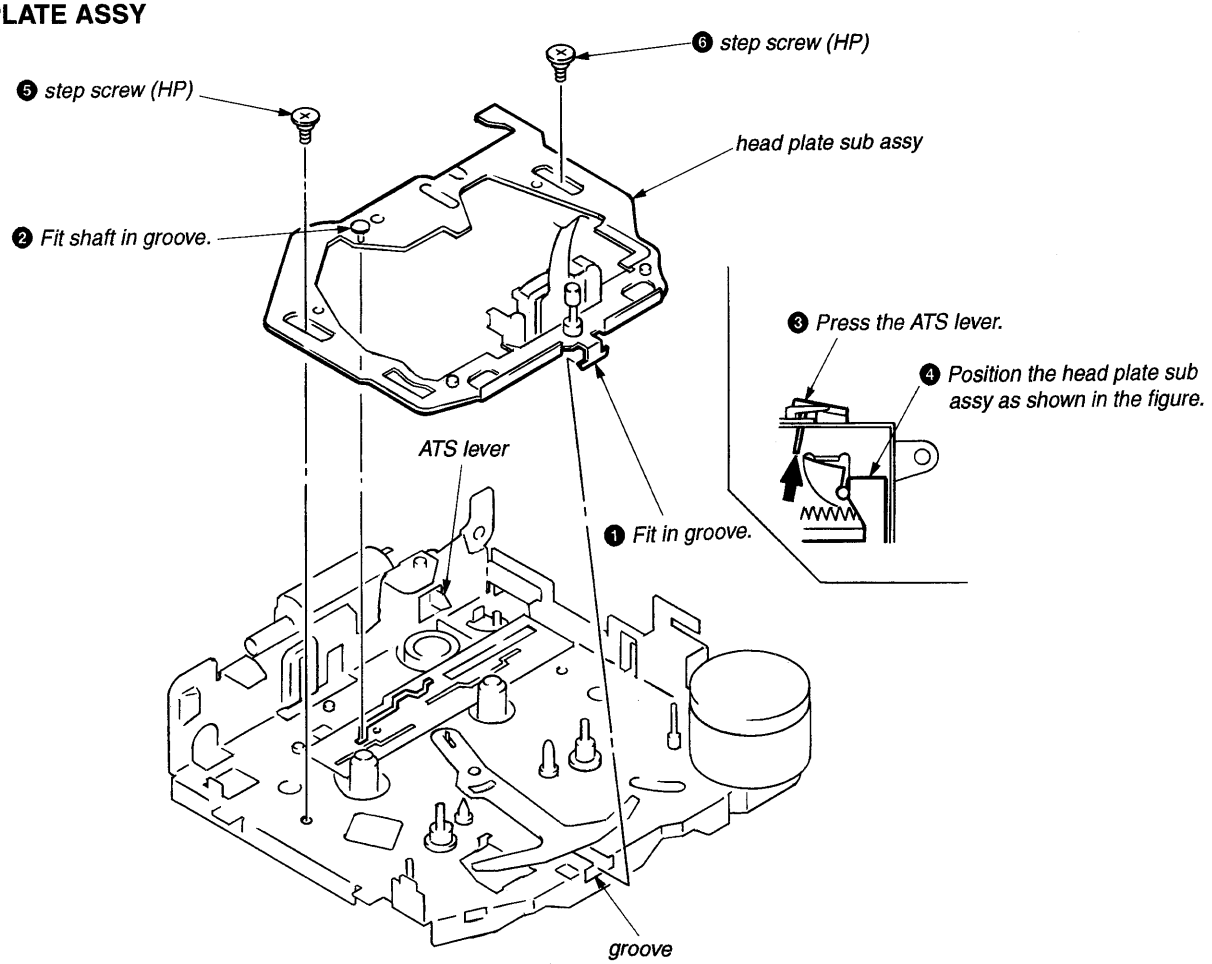
❻ step screw (HP)
❺ step screw (HP)
head plate sub assy
❷ Fit shaft in groove.
❸ Press the ATS lever.
❹ Position the head plate sub assy as shown in the figure.
ATS lever
❶ Fit in groove.
groove

4-7. LEVER (PINCH) ASSY

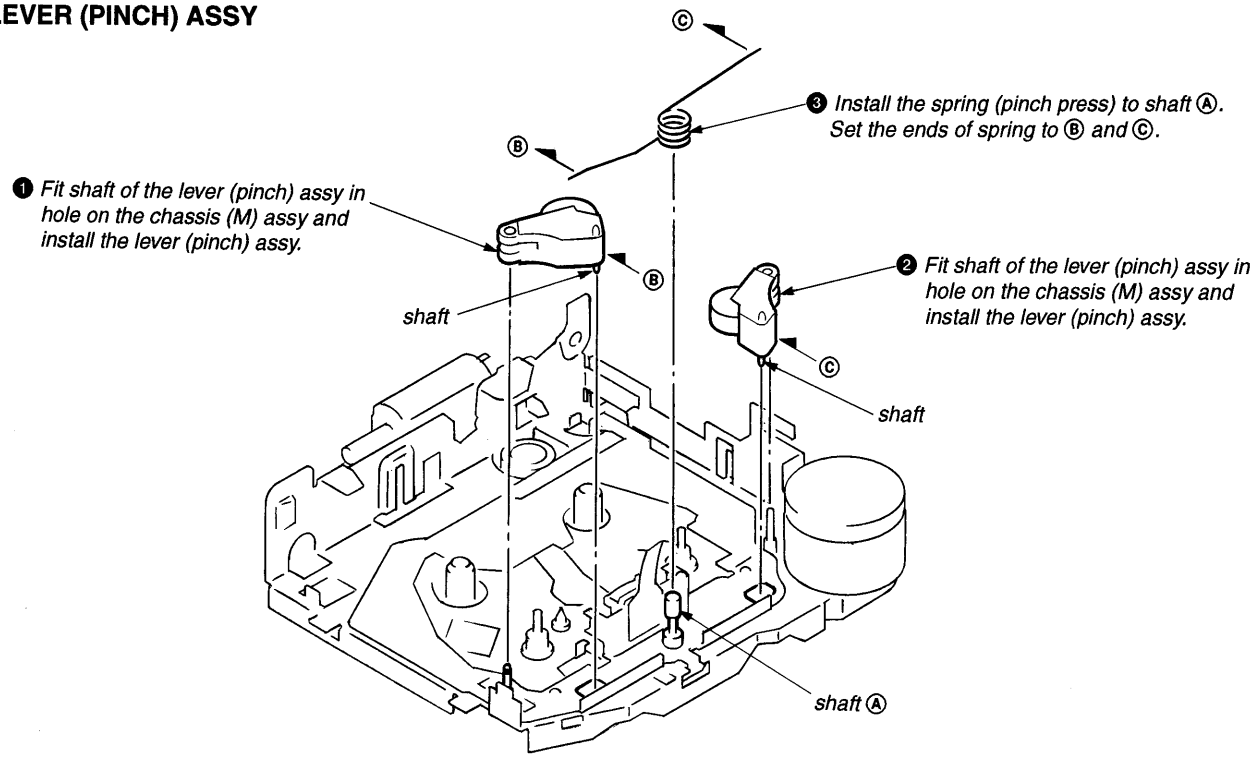
Ⓒ
❸ Install the spring (pinch press) to shaft Ⓐ. Set the ends of spring to Ⓑ and Ⓒ.
Ⓑ
❶ Fit shaft of the lever (pinch) assy in hole on the chassis (M) assy and install the lever (pinch) assy.
Ⓑ
shaft
❷ Fit shaft of the lever (pinch) assy in hole on the chassis (M) assy and install the lever (pinch) assy.
Ⓒ
shaft
shaft Ⓐ

4-8. HOUSING

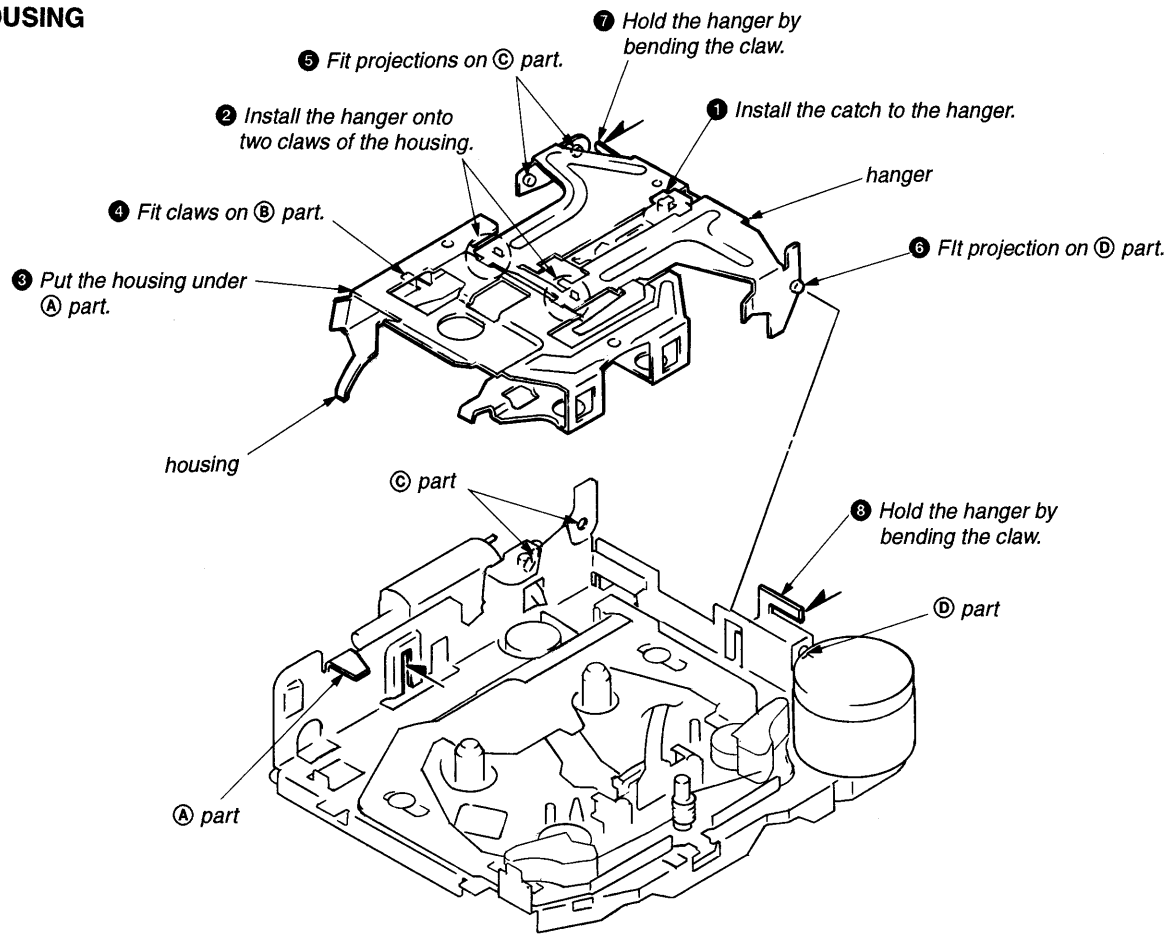
❼ Hold the hanger by bending the claw.
❺ Fit projections on Ⓒ part.
❷ Install the hanger onto two claws of the housing.
❶ Install the catch to the hanger.
hanger
❹ Fit claws on Ⓑ part.
❻ FIt projection on Ⓓ part.
❸ Put the housing under Ⓐ part.
housing
Ⓒ part
❽ Hold the hanger by bending the claw.
Ⓓ part
Ⓐ part

4-9. ARM (SUCTION)

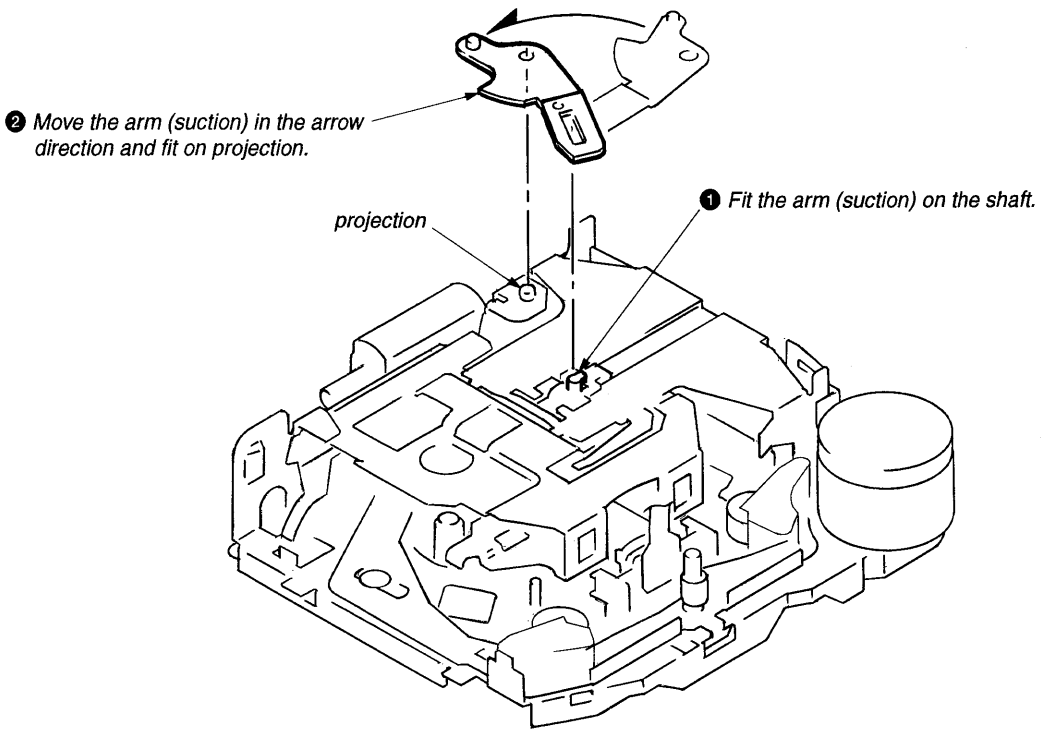

4-10. LEVER (LDG-B)

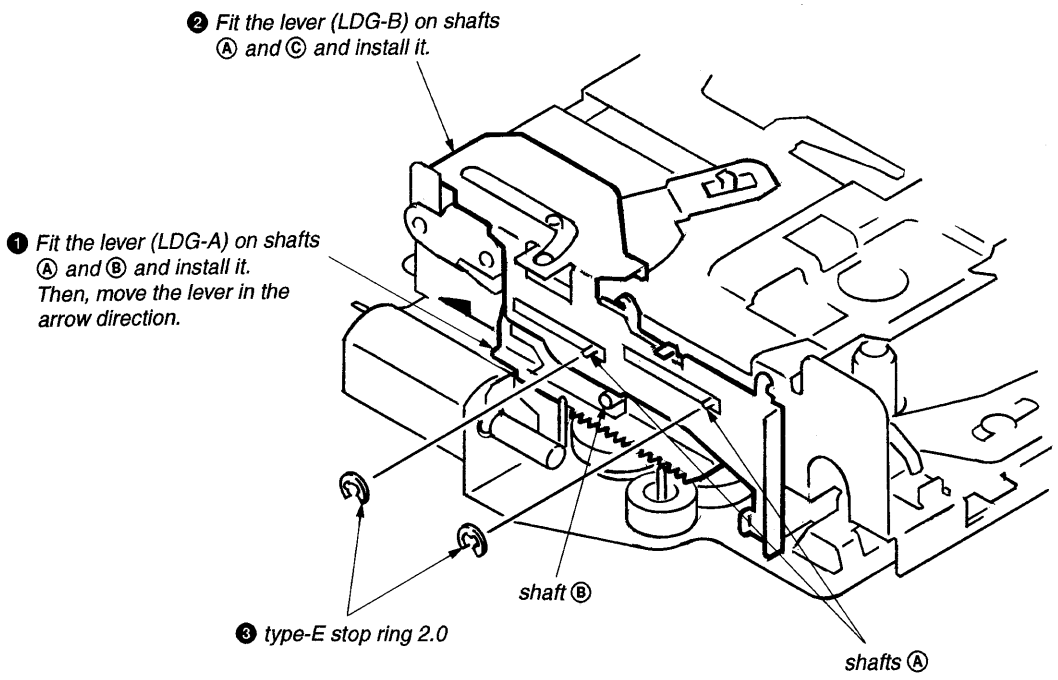
❷ Fit the lever (LDG-B) on shafts Ⓐ and Ⓒ and install it.
❶ Fit the lever (LDG-A) on shafts Ⓐ and Ⓑ and install it. Then, move the lever in the arrow direction.
shaft Ⓑ
❸ type-E stop ring 2.0
shafts Ⓐ

4-11. GEAR (LDG-FT)

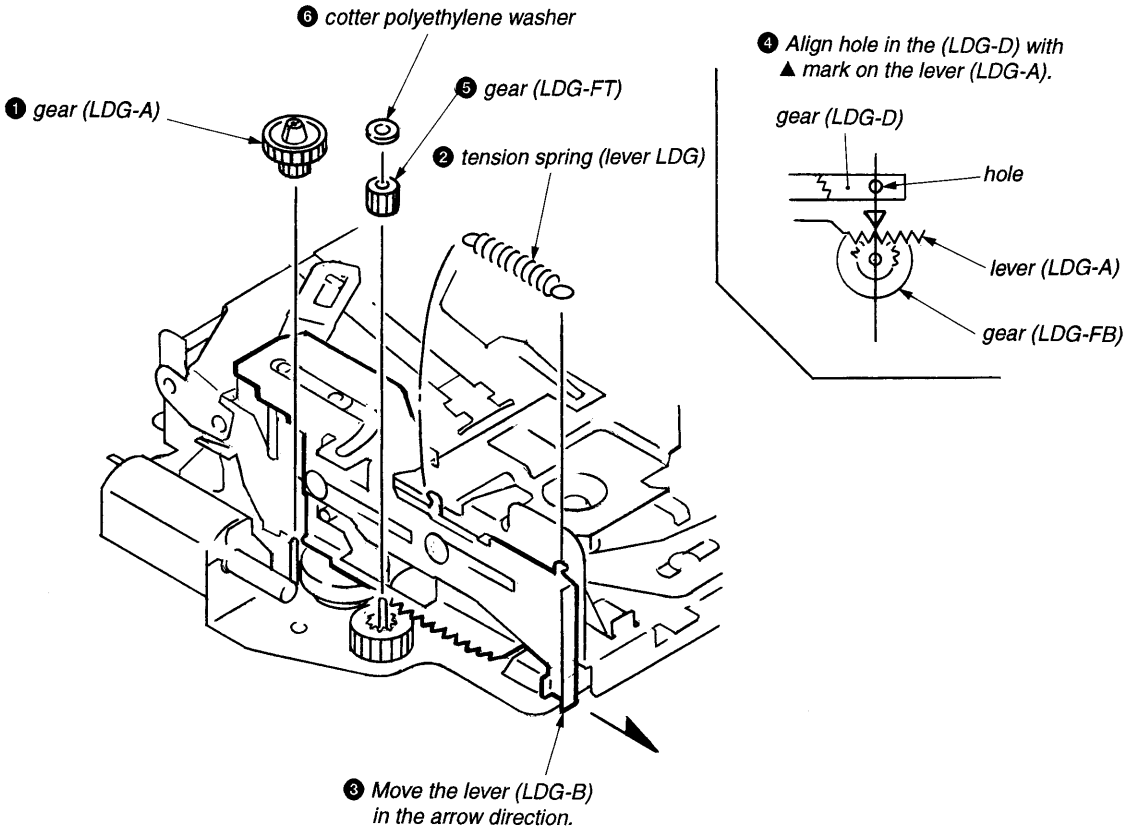
❻ cotter polyethylene washer
❶ gear (LDG-A)
❺ gear (LDG-FT)
❷ tension spring (lever LDG)
❸ Move the lever (LDG-B) in the arrow direction.
❹ Align hole in the (LDG-D) with ▲ mark on the lever (LDG-A).
gear (LDG-D)
hole
lever (LDG-A)
gear (LDG-FB)

4-12. GUIDE (C)

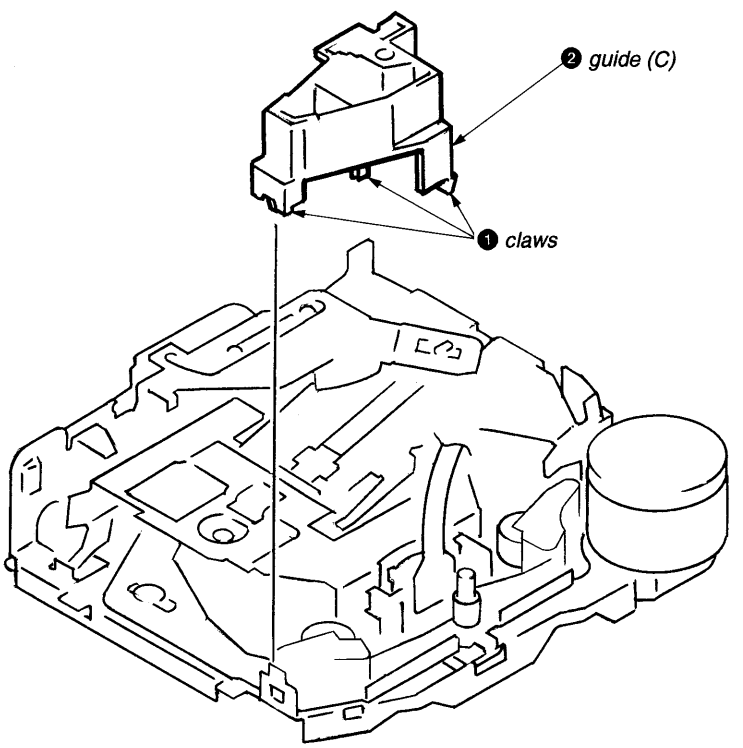

5. EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
  Example :
  KNOB, BALANCE (WHITE) ... (RED)
  ↑ ↑
  Parts Color Cabinet's Color
- Abbreviation
  G : German model

5-1. CHASSIS SECTION

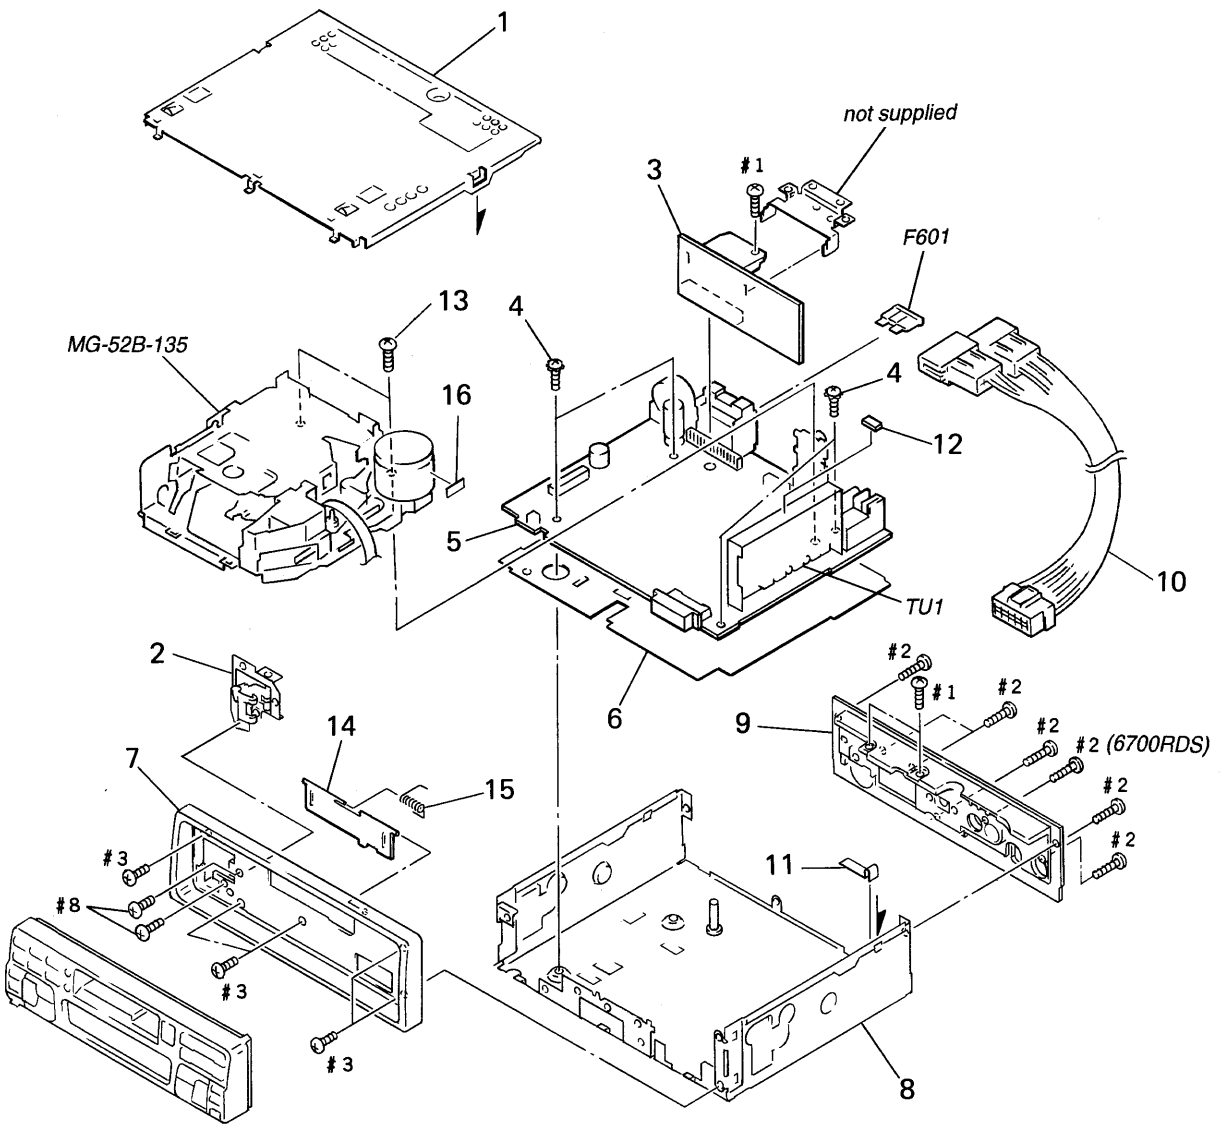

Ref. No.	Part No.	Description	Remark
* 1	X-3372-012-1	COVER ASSY	
2	X-3367-636-1	LOCK ASSY	
* 3	A-3309-222-A	AMPLIFIER BOARD, COMPLETE (6700RDS)	
* 3	A-3309-232-A	AMPLIFIER BOARD, COMPLETE (6600RDS)	
4	3-915-923-01	SCREW, GROUND POINT	
* 5	A-3309-220-A	MAIN BOARD, COMPLETE (6700RDS:G)	
* 5	A-3309-221-A	MAIN BOARD, COMPLETE (6700RDS:AEP,UK)	
* 5	A-3309-244-A	MAIN BOARD, COMPLETE (6600RDS:AEP,UK)	
* 5	A-3309-245-A	MAIN BOARD, COMPLETE (6600RDS:G)	
* 6	3-935-012-01	SHEET, INSULATING	
7	3-932-053-01	PANEL, SUB	
* 8	X-3372-011-1	CHASSIS ASSY	
* 9	3-935-049-11	HEAT SINK (6700RDS)	
* 9	3-935-049-31	HEAT SINK (6600RDS)	

Ref. No.	Part No.	Description	Remark
10	1-776-527-11	CORD (WITH CONNECTOR) (ISO) (6700RDS)	
10	1-776-527-31	CORD (WITH CONNECTOR) (ISO) (6600RDS)	
11	3-937-650-01	PLATE (C), GROUND	
12	9-911-840-XX	CUSHION (U)	
13	3-919-171-01	SCREW (2.6X6) (C TIGHT)	
14	3-932-205-11	DOOR, CASSETTE (6700RDS)	
14	3-932-205-21	DOOR, CASSETTE (6600RDS)	
15	3-935-003-01	SPRING, TORSION	
* 16	3-935-350-01	INSULATOR (MD)	
F601	1-533-331-11	FUSE (BLADE TYPE) (AUTO FUSE) 15A	
TU1	A-3282-012-A	TUNER UNIT (TUX-006 (E))	

5-2. FRONT PANEL SECTION

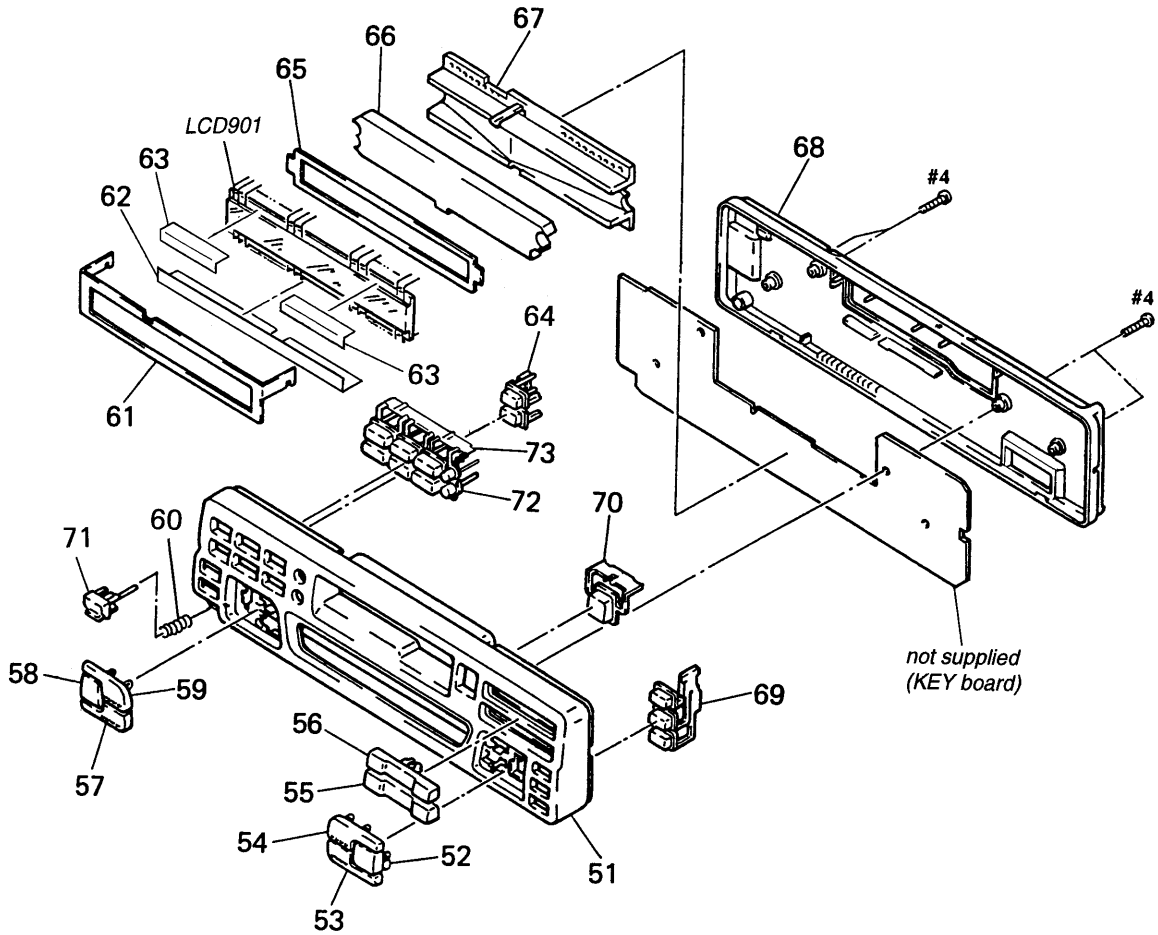

Ref. No.	Part No.	Description	Remark
51	3-932-052-51	PANEL, FRONT (6700RDS)	
51	3-935-121-01	PANEL, FRONT (6600RDS)	
52	3-921-916-11	BUTTON (CD.TAPE)	
53	3-921-909-31	BUTTON (AM)	
54	3-921-915-11	BUTTON (FM)	
55	3-921-652-21	BUTTON (PRESET)	
56	3-921-651-01	BUTTON (SEEK)	
57	3-921-911-01	BUTTON (-)	
58	3-921-902-01	BUTTON (SEL)	
59	3-921-910-01	BUTTON (+)	
60	3-935-119-01	SPRING (RELEASE)	
* 61	3-935-986-01	PLATE (LCD), GROUND	
* 62	3-935-010-01	SHEET (LCD) (L)	
* 63	3-935-011-01	SHEET (LCD) (S)	

Ref. No.	Part No.	Description	Remark
64	3-921-903-01	BUTTON (2 GANG)	
* 65	3-935-363-11	SHEET (REFLECTOR)	
* 66	3-933-321-01	PLATE, LIGHT GUIDE	
* 67	3-933-322-01	HOLDER (LCD)	
68	3-933-320-01	PANEL, FRONT BACK	
69	3-921-898-21	BUTTON (3 GANG)	
70	3-921-653-01	BUTTON (EJECT)	
71	3-921-900-01	BUTTON (RELEASE)	
72	3-921-655-01	BUTTON (4-6) (6700RDS)	
72	3-921-655-21	BUTTON (4-6) (6600RDS)	
73	3-921-654-01	BUTTON (1-3) (6700RDS)	
73	3-921-654-11	BUTTON (1-3) (6600RDS)	
LCD901	1-801-160-11	DISPLAY PANEL, LIQUID CRYSTAL	

5-3. MECHANISM DECK SECTION 1
(MG-52B-135)

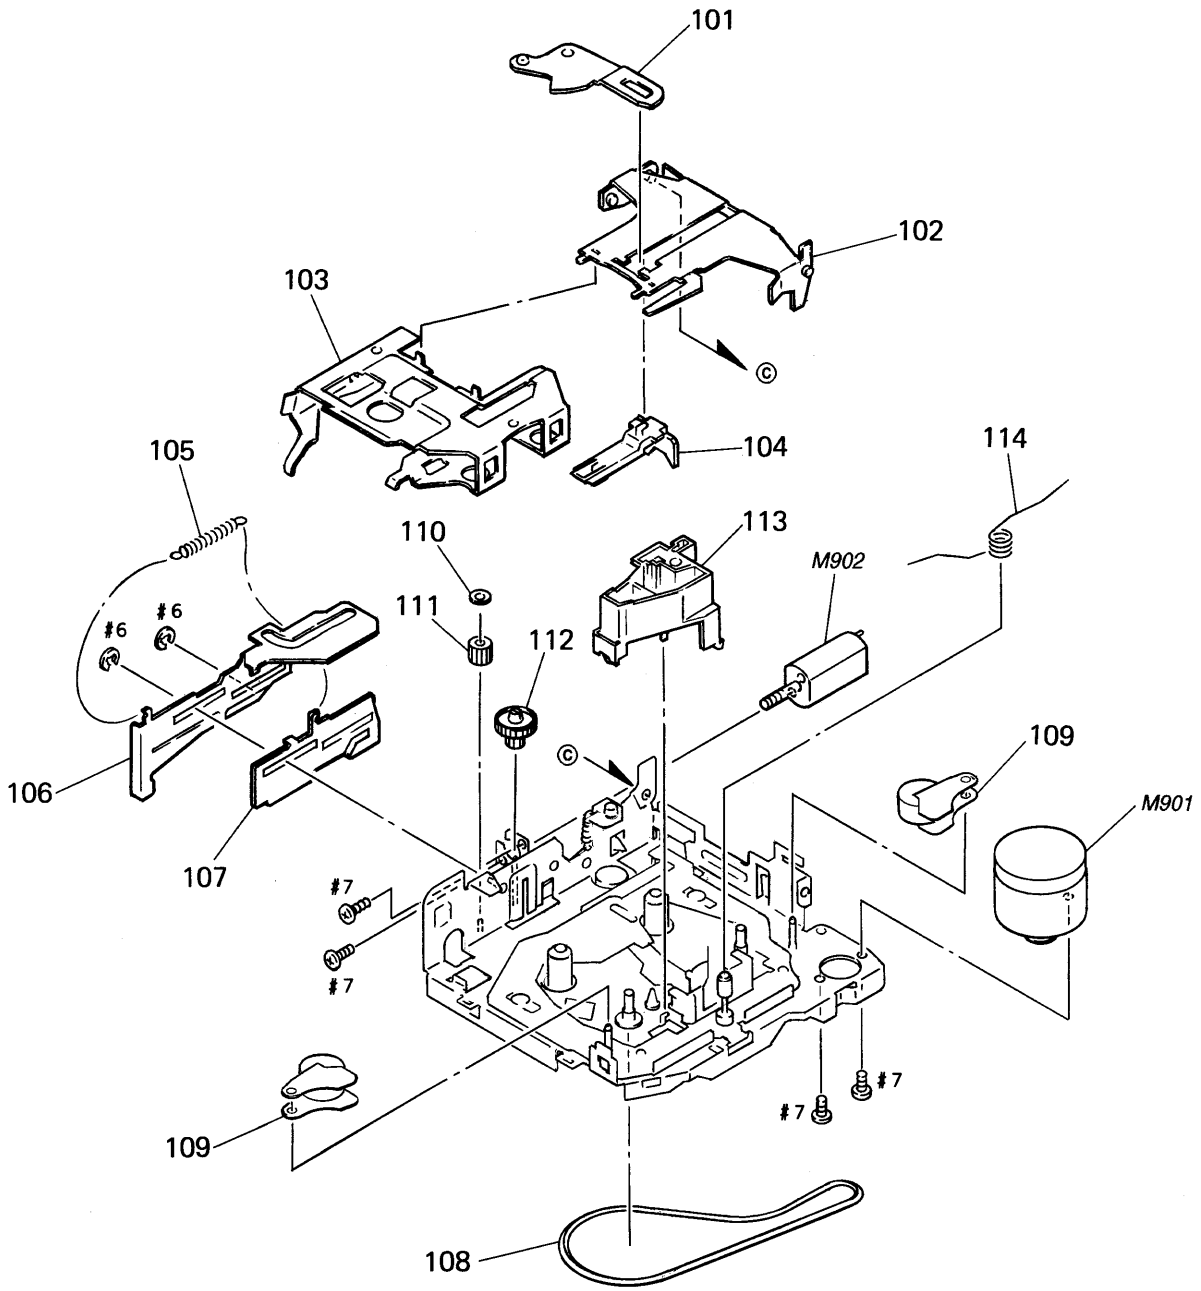

Ref. No.	Part No.	Description	Remark
* 101	3-933-347-01	ARM (SUCTION)	
102	3-933-340-01	HANGER	
103	3-928-671-01	HOUSING	
104	3-933-346-01	CATCHER	
105	3-933-341-01	SPRING (LEVER LDG), TENSION	
106	3-928-674-01	LEVER (LDG-B)	
* 107	3-928-673-01	LEVER (LDG-A)	
108	3-928-675-01	BELT (52)	

Ref. No.	Part No.	Description	Remark
109	X-3371-713-2	LEVER (PINCH) ASSY	
110	3-341-753-11	WASHER, POLYETHYLENE	
111	3-933-335-01	GEAR (LDG-FT)	
112	3-928-667-01	GEAR (LDG-A)	
113	3-933-344-01	GUIDE (C)	
114	3-928-670-01	SPRING (PINCH PRESS)	
M901	A-3291-665-A	MOTOR ASSY, MAIN (CAPSTAN/REEL)	
M902	A-3291-664-A	MOTOR ASSY, SUB (LOADING/TAPE OPERATION)	

5-4. MECHANISM DECK SECTION 2
(MG-52B-135)

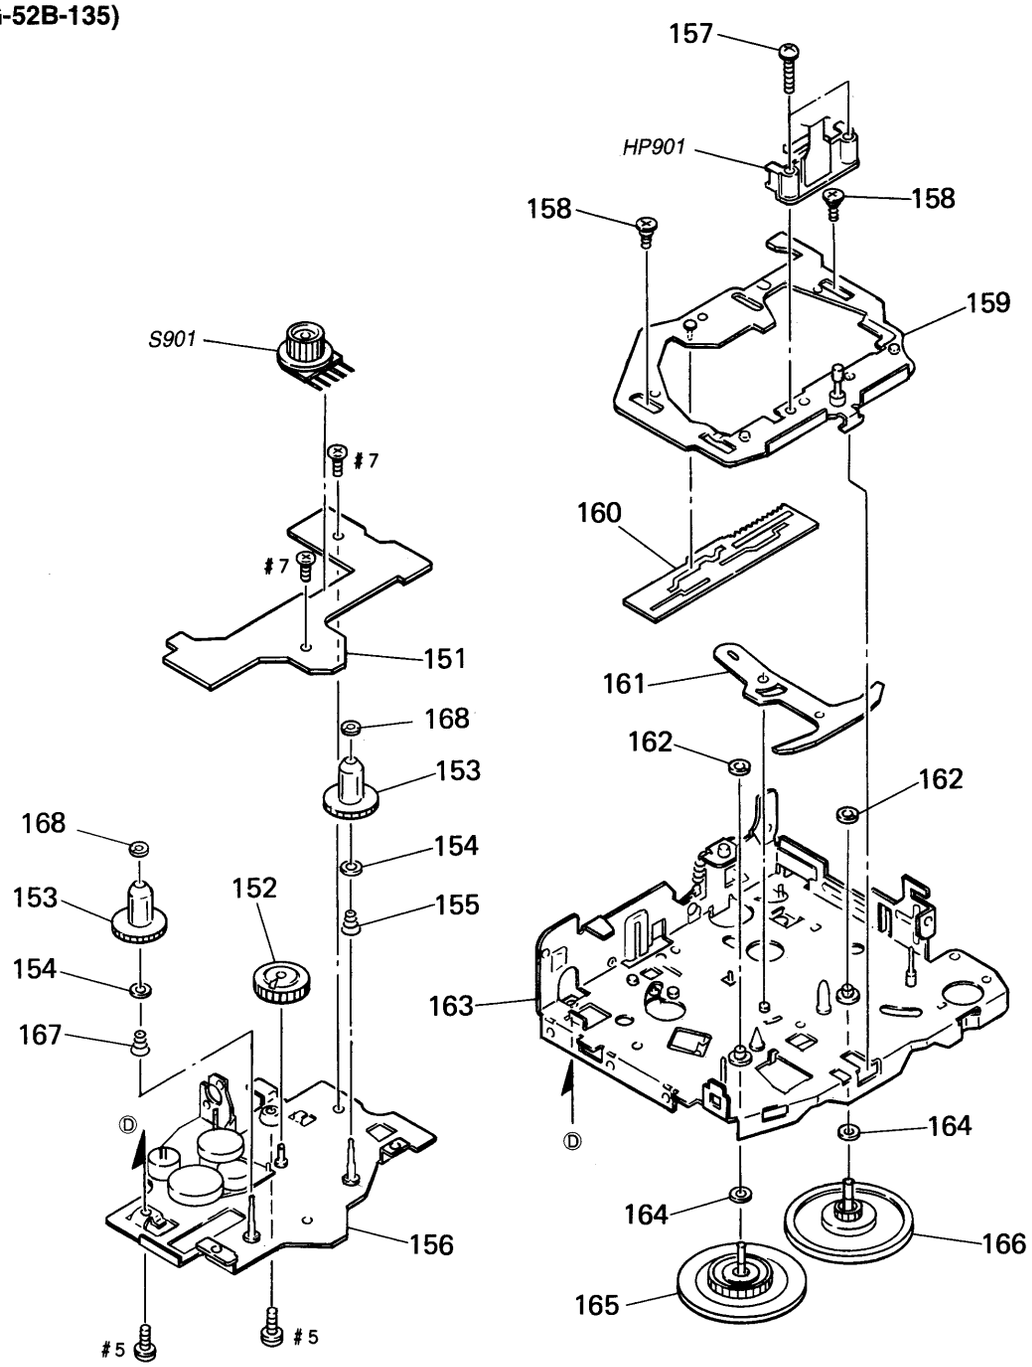

Ref. No.	Part No.	Description	Remark
151	1-660-169-11	REEL SENSOR BOARD	
152	3-933-333-01	GEAR (LDG-E)	
153	3-933-345-01	GEAR, REEL	
154	3-701-437-01	POLY-SLIDER (A)	
155	3-933-339-01	SPRING (B-T-F), CONE COIL	
156	X-3371-710-1	CHASSIS (S) ASSY	
157	3-927-100-01	SCREW (+PS 2X10), SPECIAL	
158	3-933-338-01	SCREW (HP), STEP	
* 159	X-3371-712-1	PLATE SUB ASSY, HEAD	
160	3-928-668-01	LEVER (MODE)	

Ref. No.	Part No.	Description	Remark
161	3-928-669-01	LEVER (PINCH SELECTION)	
162	3-364-151-01	WASHER	
* 163	X-3371-705-1	CHASSIS (M) ASSY (B)	
164	3-701-437-21	WASHER	
165	A-3291-667-A	CLUTCH (FR) ASSY	
166	3-930-932-01	FLYWHEEL (F) (SEF)	
167	3-933-337-01	SPRING (B-T-R), CONE COIL	
168	3-954-807-01	WASHER	
HP901	1-500-157-21	HEAD, MAGNETIC (PLAYBACK)	
S901	1-692-885-11	SWITCH, ROTARY SLIDE (TAPE OPERATION)	

9-923-475-82

Sony Corporation
Personal & Mobile Communication Company

97A047548-1
Printed in Germany ©1997. 1
Published by Quality Assurance Dept.